




# HP 15-ac142dx CD Drive Replacement

Successfully demonstrates, in detail, how to replace the CD ROM.

Written By: Nicole Mathieu

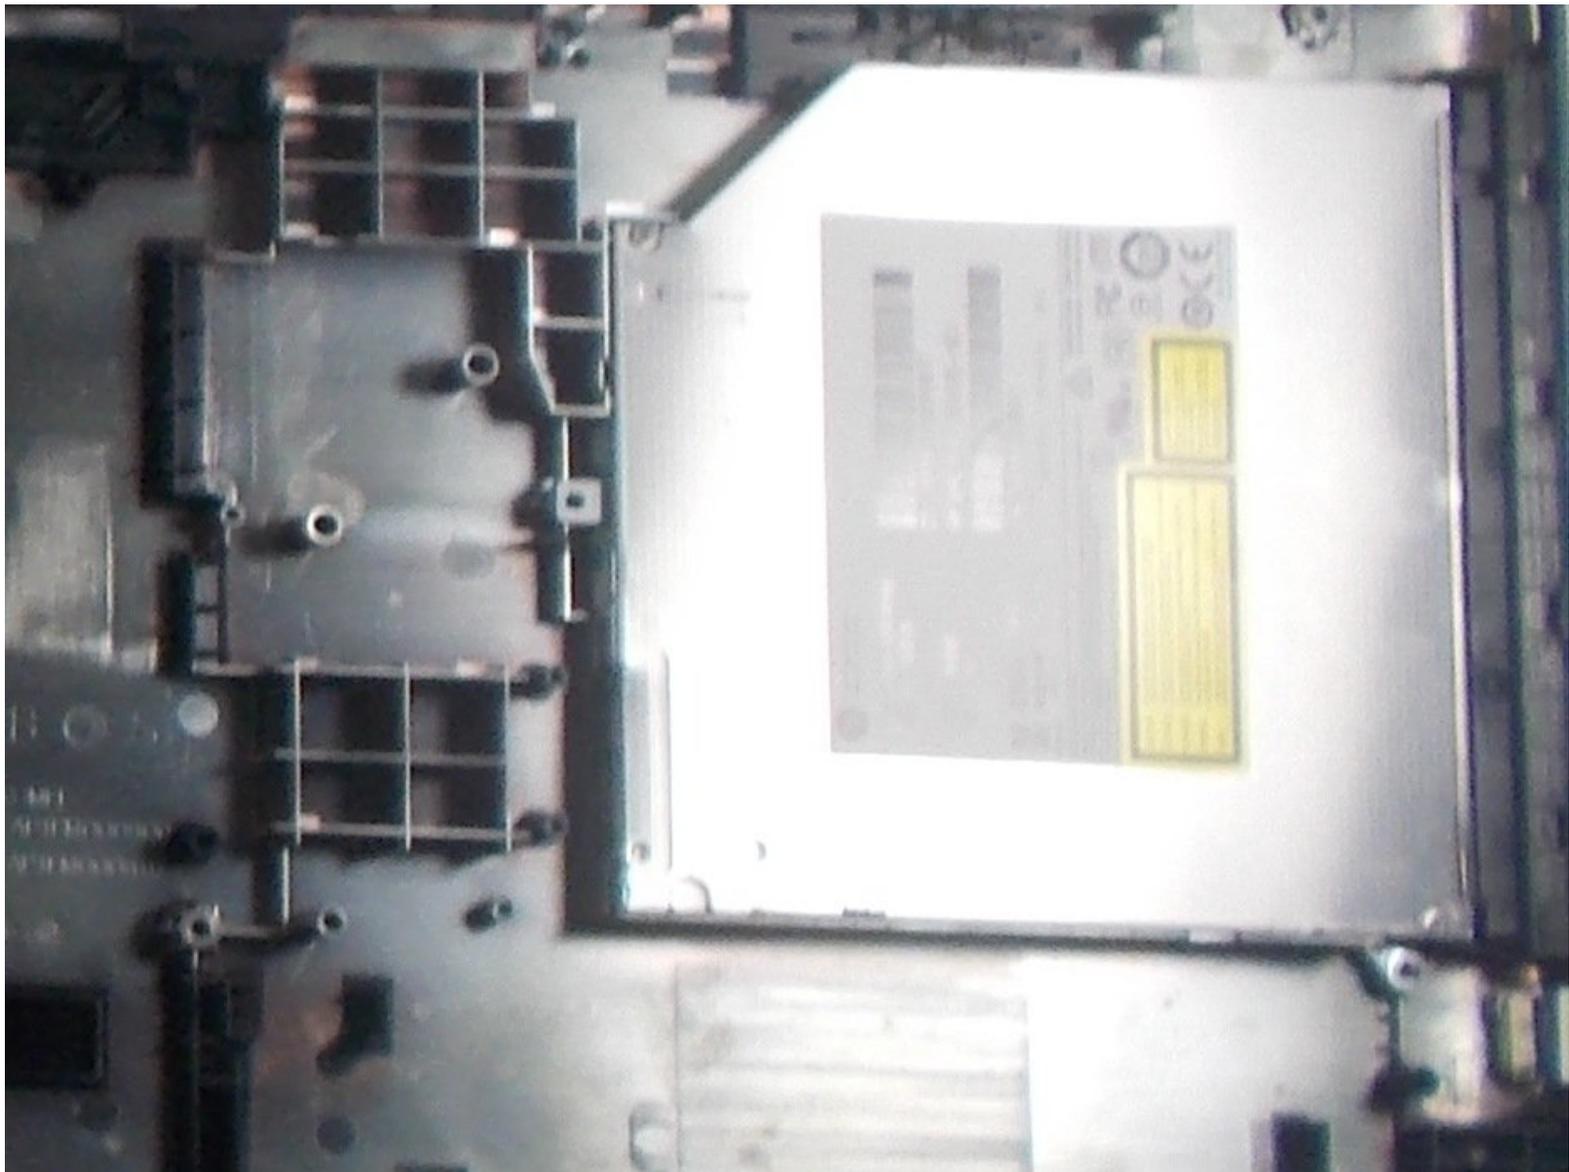

## **TOOLS:**


- [Essential Electronics Toolkit \(1\)](#)
-

## Step 1 — CD Drive



- Turn off the computer and flip it over onto a flat surface.
- Remove battery by sliding the battery lock.
- Remove the 10 screws

## Step 2

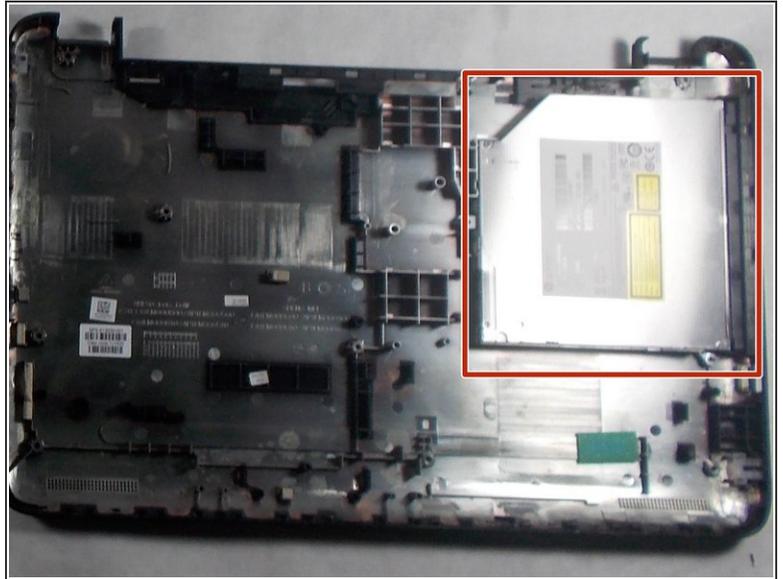

- Flip the computer back over and use the iFixit tool in order to pry the keyboard from the bottom of the computer.
  - Once off you will be able to see the CD ROM.
  - Slide the CD Drive out of the device.
- i** It will be located on the bottom half of the computer.

To reassemble your device, follow these instructions in reverse order.