




# Dell Inspiron 5379 Memory Modules Replacement

Written By: Terrence15

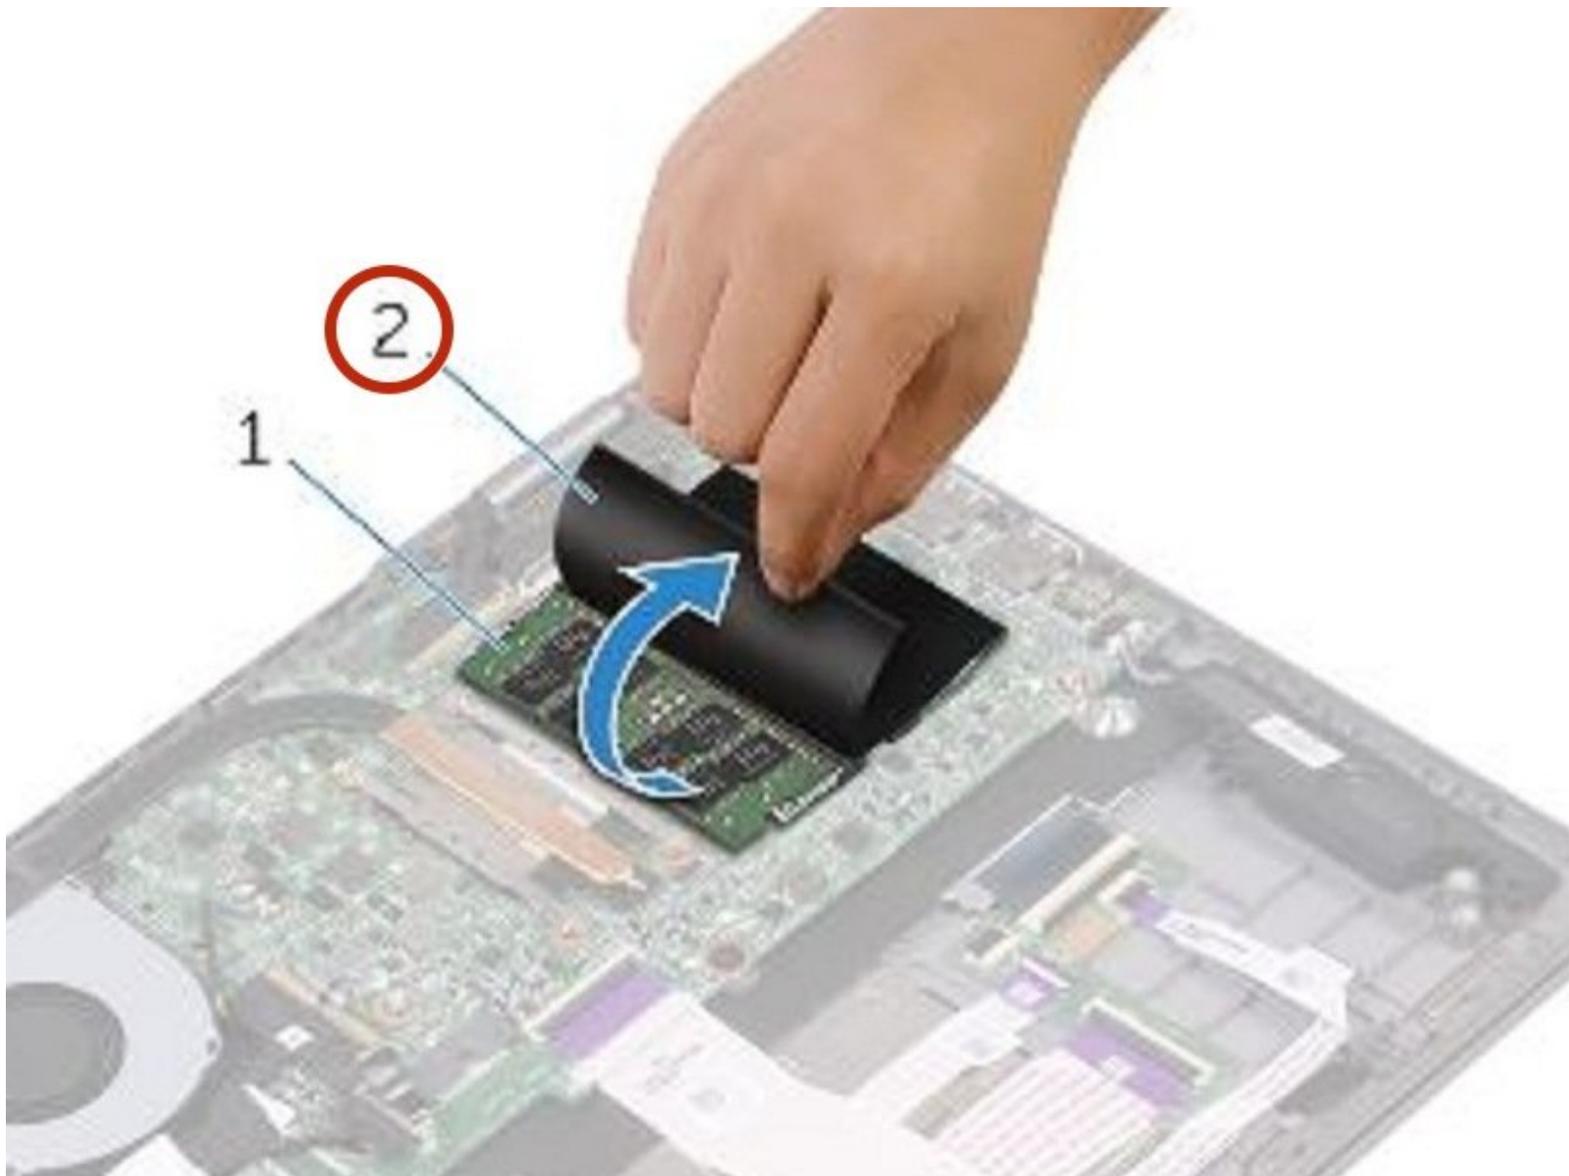

---

## INTRODUCTION


In this guide, we will show you how to remove and replace the Memory Modules.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Lifting the Mylar

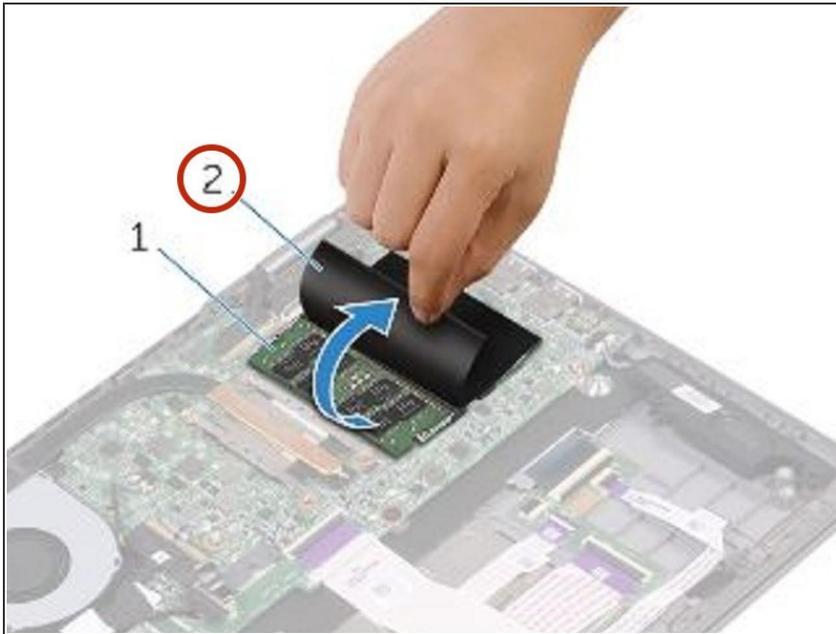

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Lift the Mylar to access the memory module.

## Step 2 — Popping up the Memory Module

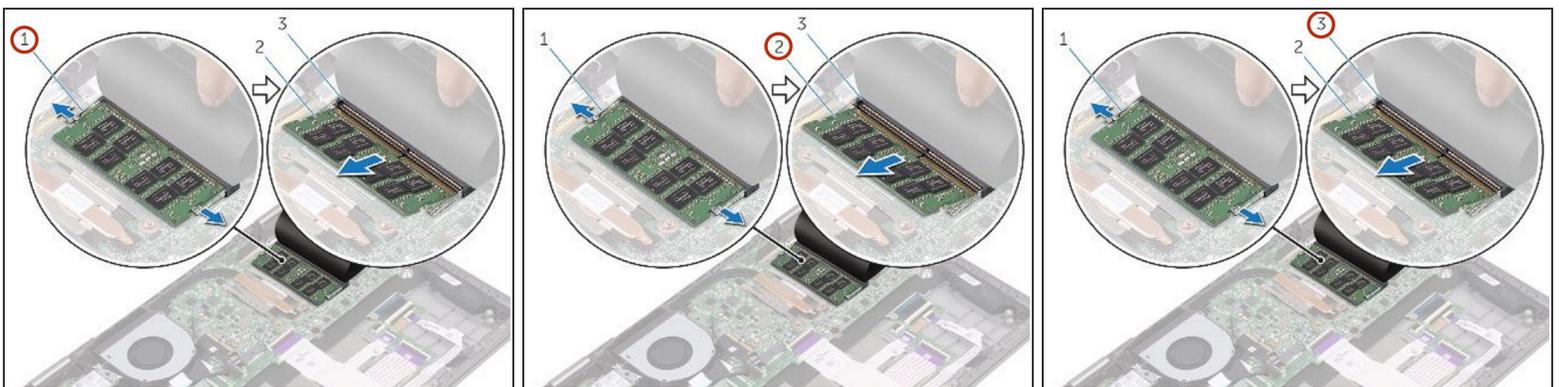


- Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

### Step 3 — Lifting the Mylar

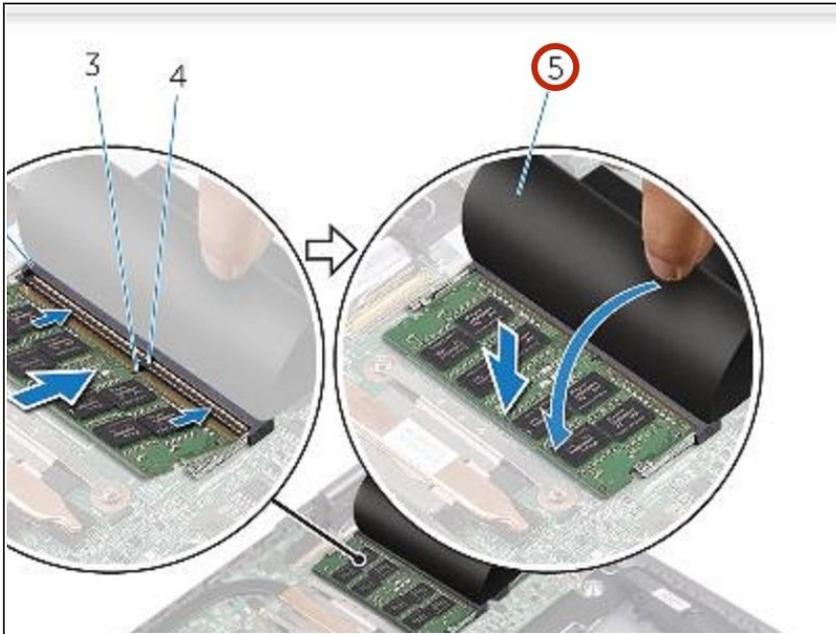


- Lift the Mylar to access the memory-module slot.

### Step 4 — Align the Notch

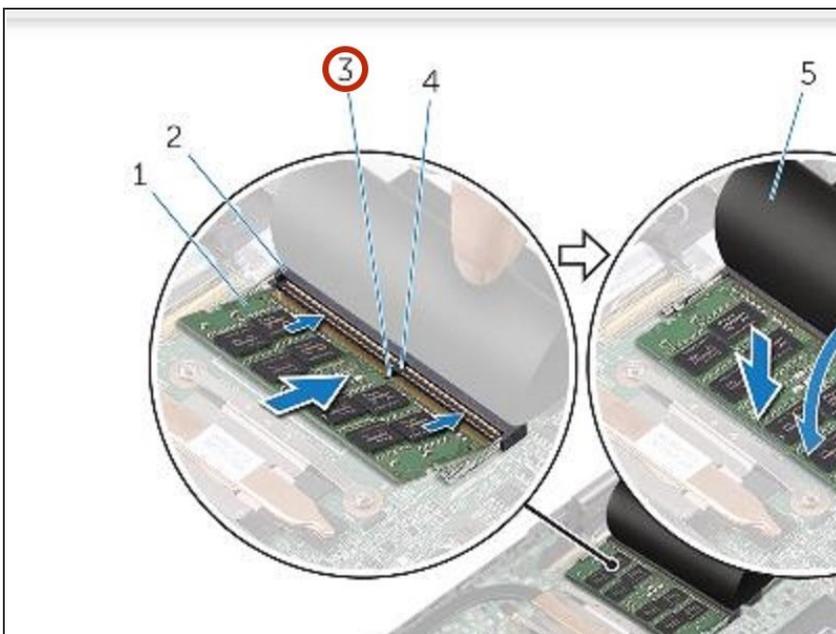

- Align the notch on the memory module with the tab on the memory-module slot.

## Step 5 — Sliding the Memory Module

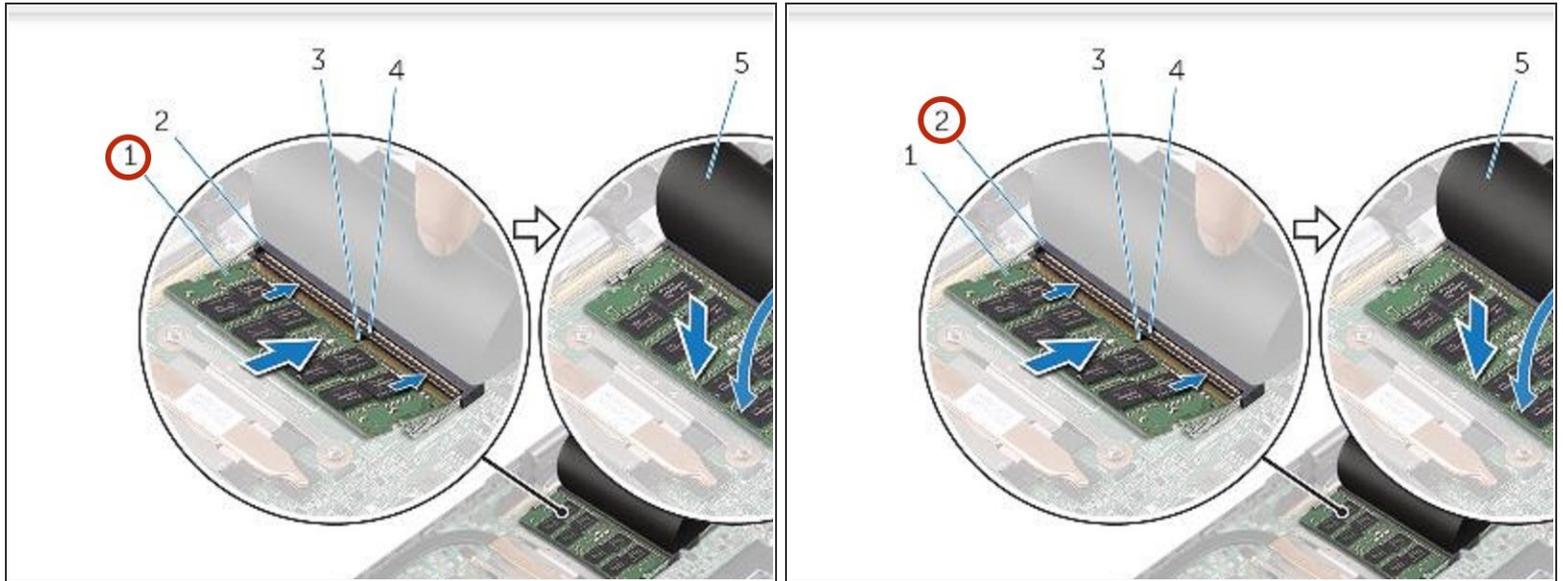

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

**i** NOTE: If you do not hear the click, remove the memory module and reinstall it.