



Dell Inspiron 13-7353 Screen Replacement

If you notice the screen of your Dell Inspiron...

Written By: Stephany Marin Restrepo



INTRODUCTION


If you notice the screen of your Dell Inspiron 13-7353 laptop is damaged and needs to be replaced, this guide may help. This guide will show you how to replace the display screen in a few steps.

Before beginning the repair, turn off the laptop and unplug from the charging cord.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Flip the Computer

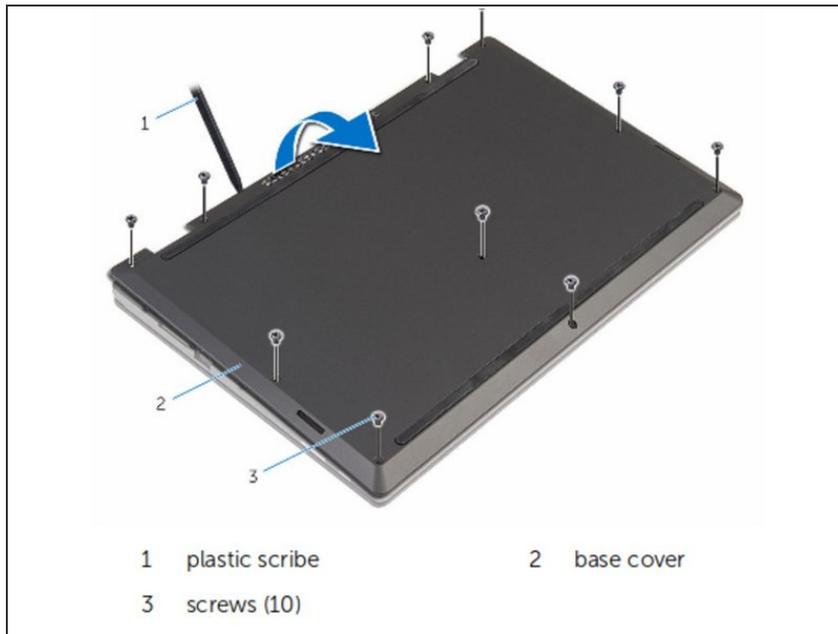

⚠ WARNING: Please read the safety information shipped with your computer and follow recommended steps before working inside your computer. When finished working inside your computer, follow the instructions included in the safety information.


- Close the computer display and turn the computer over so that the base of the computer is facing up.

Step 2 — Secure the Base

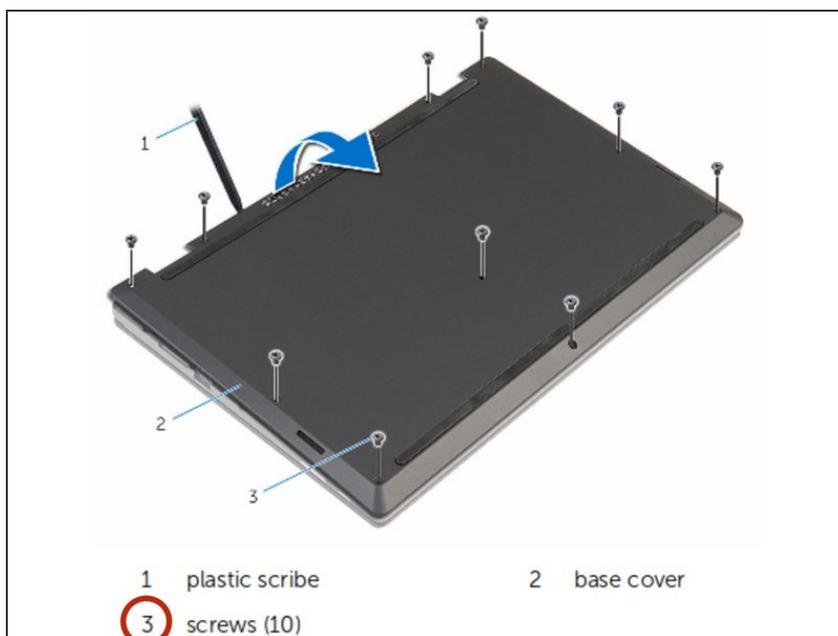



- Remove the ten screws that secure the base cover to the base of the computer.

Step 3 — Pry the Base cover

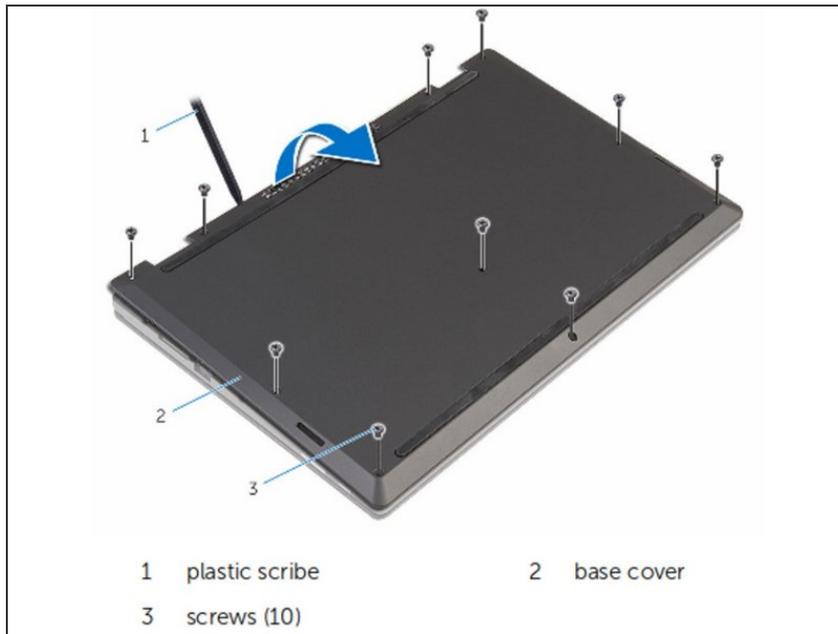

- Using a plastic scribe (plastic opening tool), pry the base cover off of the base of the computer.



Step 4 — RAM

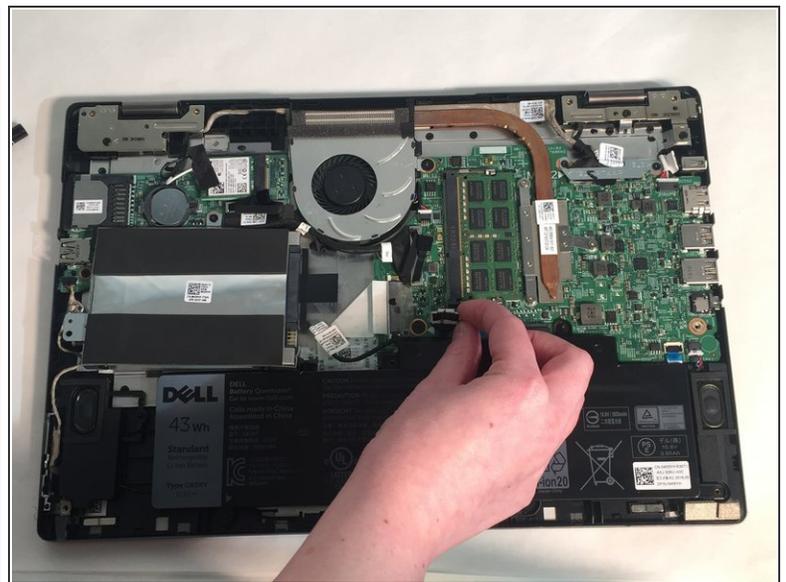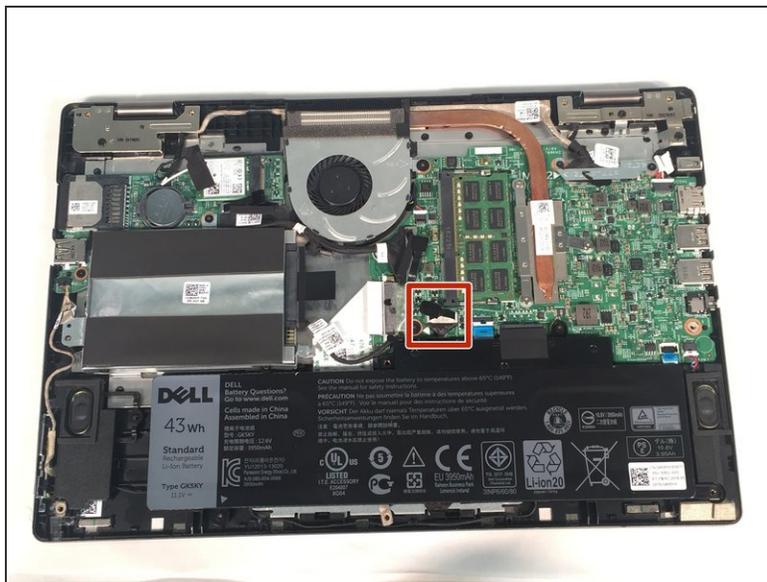

i Before opening your device, ensure that all data is backed up on a hard drive to prevent data loss.




- Loosen and then unplug the hard drive cable.

Step 5

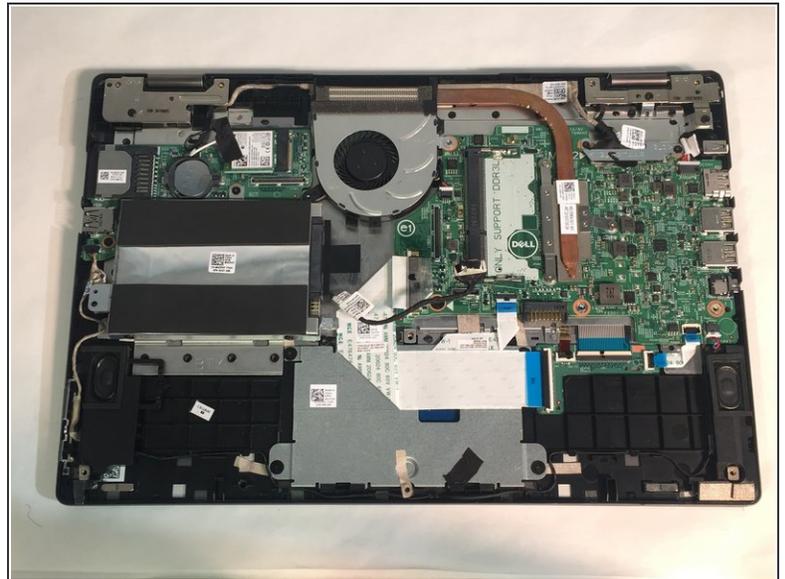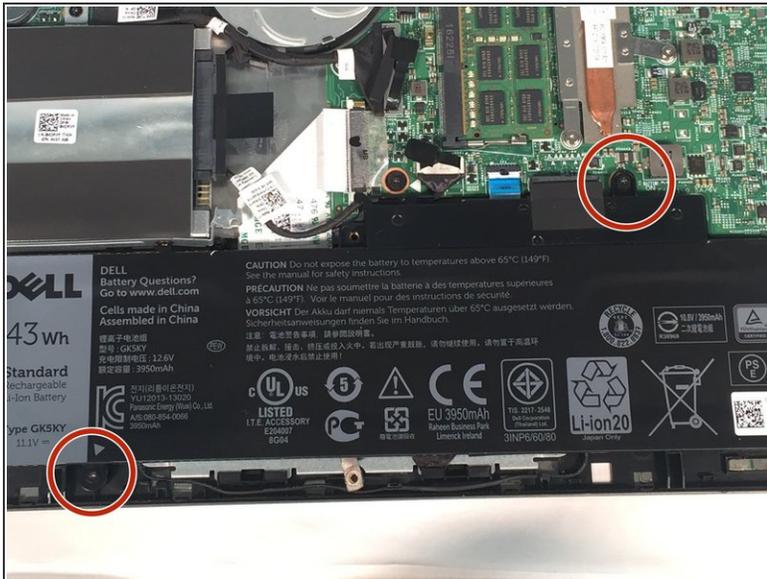

- Remove the two M2 3mm screws attaching the battery using the Phillips #1 screwdriver.
- Remove the battery.

Step 6

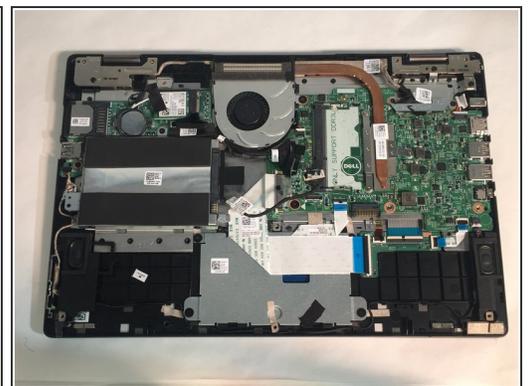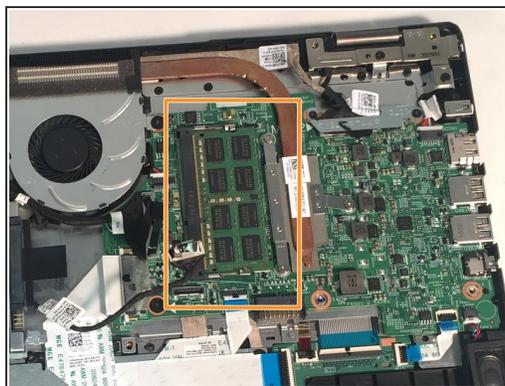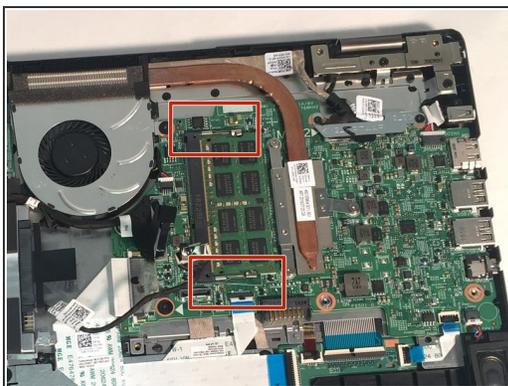


- Pry open the two clips.
- Gently lift the RAM stick and pull it out of the motherboard.

Step 7 — Fan




- Unplug the daughterboard cable in two places, then remove the daughterboard.
- Unplug the fan cable.

Step 8

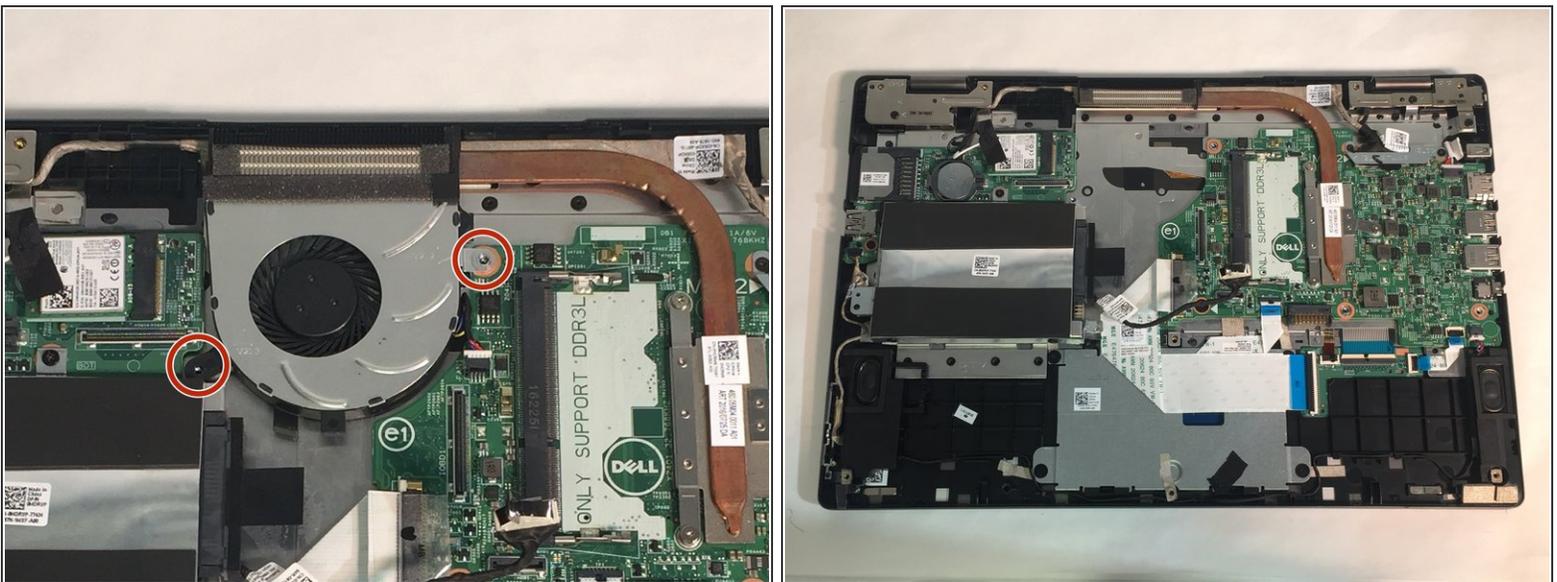


- Remove two 3mm screws from the cooling fan using the Phillips #1 screwdriver.
- Remove the cooling fan from the laptop.

Step 9 — Heat Sink

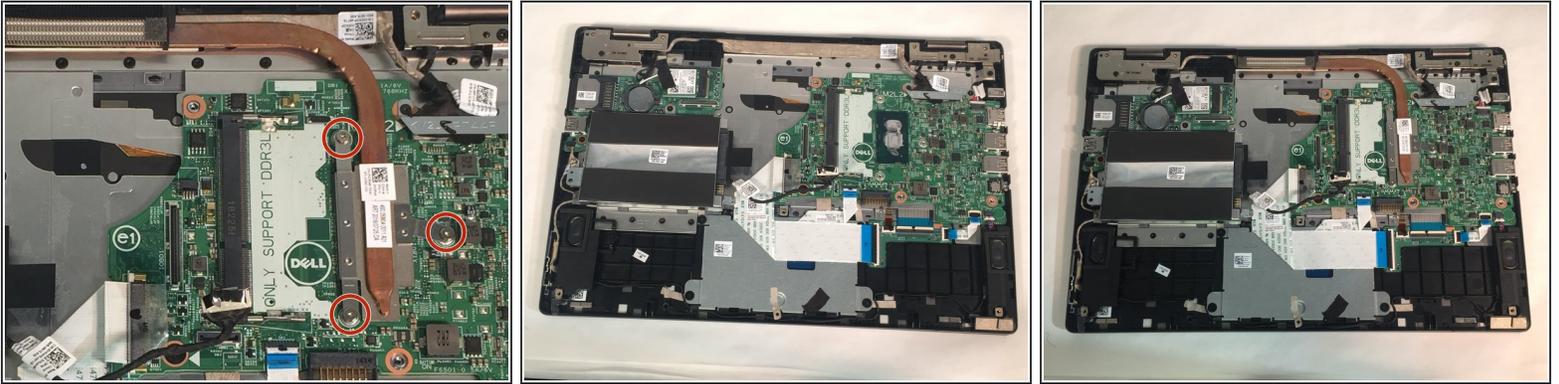

- Remove three 2mm screws from the heat sink using a Phillips #0 screwdriver.
- Remove the heat sink.

Step 10 — Screen

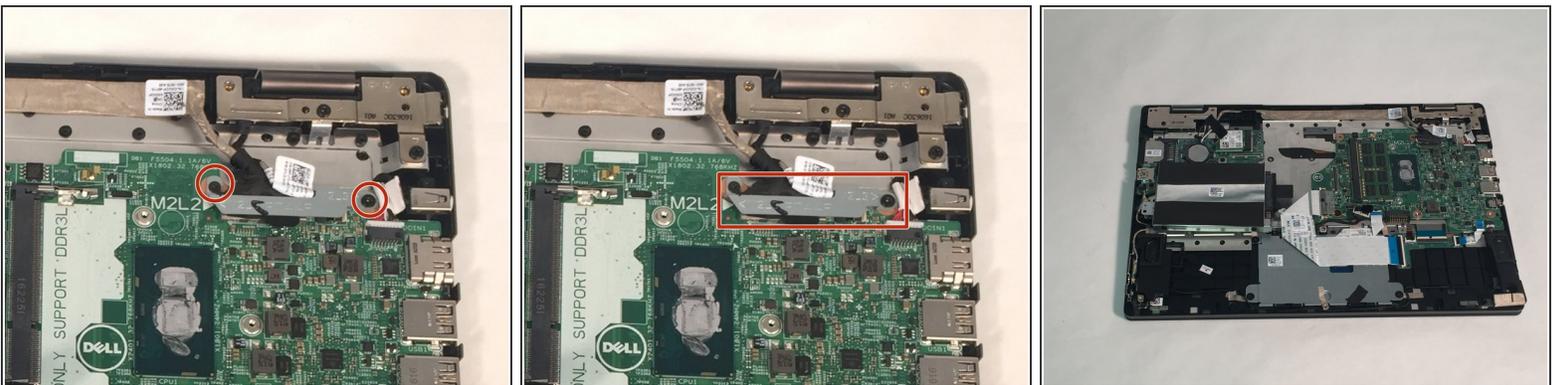

- Remove the screws from the LCD cable bracket.
- Remove the LCD cable bracket.

Step 11





- Unplug the LCD cable.
- Unplug the touchscreen cable.

Step 12




- Unscrew 2 M2.5 7mm screws, using the Phillips 1 screwdriver, on the right screen hinge.
- Unscrew 1 M2.5 7mm screw, using the Phillips 1 screwdriver, on the left screen hinge.

Step 13

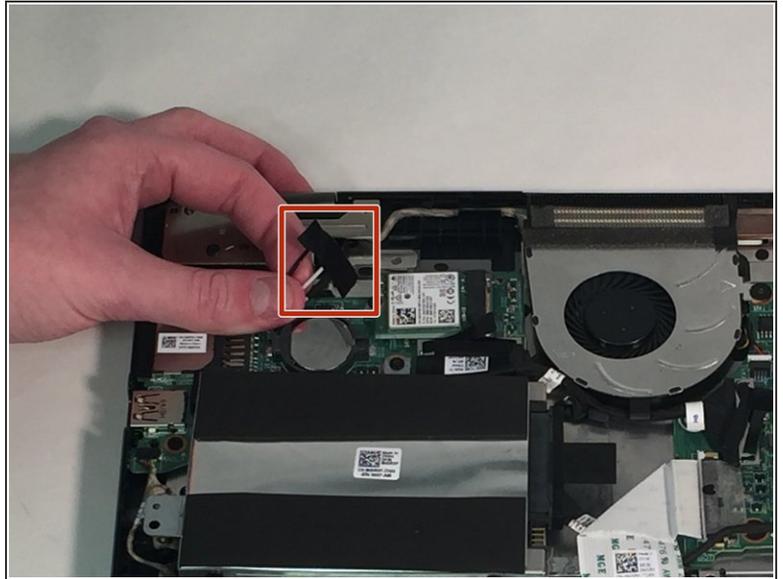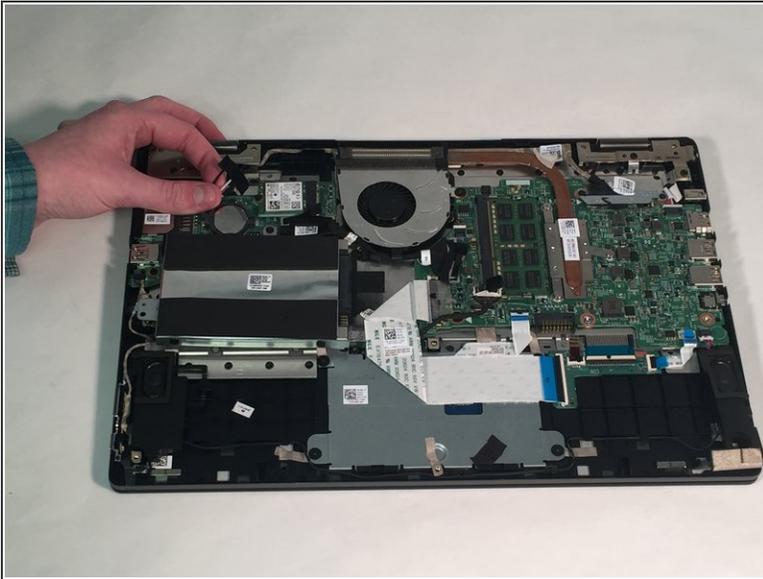

- Carefully undo the tape
- Unplug the two black and white wire leads

Step 14

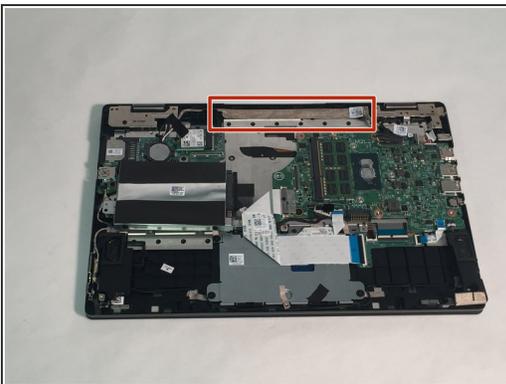

- ⓘ Carefully remove the tape that is attached to the screen by prying it off with your fingers.
- Remove the tape outlined in red.
- Adjust the screen so that the laptop is open flat against the surface.
- Remove the LCD display screen by pulling it gently away from the back.

To reassemble your device, follow these instructions in reverse order.