



Dell Inspiron N4110 RAM Replacement

This replacement guide will not take much time....

Written By: Olivia



INTRODUCTION


This replacement guide will not take much time. It requires replacement or upgraded RAM.

TOOLS:

Phillips #1 Screwdriver (1)

Step 1 — Battery



 Make sure the laptop is off and unplugged before starting this step.

- Locate the battery on the underside of the laptop.
- Push the two battery clips following the direction of the arrows.

Step 2



- Push upward from the base of the battery.

Step 3





- Pull battery away from computer until it is fully removed.

Step 4 — RAM




- Locate and unscrew the one 2.5x5 mm screw on the cover.
- ⓘ The screw does not detach from the cover. Make sure the screw is fully unscrewed before attempting to remove the cover.

Step 5

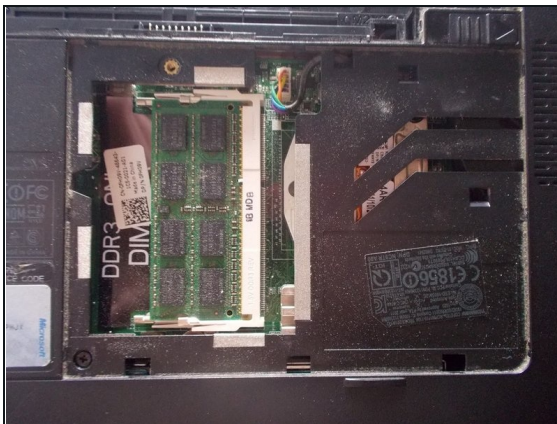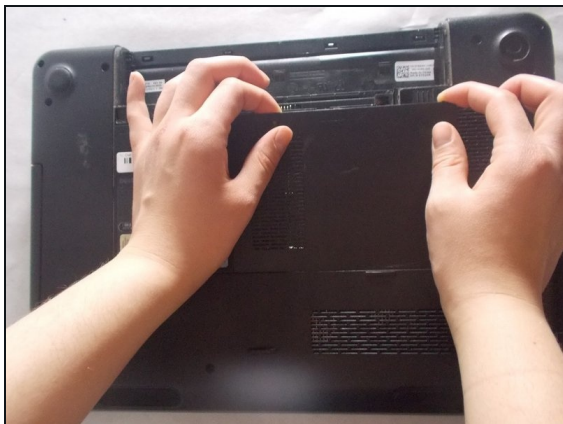


- Remove RAM cover from the laptop.

Step 6

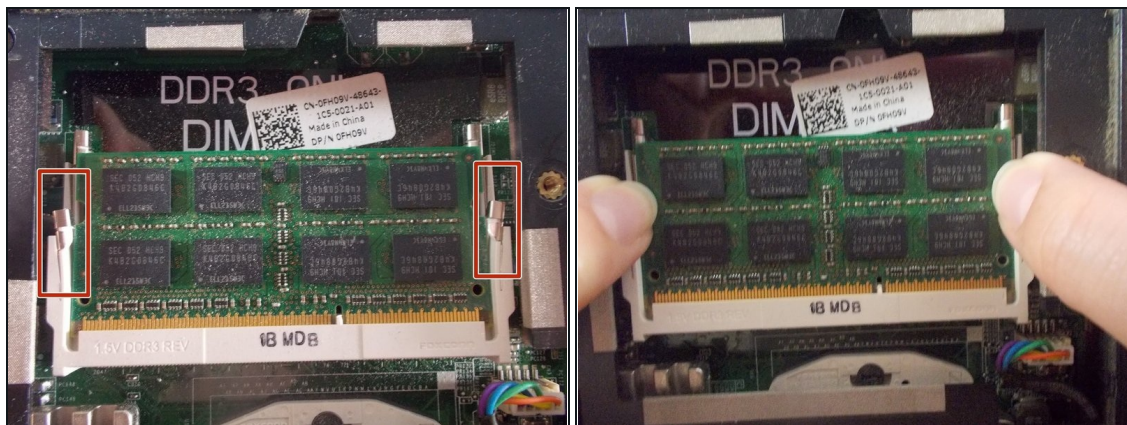

- Use your fingers to separate the two metal clips from the RAM.
- ⓘ The RAM will lift up when properly separated. Do not force the RAM out of the clips.

Step 7

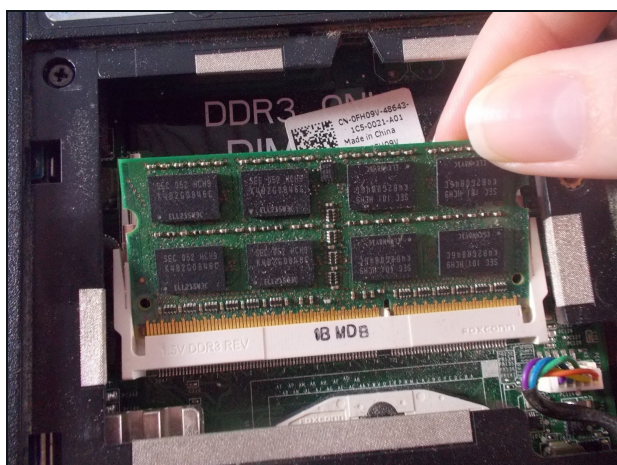

- Remove the RAM from the computer.
- ⚠ Be careful as to not touch the metal on the bottom of the RAM. This can cause damage.
- ⓘ The RAM should be placed on a non-conductive surface.

To reassemble your device, follow these instructions in reverse order.