



## **Dell Studio 1735 Battery Replacement**

Written By: Johnathan Hammond

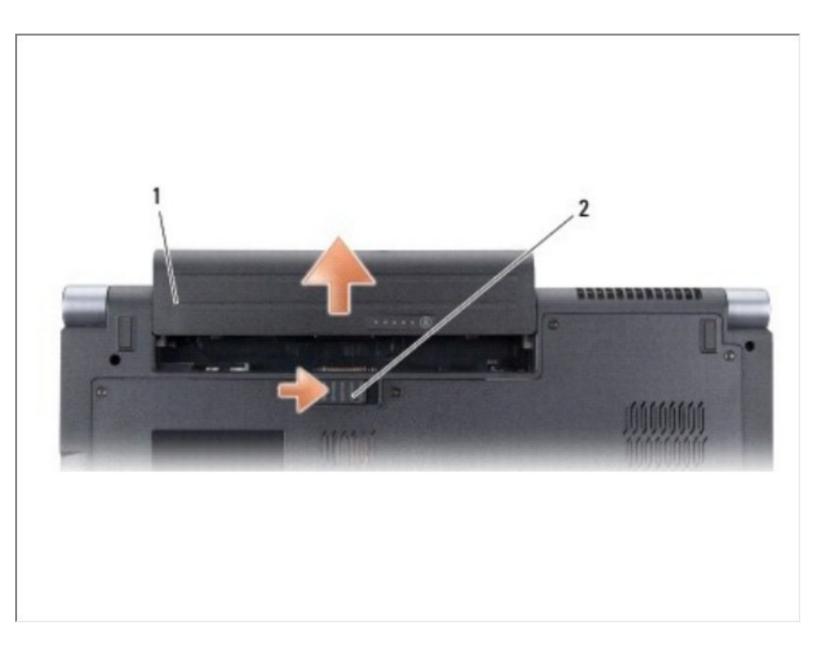

## Step 1 — Battery

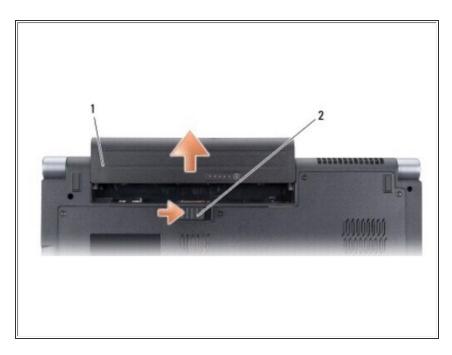

- Slide and click the battery latch release.
- Slide the battery out of the battery bay.

To reassemble your device, follow these instructions in reverse order.