




Epiphone ES-335 PRO Volume Knob Replacement

Replace a broken or cracked volume knob on the guitar.

Written By: Michaih Ley Bayani

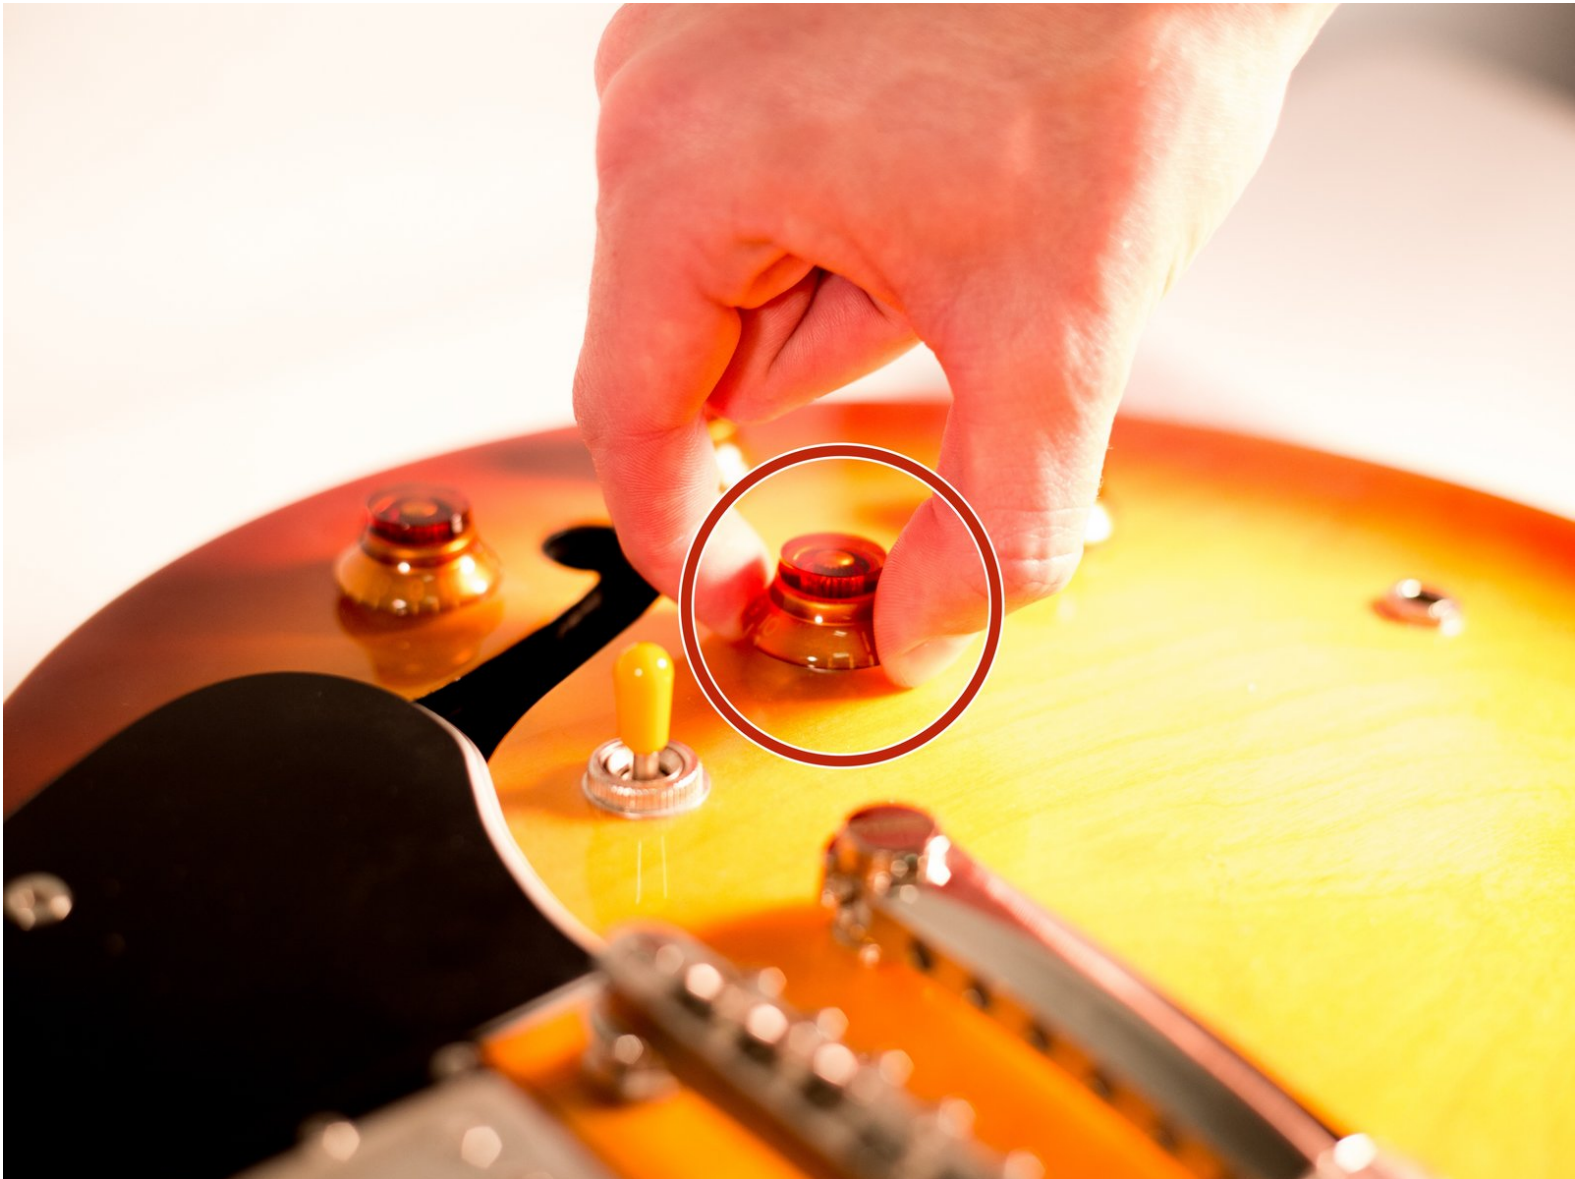

INTRODUCTION

Follow these steps to replace the volume knob on your Epiphone ES-335 PRO electric guitar. You may need to replace this if the volume knob is chipped or broken. If the volume knob that you are using to replace does not fit, then it is not the correct volume knob for the guitar.

Step 1 — Volume Knob



- Locate on the guitar's body the volume knob you wish to replace.
- Get a firm grasp on either side of the knob. Try to get underneath the knob as much as you can.

Step 2



- Pull the knob firmly until the knob pops off.
- ⚠ Do not use pliers to grasp the knob or it might slip off the knob and damage the guitar's body.

To reassemble your device, follow these instructions in reverse order.