



# Lenovo Ideapad 100S-11IBY 11.6" Battery Replacement

This is a quick guide on how to remove and replace the battery for the Lenovo Ideapad.

Written By: Nick Myers



---

## INTRODUCTION


This is a quick guide on how to remove and replace the battery.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

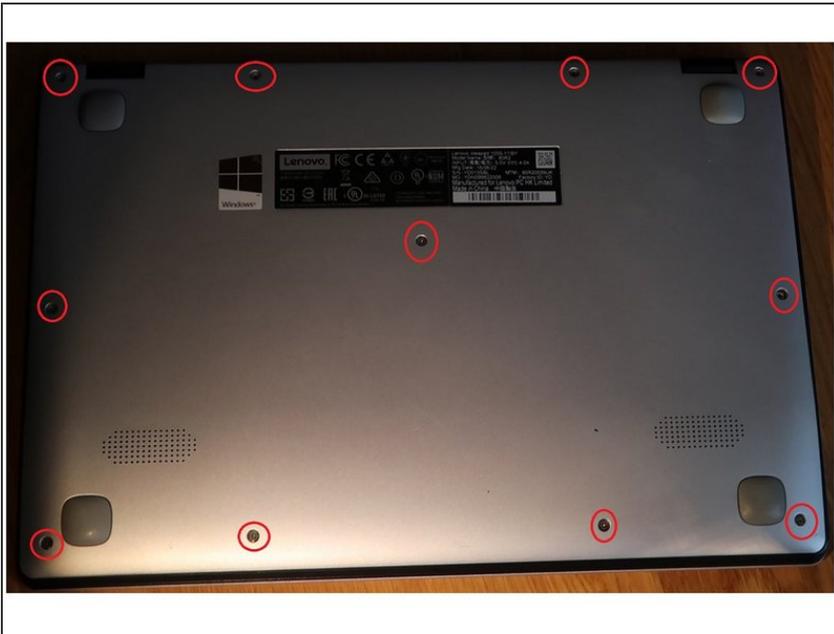



- Remove all 11 screws from the base of the laptop.

## Step 2

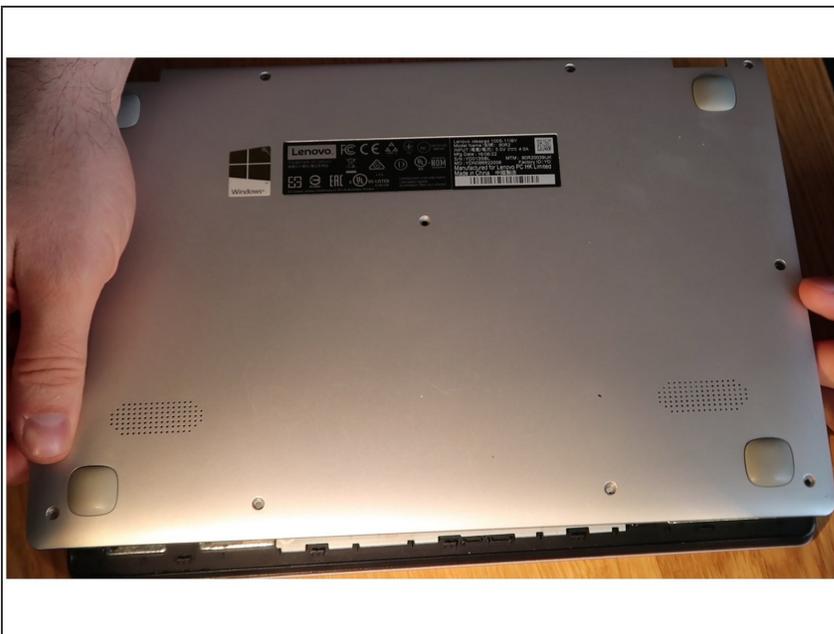


- Once the screws have been removed, lift the base out of the laptop. You may need something pointy to pry it up.

### Step 3

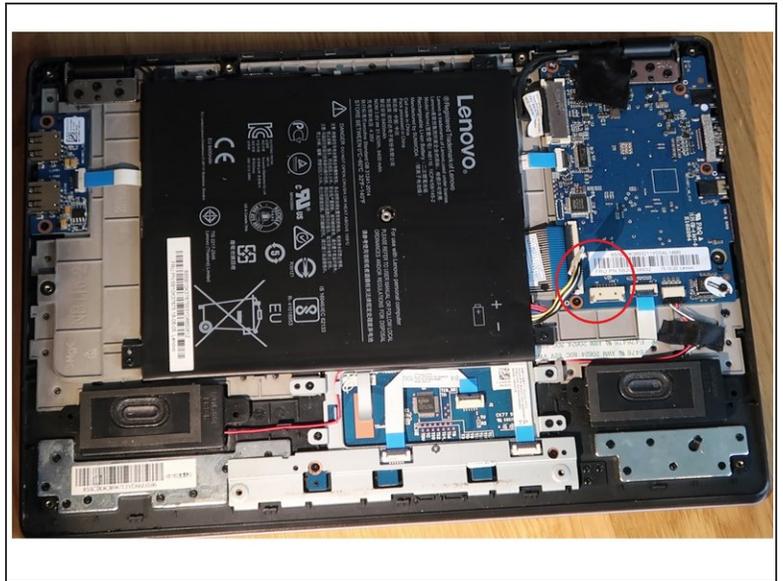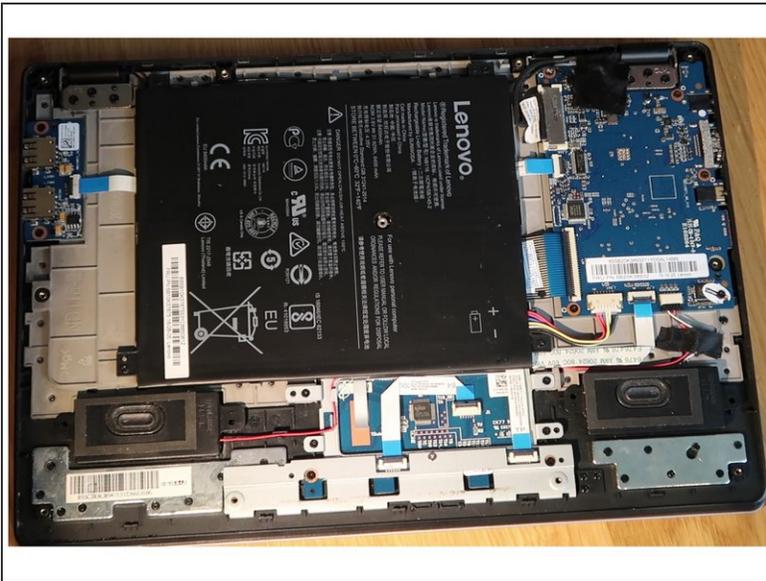



- Next disconnect the battery

### Step 4

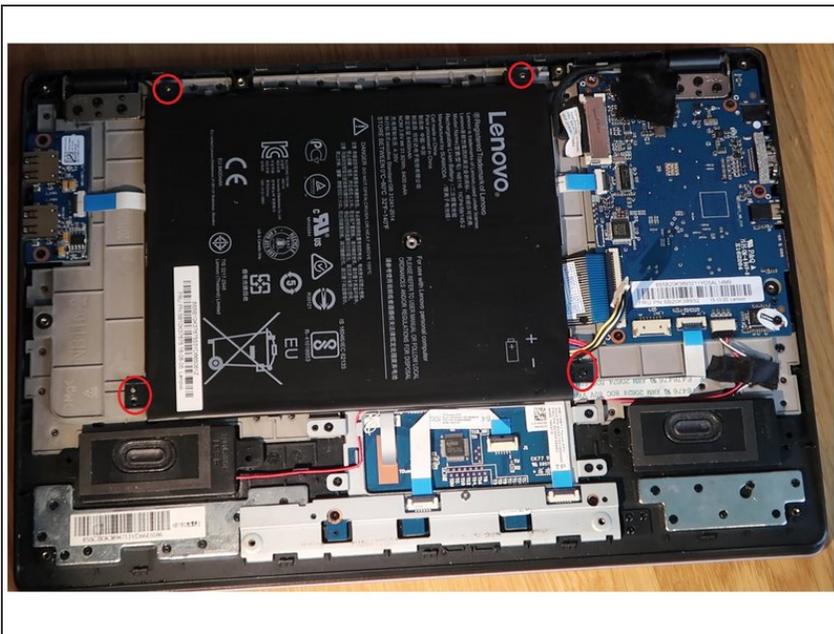

- Next remove the four screws holding the battery in place.

## Step 5

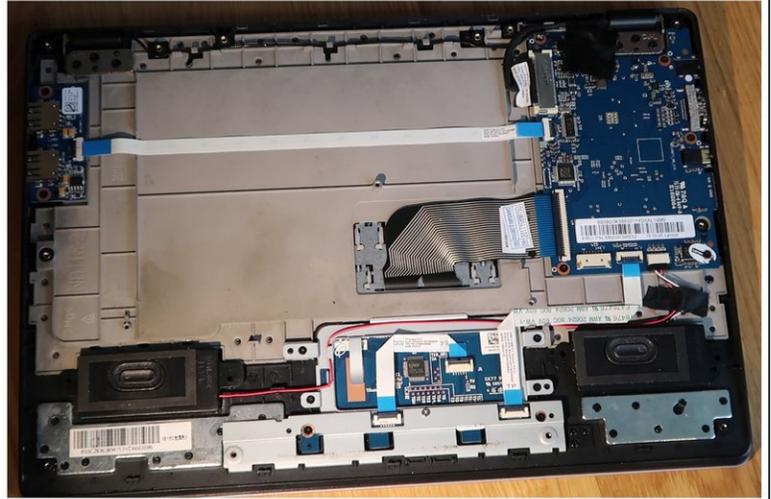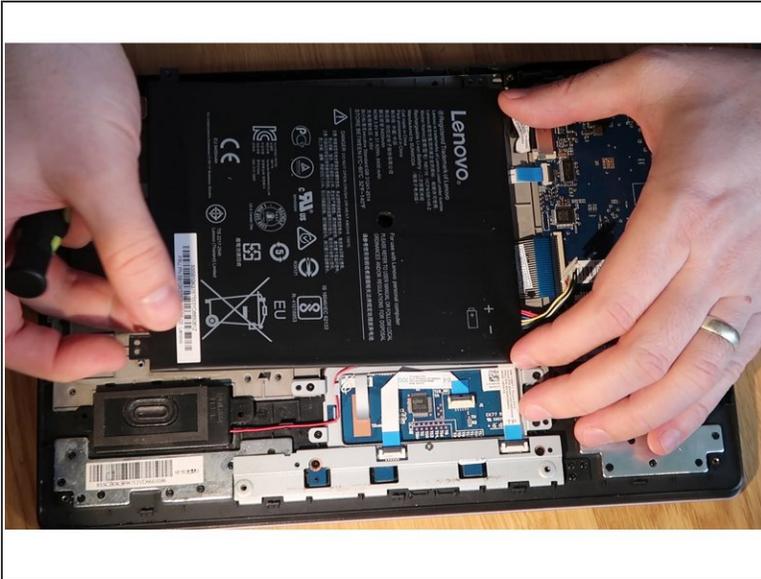

- And your all done.

To reassemble your device, follow these instructions in reverse order.