



Dell Vostro 1700 Wi-Fi Card Replacement

This guide will instruct you on how to remove the Wi-Fi card from the Dell Vostro 1700 laptop.

Written By: Nathan Valm



INTRODUCTION

This guide will instruct you on how to remove the Wi-Fi card from the Dell Vostro 1700 laptop. The Wi-Fi card controls all of the wireless internet functionality of the laptop.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Wi-Fi Card



- Remove the two Phillips #1 screws from the Wi-Fi card cover on the bottom of the laptop.

Step 2




- Lift up on the cover and remove it.

Step 3




- Use the spudger to lift the small wires connecting to the Wi-Fi card.

Step 4

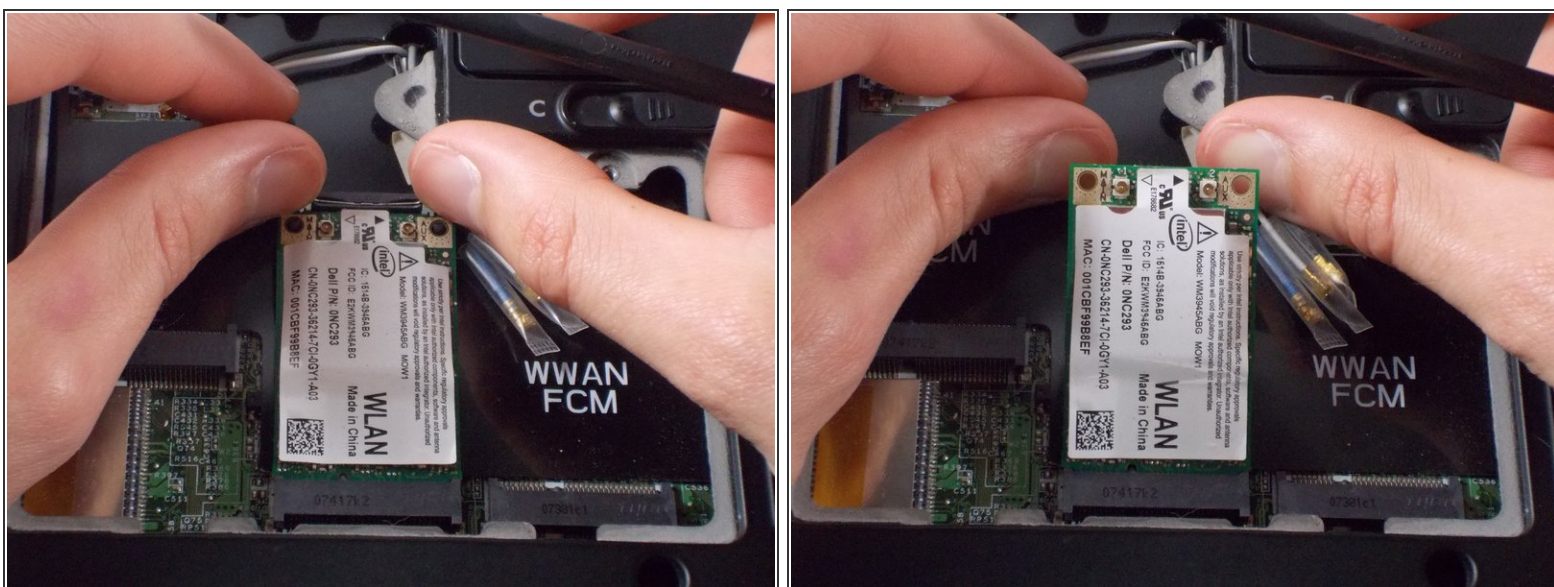

- Use your thumbs to push the retaining clips upward to release the card.

Step 5

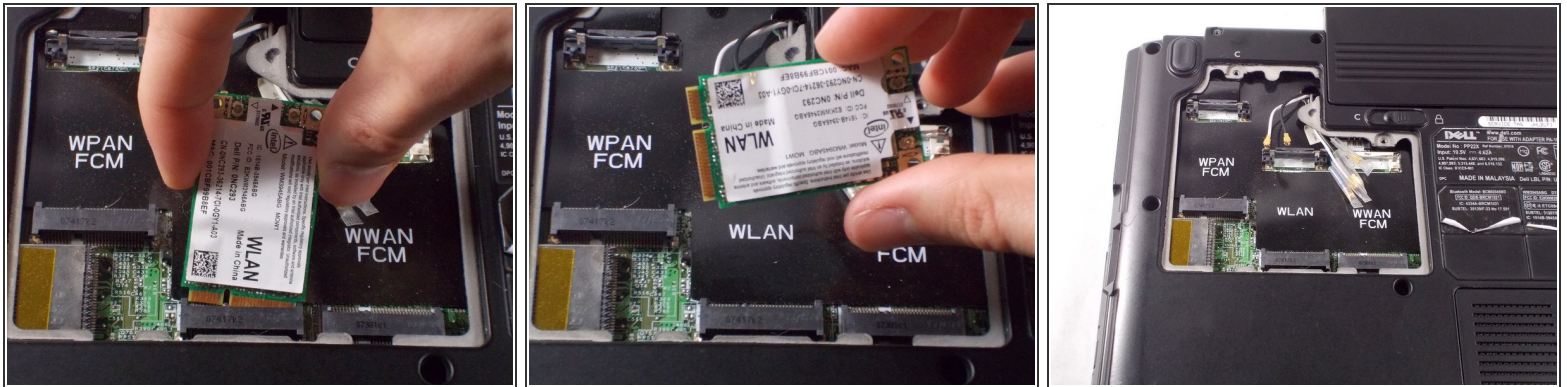

- Pull the card outward and then upward to remove it from the slot.

To reassemble your device, follow these instructions in reverse order.