



Hp 15-f305dx Battery Replacement

This guide will instruct you on how to replace your Hp 15-f305dx battery.

Written By: Brandon



Step 1 — Battery



- ⚠ Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Step 2



- Turn the computer upside down on a flat surface.

Step 3



- Firmly slide the release latch to unlock the battery and slide the battery release latch to release the battery.

Step 4



- Lift the battery from the middle and then pivot it outward to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.