



ZTE Z667T Battery Replacement

Battery replacement guide for the ZTE Z667T.


Written By: C.J.



INTRODUCTION

This guide shows how to successfully remove the battery.

Step 1 — Battery

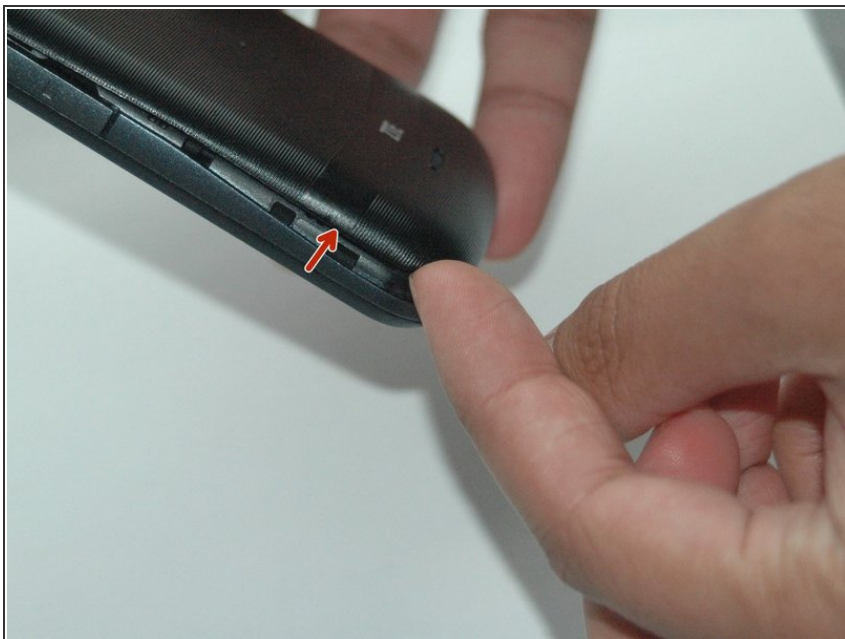

- Gently insert your fingernail into the bottom left crevice of the back cover and lift up.

Step 2



- Remove the battery by inserting your fingernail at the top of the battery and lift it up.

To reassemble your device, follow these instructions in reverse order.