



# Samsung Galaxy S7 Active Rear Camera Replacement

This guide will teach you how to replace the...

Written By: Joe De Leone



# INTRODUCTION

This guide will teach you how to replace the rear camera on the Samsung Galaxy S7 Active.

## TOOLS:

Phillips #000 Screwdriver (1)  
Heat Gun (1)  
Metal Spudger (1)  
Hair Dryer (1)  
Tweezers (1)


## PARTS:

Samsung Galaxy S7 Active Screen (1)

## Step 1 — Samsung Galaxy S7 Active Disassembly



- Melt the adhesive on the screen by applying a blow dryer directly on the screen.

 Your phone is hot, please do not touch it with your bare hand.

## Step 2



- Wedge the metal spudger in between the screen and the frame to begin separating them.
- ① It would be easier to separate the screen from the sealing adhesive on the frame if you with more than one metal spudger.
- ① Your phone might no longer be watertight after you reassemble it.

## Step 3



- Slide the metal spudger around the phone at least once.
- ① It would be easier to slide your metal spudger if you apply the blow dryer to where you are currently sliding.

## Step 4



- Lift the screen up with your hands.


⚠ Please wash your hands thoroughly with hot water and soap after you finish.

## Step 5 — Battery



- Use a Phillips #000 screwdriver to remove a single screw.

## Step 6

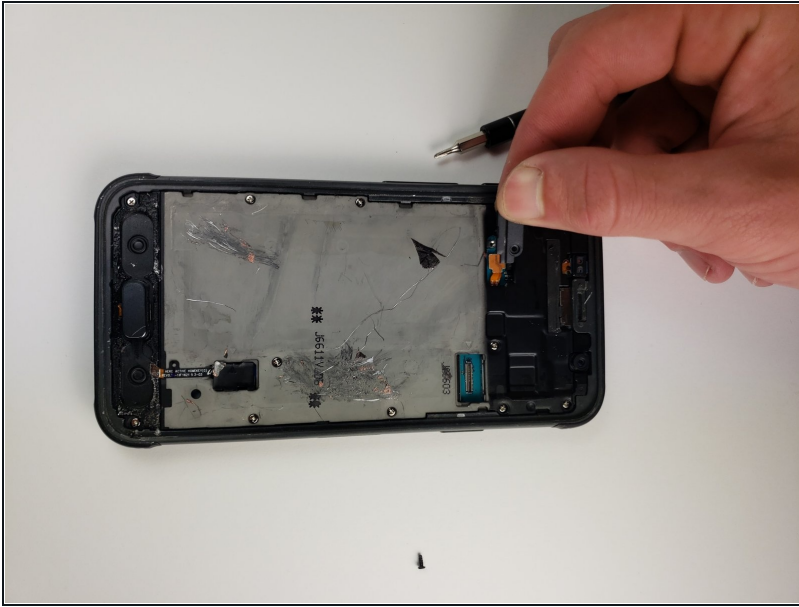


- Use [tweezers](#) to remove the small plastic cover you just unscrewed.

## Step 7




- Use tweezers to remove the other small plastic cover.

## Step 8

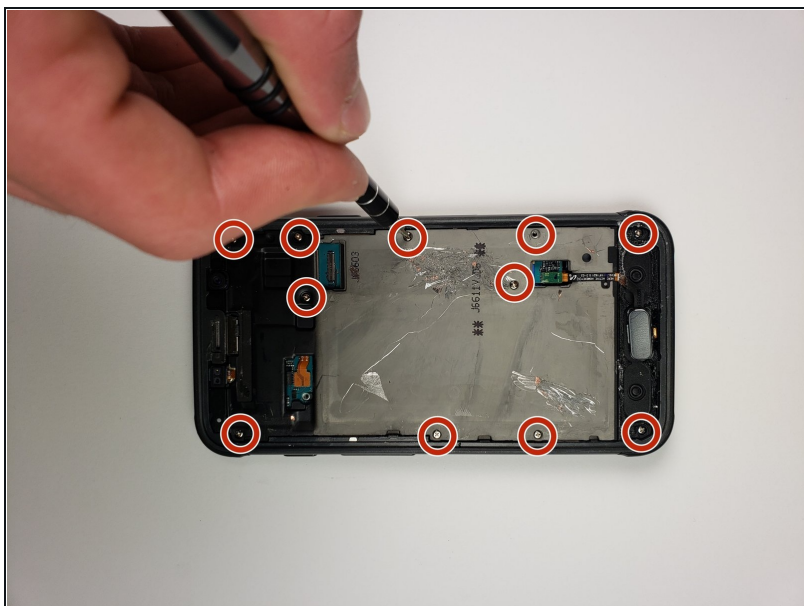

- Use a Phillips head #000 to take out the eleven screws marked in the photo.

## Step 9

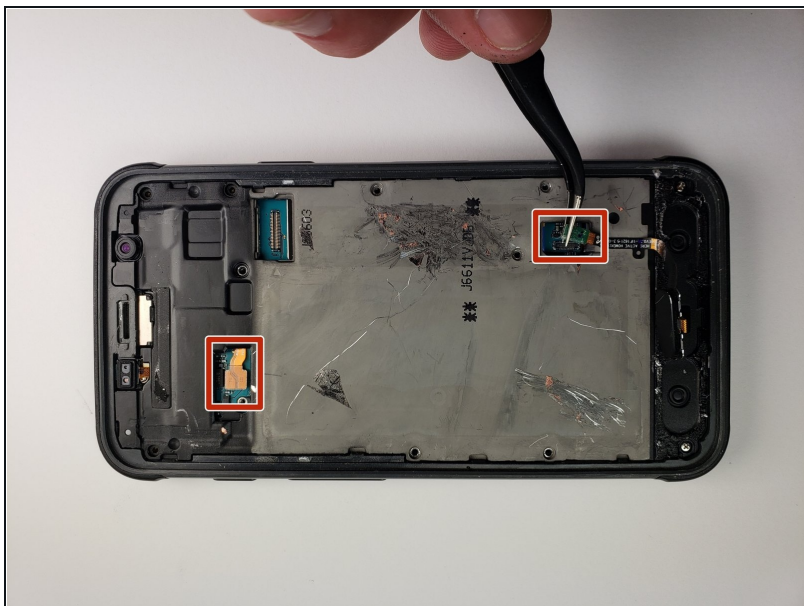


- Use tweezers to disconnect the marked pieces from the motherboard.

## Step 10





- Use tweezers to take out the middle button and its connection to the motherboard.

## Step 11

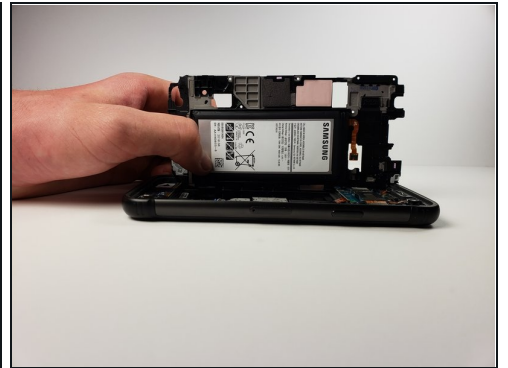

- Use a metal spudger to pull the mid frame and battery off of the motherboard.

## Step 12

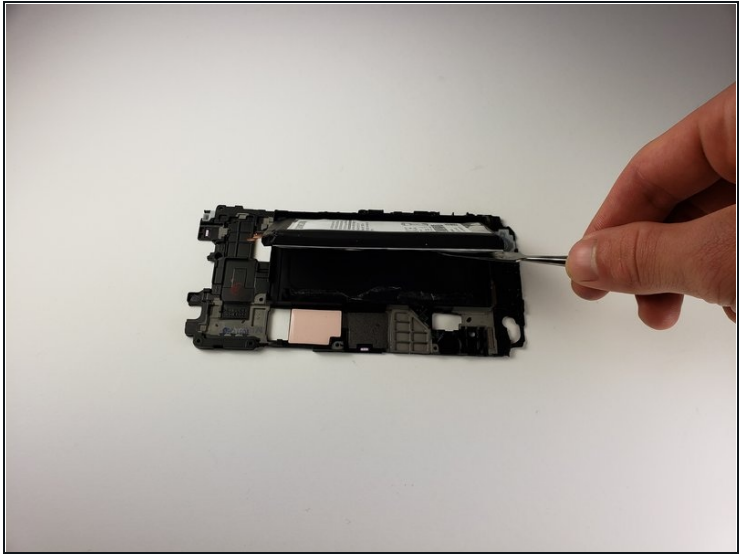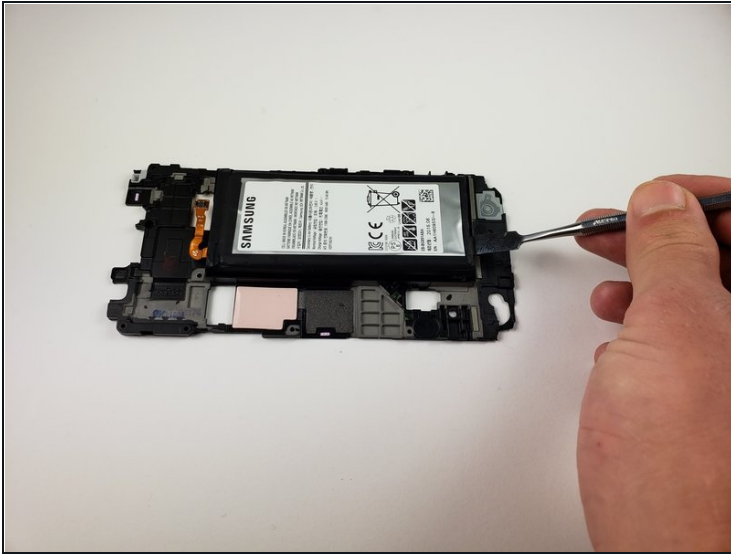

- Use a spudger to remove the battery from the midframe.

☑ To install a new battery and adhesive, [follow this guide](#).

## Step 13 — Rear Camera



- Use [tweezers](#) to disconnect the front camera from the battery.
- ① The connector should unsnap similar to a lego piece.

To reassemble your device, follow these instructions in reverse order.