



# Garmin GPSmap 60CSx Gasket Replacement

Replace damaged or broken gasket so GPS is water resistant.

Written By: Samantha Shelton



---

## INTRODUCTION

The gasket can break and become unusable, compromising the protection of the internal structure of device and rendering it vulnerable to water. This guide will aid you in its removal and replacement.

---



### TOOLS:

- [Phillips Size 0 Screwdriver](#) (1)
-

## Step 1 — Back Cover and AA Batteries




- Lift and twist the battery cover release 90 degrees counterclockwise on the back of the device.

## Step 2



- Lift battery release up to remove battery cover.

### Step 3

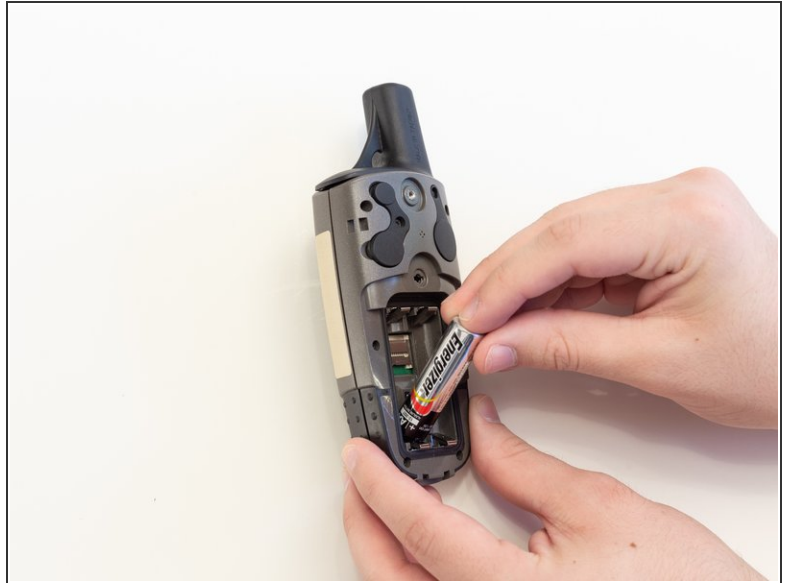

- Pull AA batteries out.

### Step 4 — Gasket



- Remove the six 10 mm screws on the back of the device with a Phillips #0 Screwdriver.
- Separate the back panel from the front.

## Step 5



- Remove the gasket.
- ⓘ Be careful to make sure the gasket is aligned correctly to ensure it is water proof.

To reassemble your device, follow these instructions in reverse order.