

Dell Inspiron 14 M4010 Battery Replacement


Written By: Terrence15



INTRODUCTION


In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Slide the Lock Latch

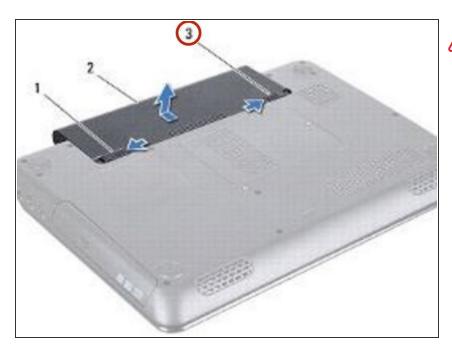


- MARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in Before You Begin.
- Shut down the computer and turn it over.
- Slide the battery lock latch until it clicks into place.

Step 2 — Sliding the Battery

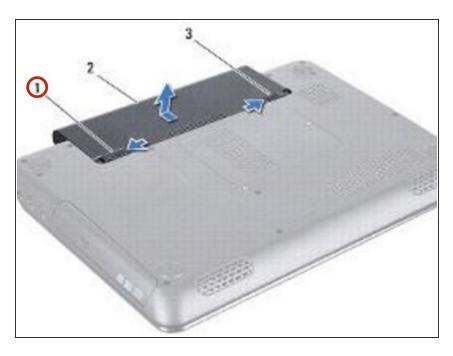


 Slide the battery release latch to the unlock position.

Step 3 — Lift the Battery

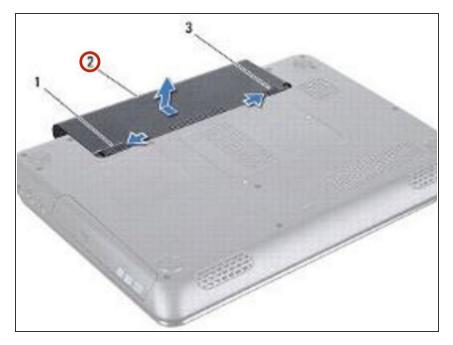


 Slide and lift the battery out of the battery bay.

Step 4 — Align the Tabs

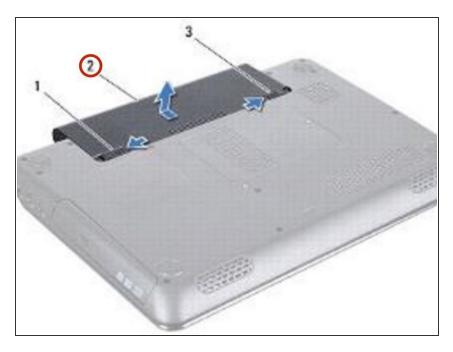

 Align the tabs on the **NEW** battery with the slots on the battery bay.

Step 5 — Slide the Battery

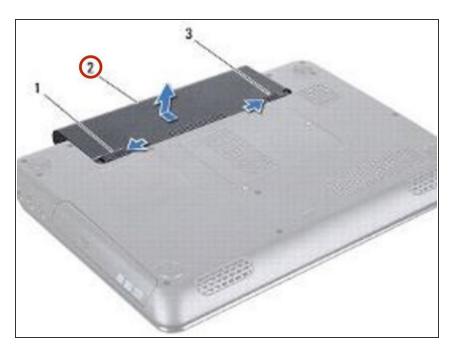

 Slide the battery into the battery bay until it clicks into place.