

 


# SAMSUNG ATIV Book 9 Plus NP930X5J-S01US

## Screen Replacement

This guide will cover how to remove the screen of a Samsung ATIV Book 9 Plus.

Written By: Sean Kim

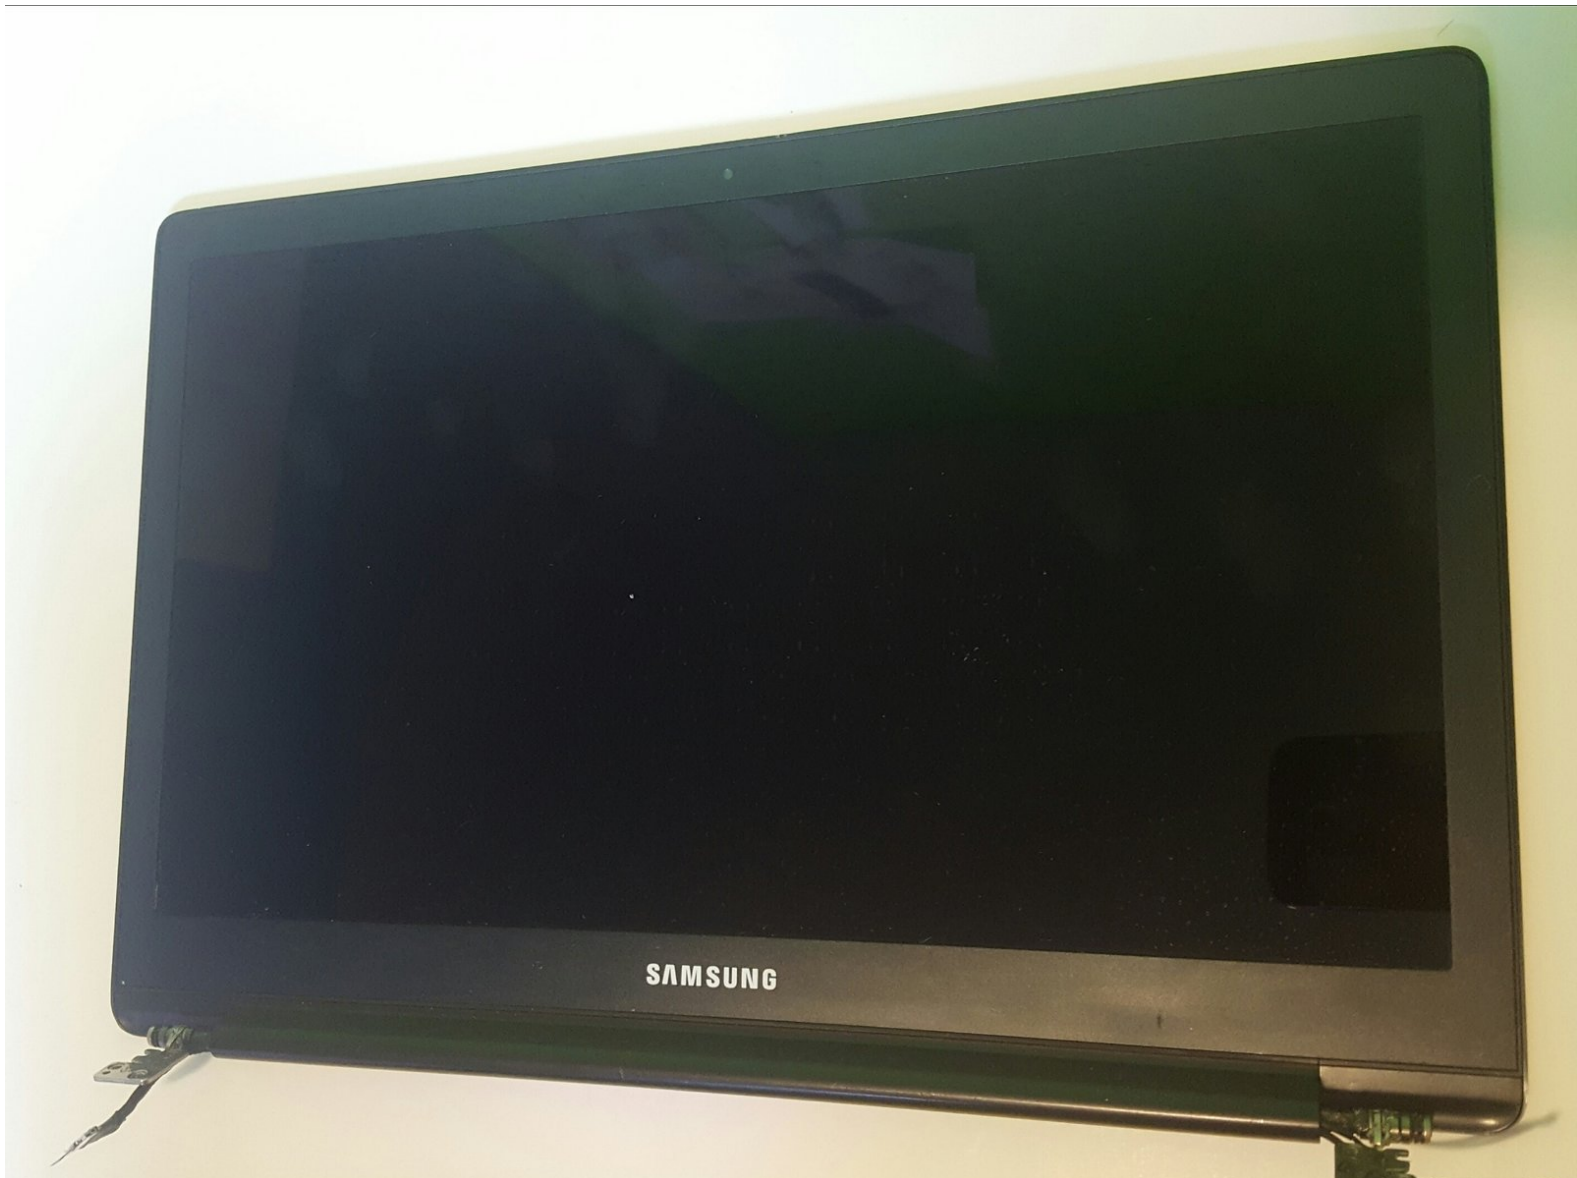

---

# INTRODUCTION

This guide will cover how to remove the screen of a Samsung ATIV Book 9 Plus.

---



## TOOLS:

 
 
 
- [Metal Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Remove the ten 4.3mm Phillips #00 screws from the bottom cover of the laptop.



## Step 2

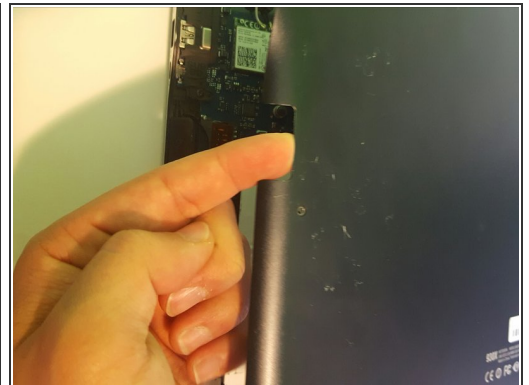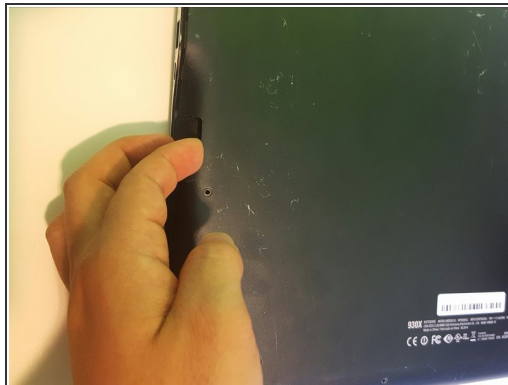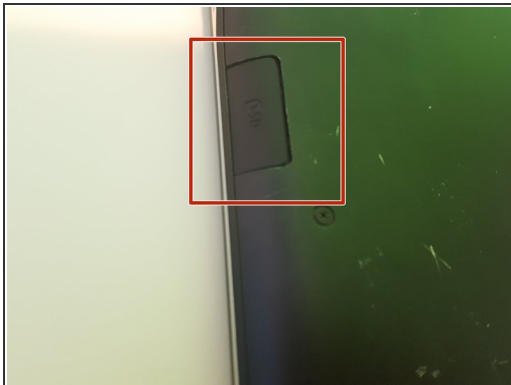

- Press the button to release the bottom cover.



## Step 3

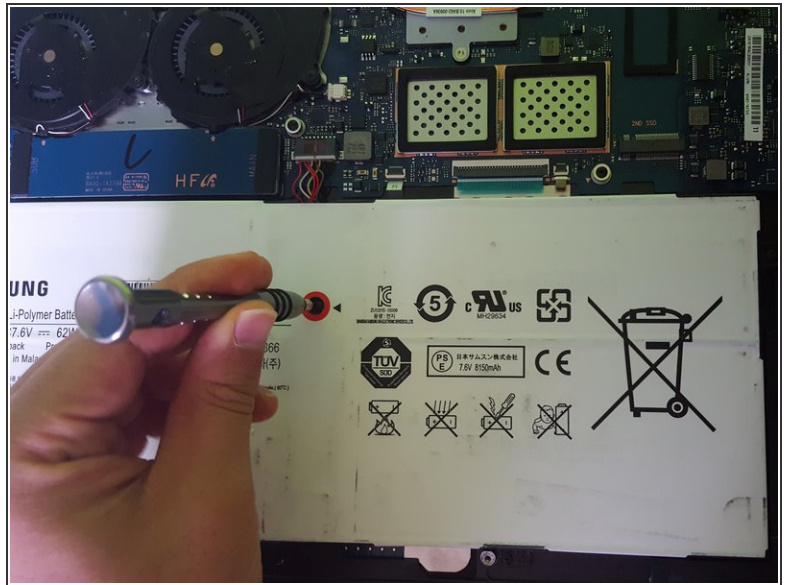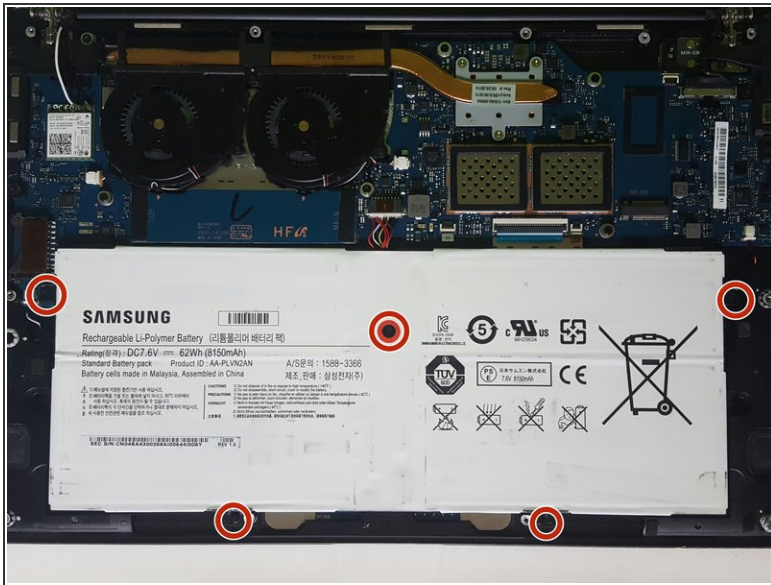




- Remove the five 4.3mm Phillips #00 screws from the battery.

## Step 4



  
 
- Lift the battery with both hands and remove.

## Step 5 — Screen

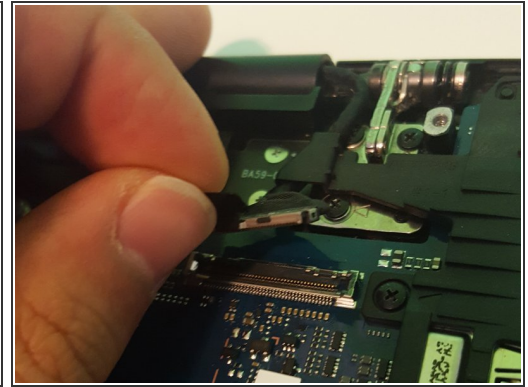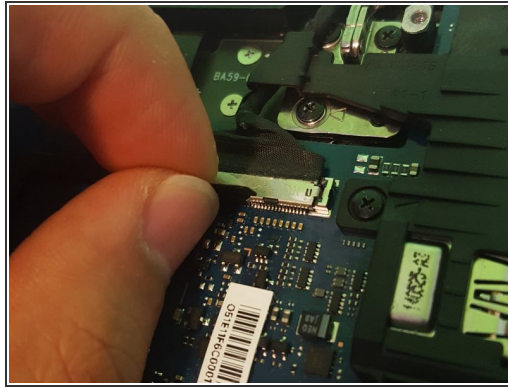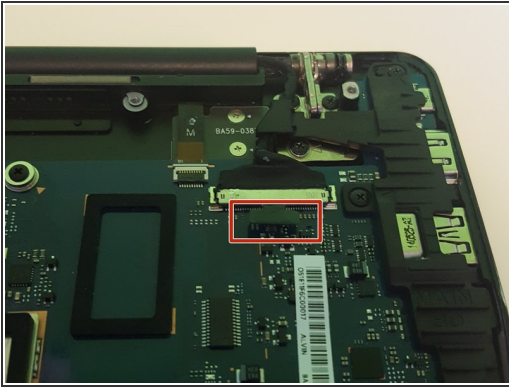

- Disconnect the display cable from the motherboard.


## Step 6

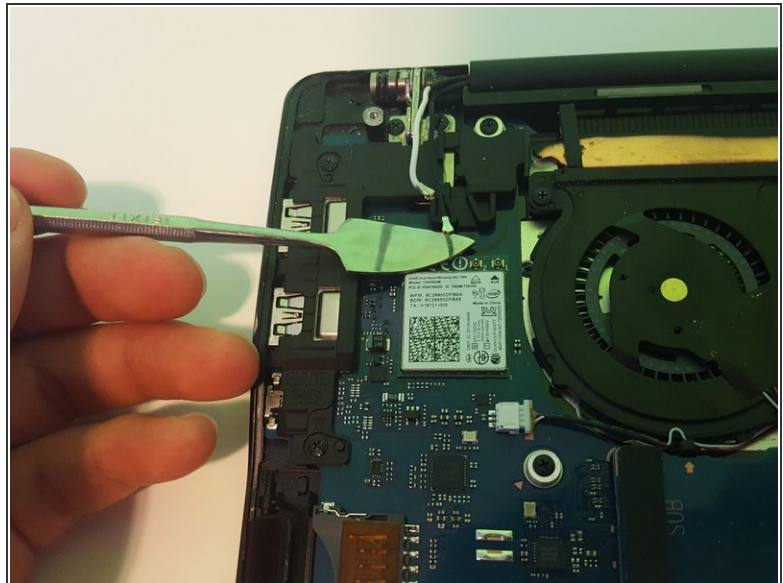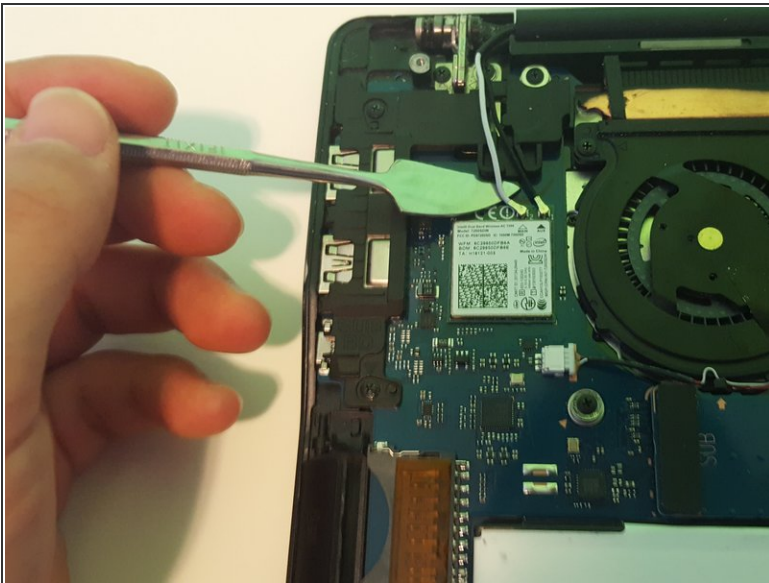  

- Disconnect the black and white antenna cables from the Wi-Fi card.




## Step 7

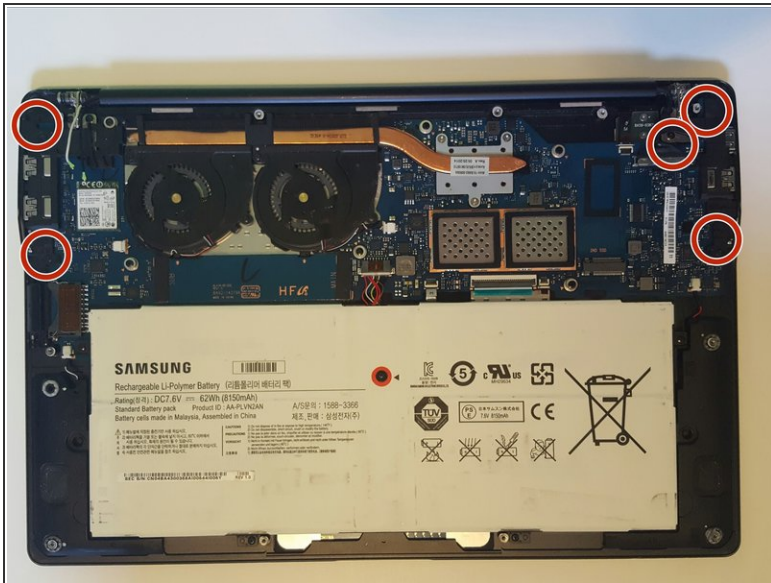 


- Remove the five 4mm Phillips #00 screws from the motherboard retaining brackets.

## Step 8

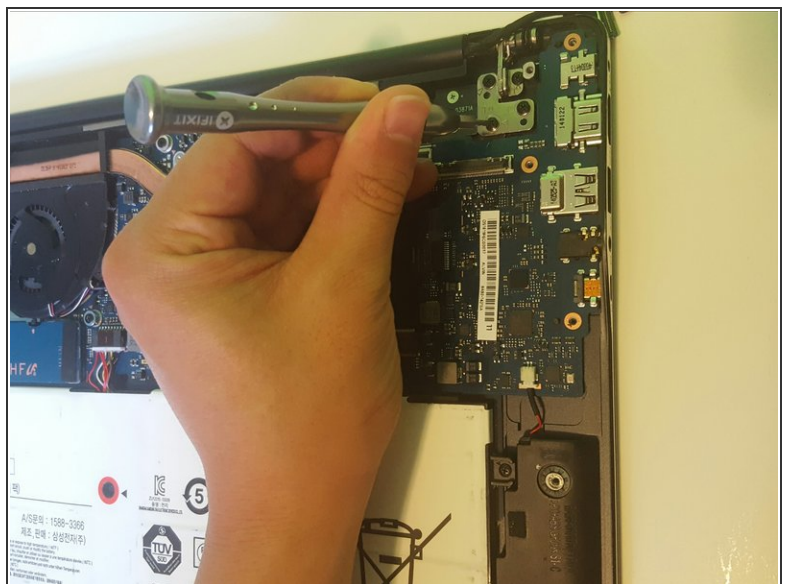 


- Remove the eight silver 4.2mm Phillips #00 screws from the corner.

## Step 9

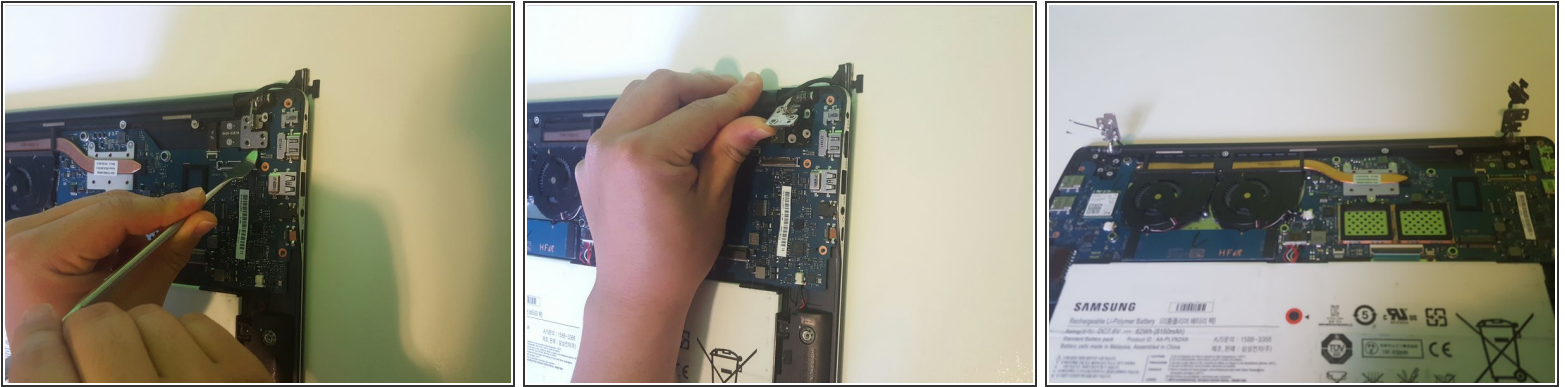 

- Pry up the metal hinges from the laptop.

## Step 10

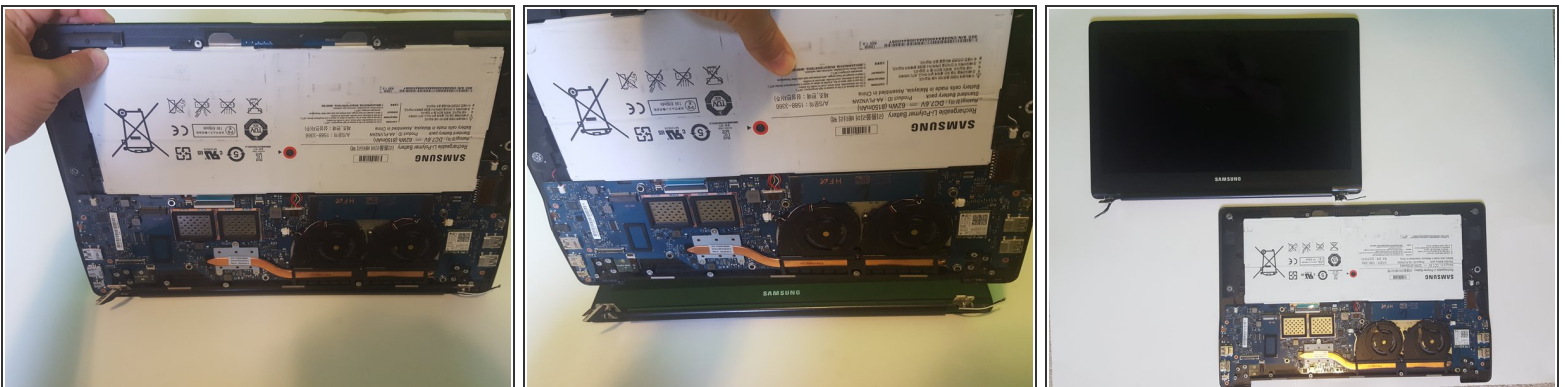 

- Place the screen on its back side and hold the battery-side of the laptop. In an upward motion, remove the back set off and set it aside.

To reassemble your device, follow these instructions in reverse order.