



LG G Pad X 8.3 Speaker Replacement

Replace the speaker in your LG G Pad X 8.3 to restore the sound in the tablet.

Written By: Michael H



INTRODUCTION

If there is no sound or if the quality of the speaker has diminished significantly, it may be time for a replacement. This guide will walk you through the process of replacing the speaker in your LG G Pad X 8.3.

TOOLS:

- [iFixit Opening Tools](#) (2)
 - [Phillips #000 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery



- Remove the cover of the SD card. Find it on the right side of the back of the tablet.
- Press the SD card in to make it pop out.

Step 2




- Slide the stylus out from the bottom left corner of the back panel.

Step 3



- Start at a corner and pry the screen up with a plastic opening tool.
 - ⓘ You can also use a plastic spudger for this task, but do not use metal tools. They can be dangerous to you and the device.
 - Slide the tool in the seam at the edge of the screen.
 - Wedge additional plastic opening tools in the seam to help lift the screen.
 - Slide both wedged plastic opening tools towards the bottom to pop the screen loose.
- ⚠ If your screen is cracked, work slowly to avoid flinging glass shards when prying.

Step 4

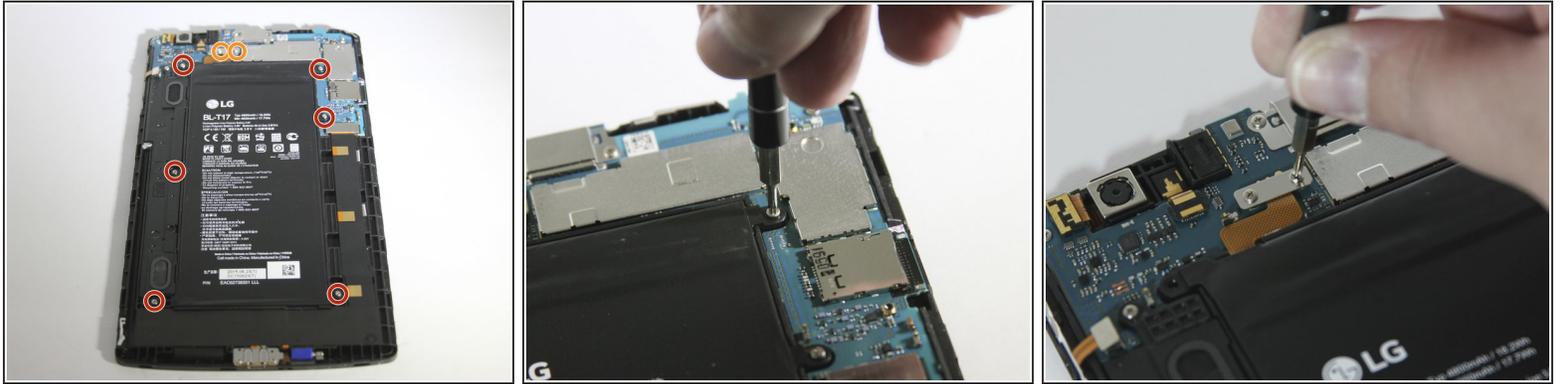

- With a Phillips #000 screwdriver, unscrew the six 4.0 mm screws that hold down the battery.
- With the Phillips #000 screwdriver, unscrew the two 4.0 mm screws that hold down the battery ribbon connector.
- Use a magnetic mat to keep track of these tiny screws for later reassembly.

Step 5



- Lift the battery ribbon connector with your finger.

Step 6



- Lift the battery with your fingers and remove it from the device.

Step 7 — Speaker



- With a Phillips #000 screwdriver, unscrew the one 4.0 mm screw that is holding down the speaker.
- Use the magnetic mat to keep track of the tiny screw(s).

Step 8



- Lift and remove the speaker with your finger.

To reassemble your device, follow these instructions in reverse order.