




HP Elite x2 G1 1012 Display Replacement

The HP x2 1012 G1 was a tablet-laptop hybrid released in May 2016. Use this guide to replace and / or fix the display.

Written By: Colin Mika

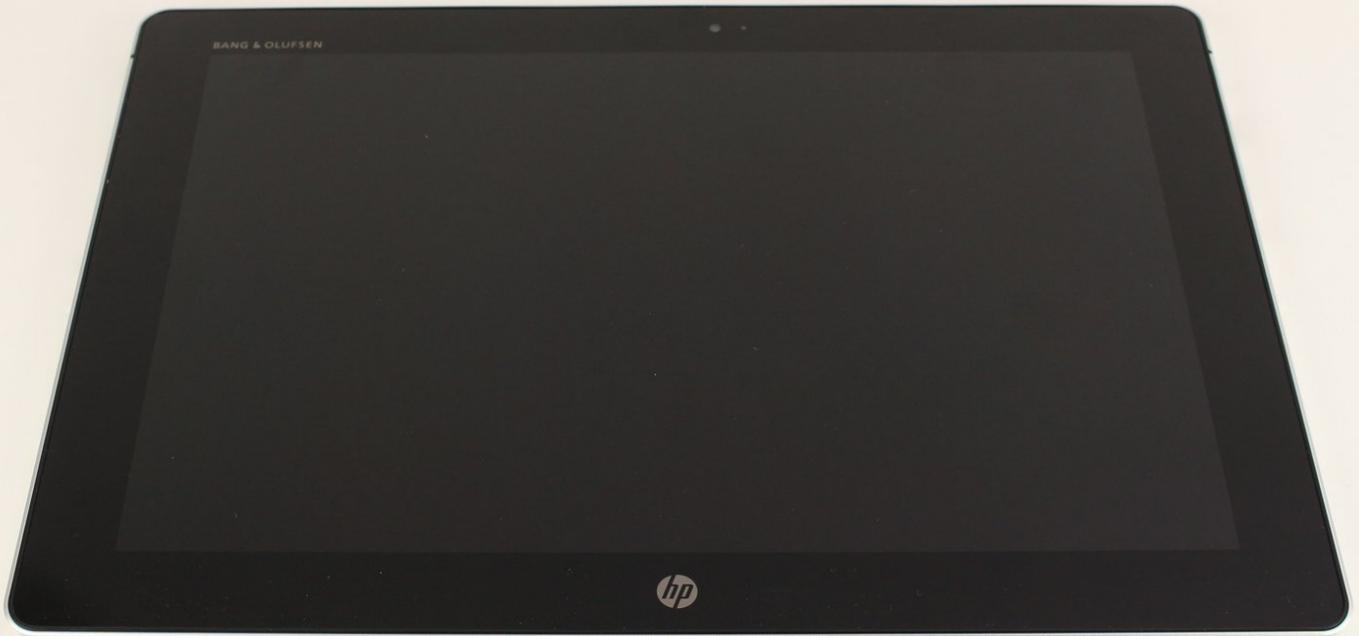

INTRODUCTION

Use this guide to replace and / or adjust the screen of the HP Elite x2 G1.

TOOLS:


- [Heavy-Duty Suction Cups \(Pair\)](#) (1)
-

Step 1 — Display



-  Be sure to power off and unplug your device before you begin your repair.
- With the screen face down, lift up the stand as far as it goes.
-  **Make sure not to force it past the resting point.**

Step 2

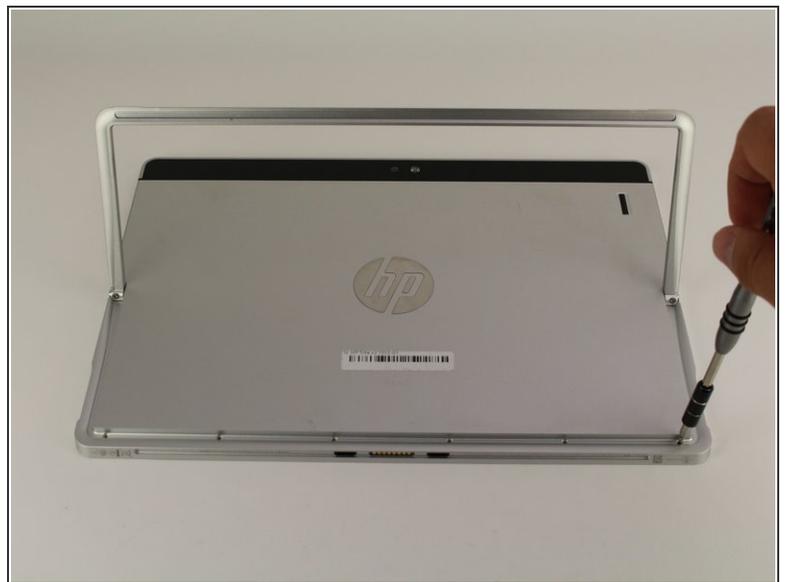

- Use a T5 driver to remove the six screws on the back of the tablet.

Step 3



- After removing the screws, delicately close the stand.
- Flip the tablet on its back so that the screen is facing up.

Step 4



- Use the suction cup to carefully separate the screen from the device. Pull upwards with a fluid and smooth motion.

⚠ Do not lift too fast! There will still be wires connecting the screen to the device. Make sure they are not tampered with.

Step 5



- Remove the tape on the lower left side of the screen.
- Underneath the tape, disconnect the LCM cable, the larger wire that was underneath the tape, from the back of the tablet screen.

Step 6



- Disconnect the flex cable from the device using the spudger.
- Remove the Display Assembly from the device.

To reassemble your device, follow these instructions in reverse order.