




# Dell Inspiron 15 5566 Battery Replacement


Written By: Terrence15

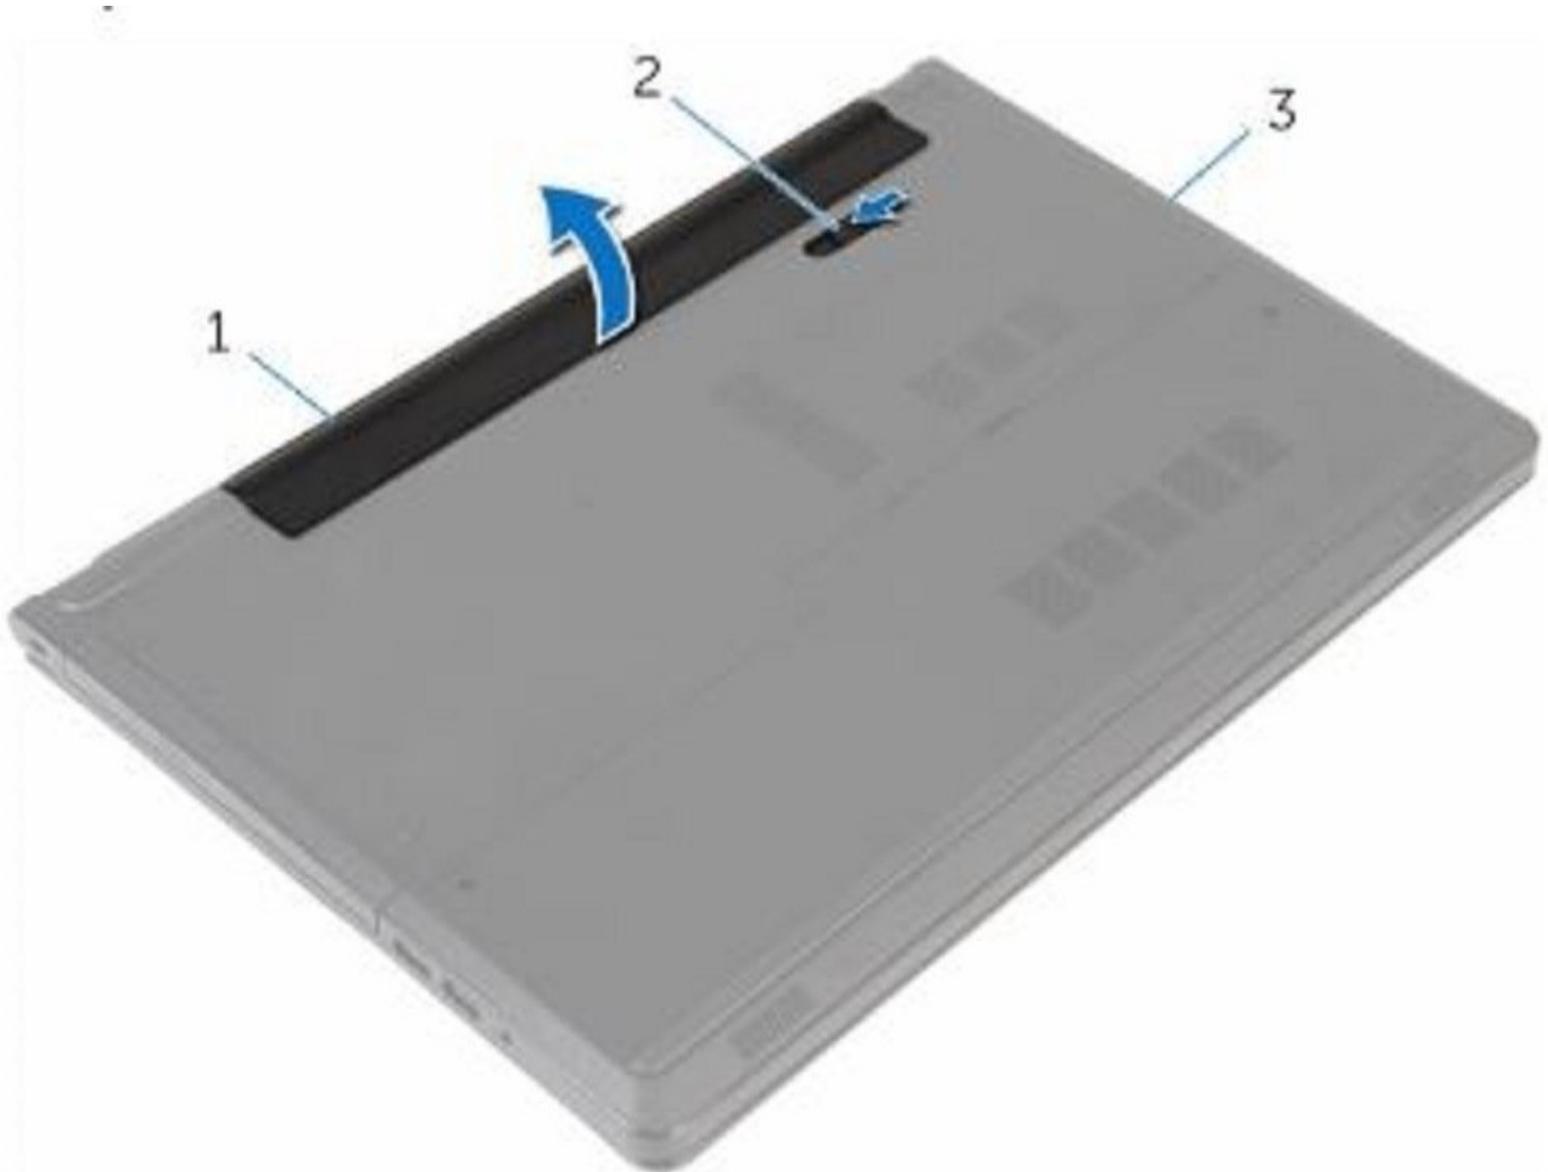

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


## Step 1 — Close the Display

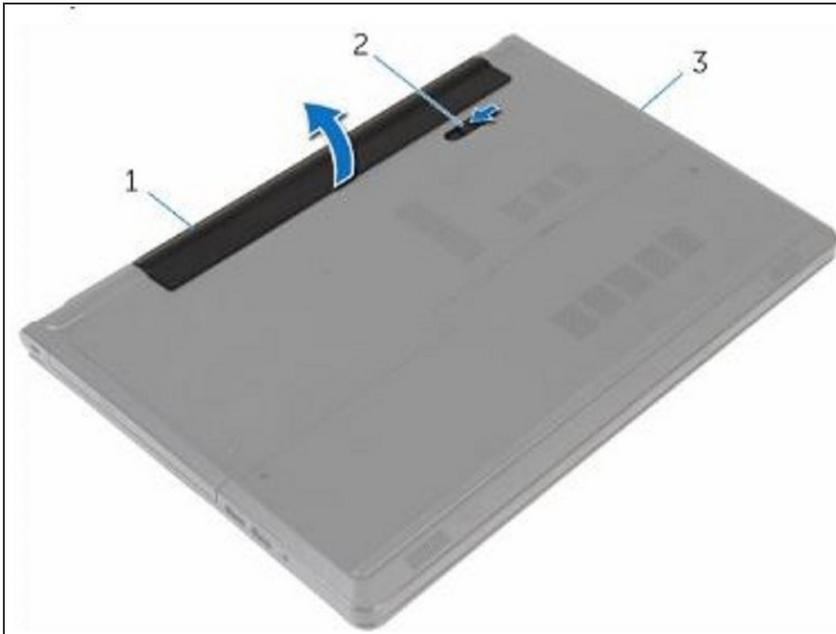

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display and turn the computer over.

## Step 2 — Sliding the Battery Latch

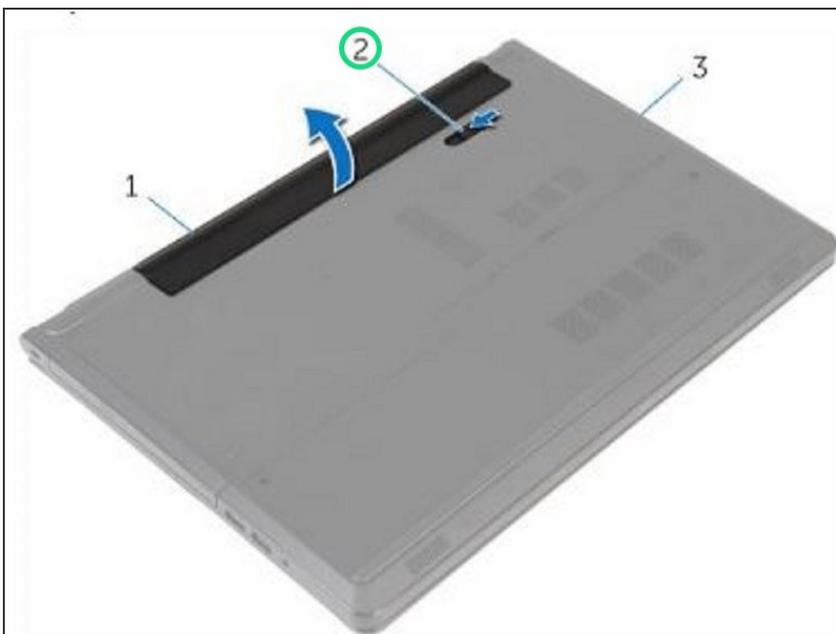


- Slide the battery latch to the unlocked position.

### Step 3 — Lifting the Battery

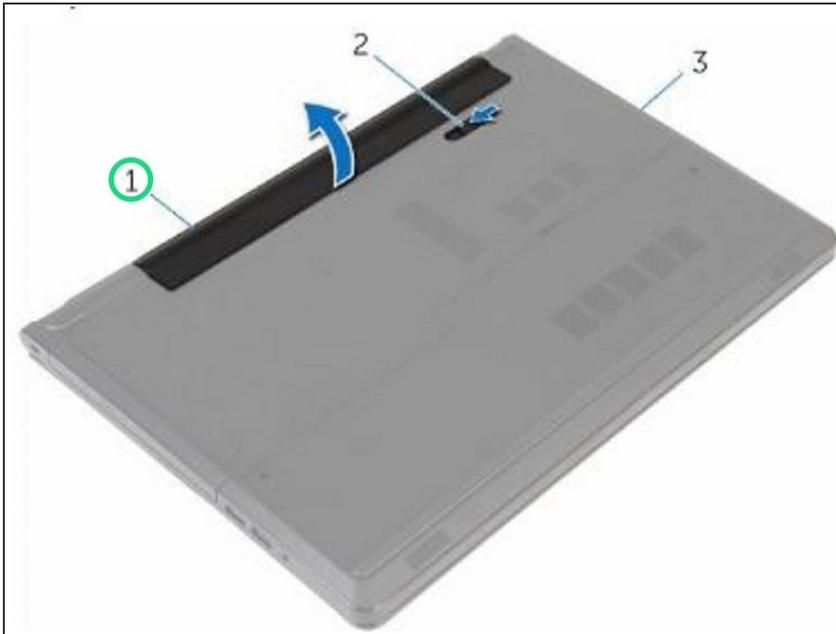


- Using your fingertips, lift the battery at an angle and remove the battery off the computer base.

### Step 4 — Open the Display

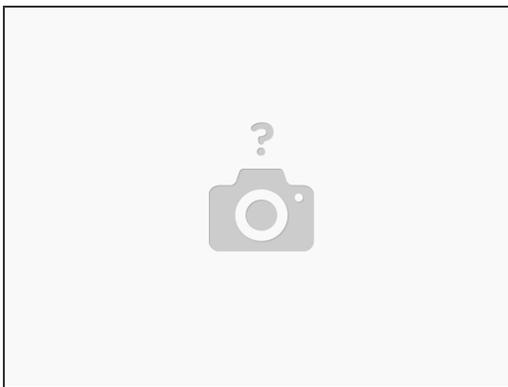

- Turn the computer over, open the display, and press the power button for five seconds to ground the computer.

## Step 5 — Sliding the Tabs

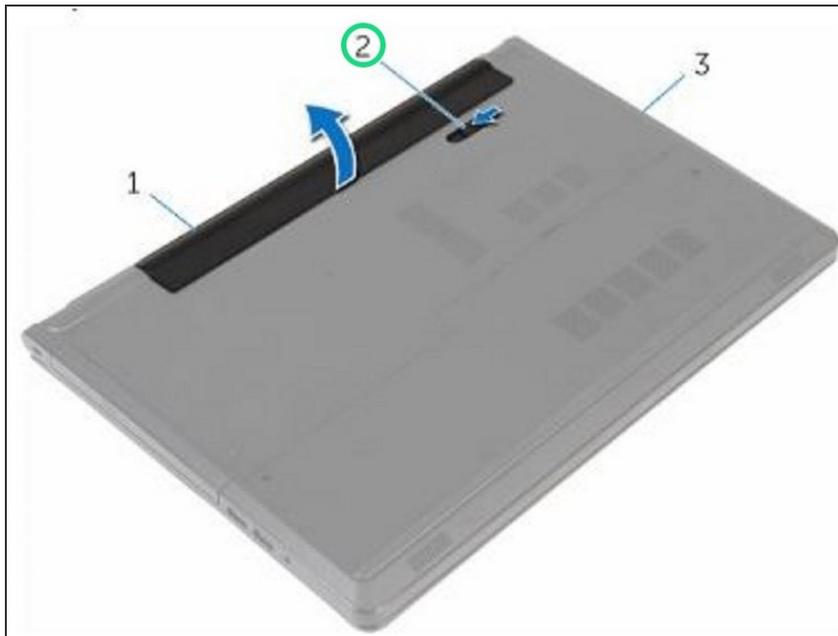

- Slide the tabs on the battery into the slots on the battery bay and snap the battery into place.