

Dell Inspiron n5110 Display Assembly Replacement

Written By: Terrence15



INTRODUCTION


In this guide, we will be showing you how to remove and replace the Display Assembly.



TOOLS:


• Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws

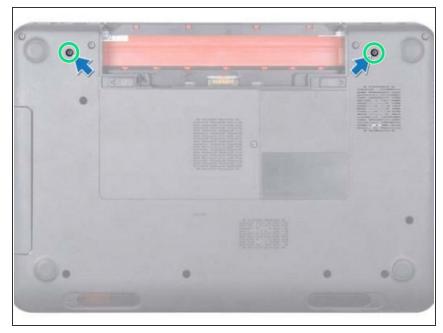


- MARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in "Before You Begin".
- ⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).
- Remove the two screws that secure the display assembly to the computer base.

Step 2 — Disconnecting the Display Cable

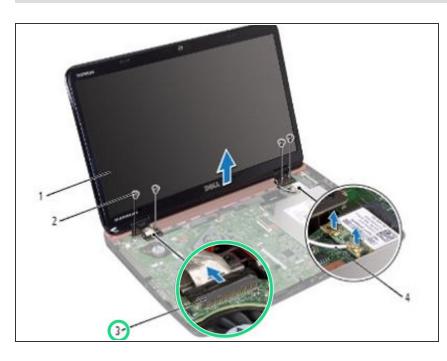


- Disconnect the display cable and touch-screen cable from the systemboard connectors.
- NOTE: The touch-screen board is optional and may not be present in your computer.

Step 3 — Note the Routing

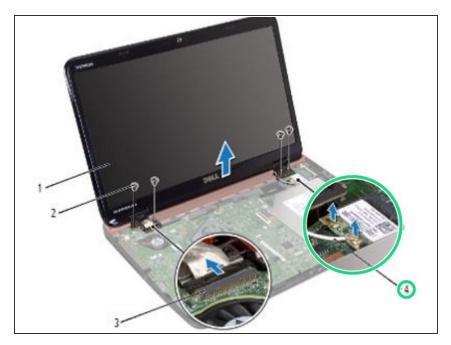


 Note the routing of the Mini-Card antenna cables and remove the cables from the routing guides.

Step 4 — Remove the Screws

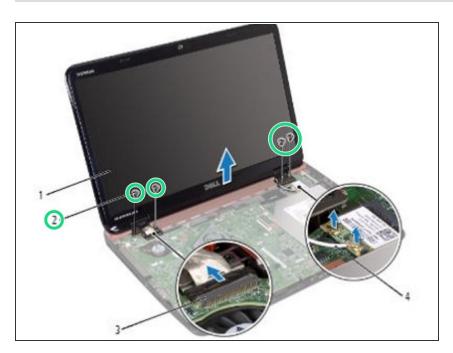


 Remove the four screws that secure the display assembly to the computer base.

Step 5 — Lifting the Display Assembly.

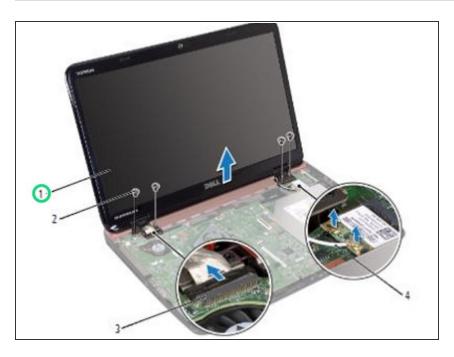


 Lift the display assembly off the computer base.

Step 6 — **Placing the Display Assembly**

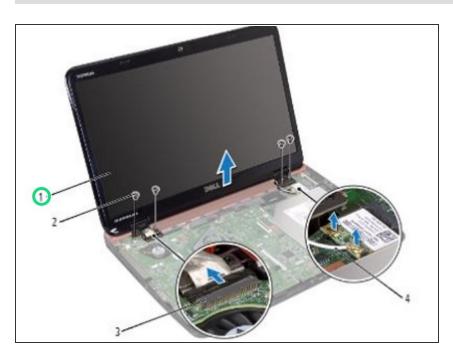

 Place the **NEW** display assembly in position and replace the four screws that secure the display assembly to the computer base.

Step 7 — Route the Cables

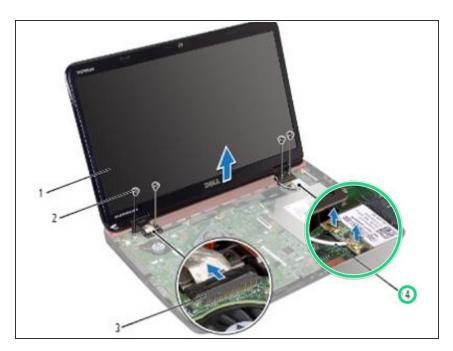


 Route the Mini-Card antenna cables through the routing guides.

Step 8 — Connect the Display Cable



 Connect the display cable and touch-screen cable to the connectors on the system board.

Step 9 — Replace the Screws

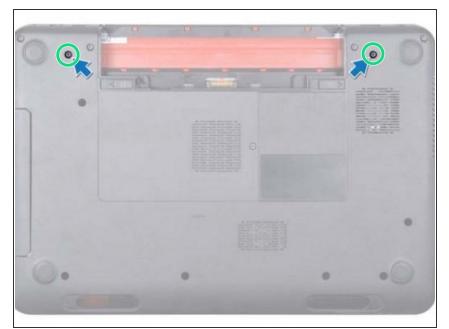

 Replace the two screws that secure the display assembly to the computer base.