



Opening the Hood

Opening the hood is required to access the...

Written By: Shaun MacDonald



INTRODUCTION



Opening the hood is required to access the engine bay and perform many vehicle maintenance tasks.

Step 1 — Opening the Hood




- Locate the hood latch beside the driver's side door, next to the left foot rest.
- Pull the latch toward you to release the hood.

Step 2

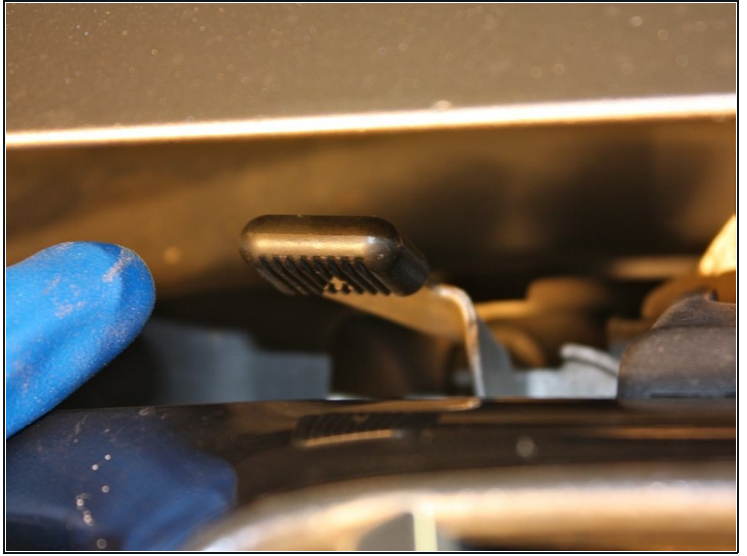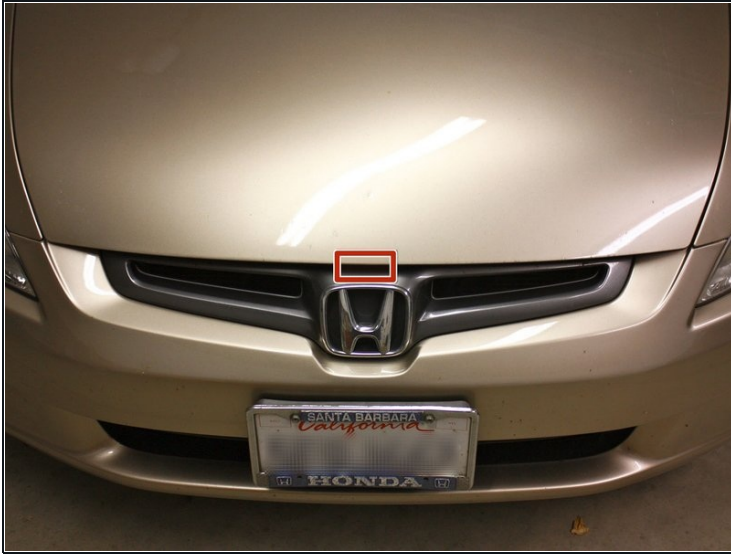

- Walk around to the front of the vehicle.
- Slide your hand under the hood, directly above the Honda emblem. Locate and pull the hood tab to unlock the hood.
- Once the tab is released, lift the hood up.

Step 3

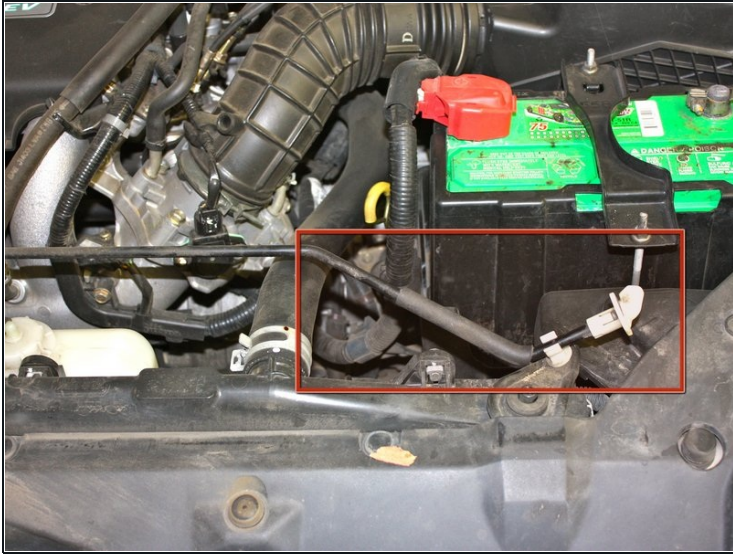

- Use your left hand to hold the hood up. Locate the hood stand and pull it out of the clip.
- Place the tip of the hood stand into the hole located in the upper left of the hood.
- You can now let the hood rest on the stand.

To reassemble your device, follow these instructions in reverse order.