



Corsair Katar Scroll Wheel Replacement

This guide will show how to replace the scroll wheel on a Corsair Katar mouse.

Written By: Margaret Loughren



INTRODUCTION


If the scroll wheel on your Corsair Katar mouse is not working properly, this guide will demonstrate how to replace it.



TOOLS:

- [JIS #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Corsair Katar Disassembly

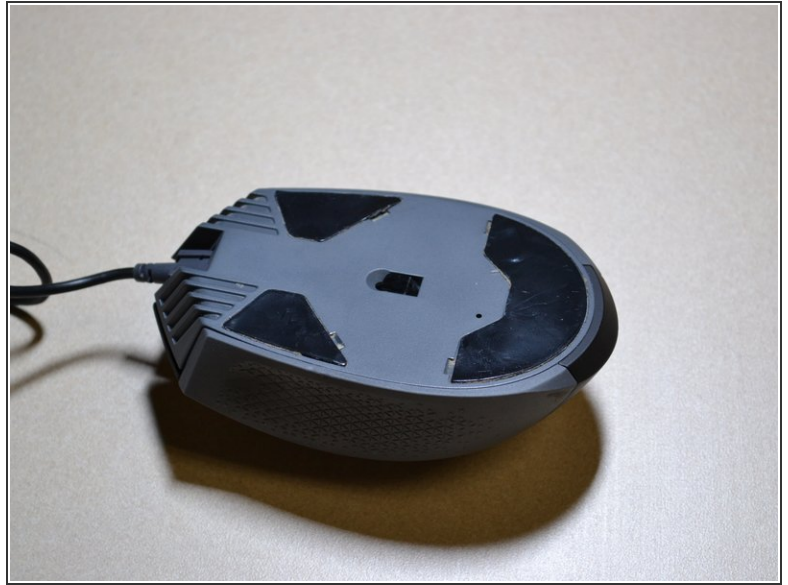

⚠ Unplug your mouse before starting.



- Flip the mouse over so the bottom is facing up.

Step 2




- Remove the three skates on the bottom of the mouse using the plastic opening tools.
- ⓘ Skates will be very sticky.

Step 3

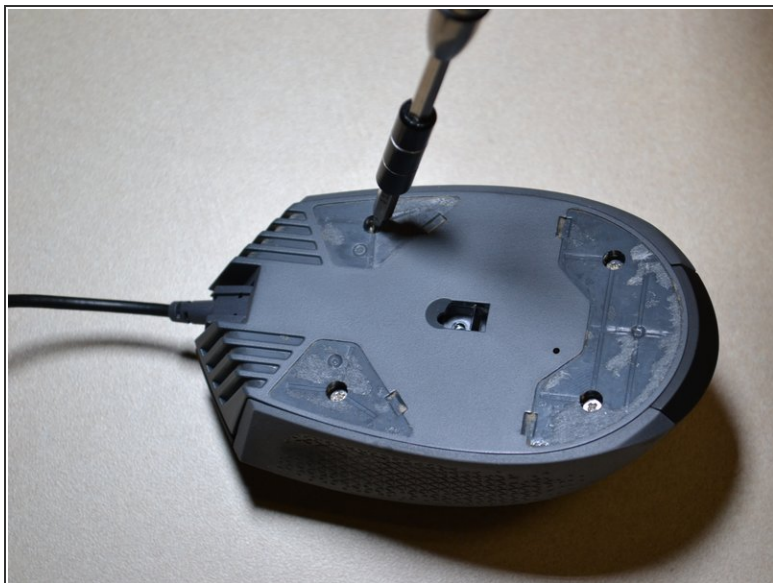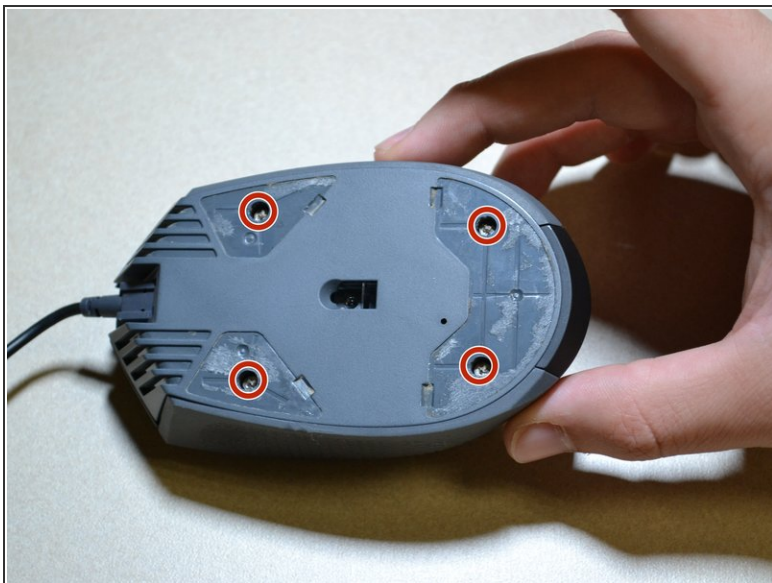


- Use the JIS 0 screwdriver to remove the four 5 mm screws on the bottom of the mouse.

Step 4

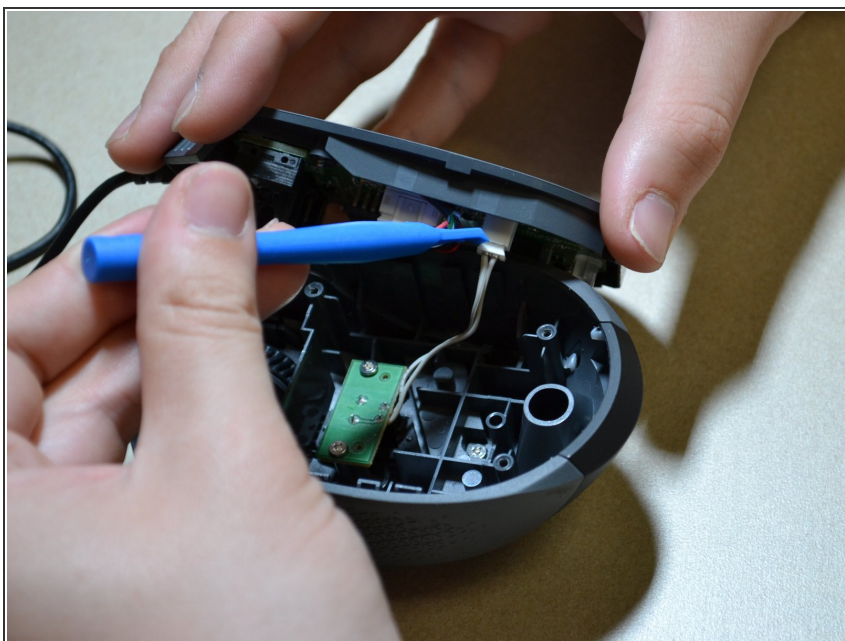

- Detach the bottom of the mouse from the upper shell.
- ⚠ Remove the shell slowly so as not to damage the white DPI cable inside the mouse.
- Use the plastic opening tool to detach the white DPI sensor cable from its port.
- ⓘ Alternatively, you can use your hand to remove the DPI sensor cable by wiggling it out of the port.

Step 5 — Scroll Wheel

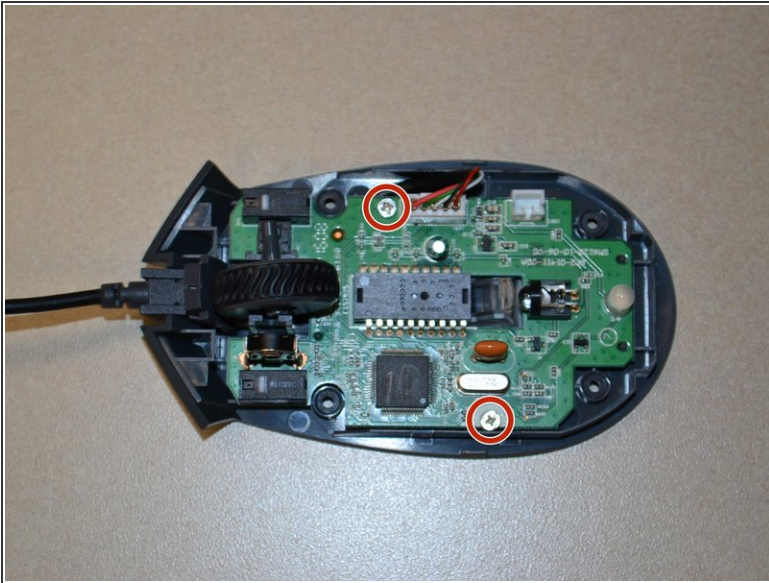


- Use the JIS 0 screwdriver to remove the two 5mm screws on the motherboard.

Step 6



- Use the plastic opening tool to pry the white cable jack away from the motherboard.
- Lift the motherboard away from the bottom of the mouse.

Step 7

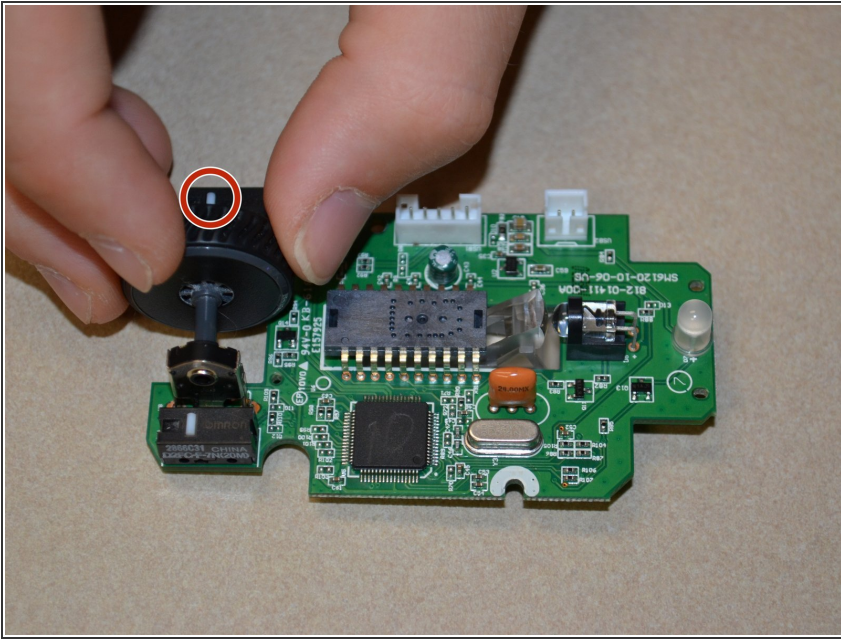

- Push the scroll wheel to the right side of the motherboard as shown, then pull it away from the board to remove.

To reassemble your device, follow these instructions in reverse order.