

INTRODUCTION

Use this guide to repair the clear indicator light. This guide will help you through replacing the light bulb.

TOOLS:


Electrical Tape in 6 Assorted Colors (1)

Large Needle Nose Pliers (1)

Phillips #0 Screwdriver (1)


Step 1 — Indicator Light



 **Make sure toaster is unplugged.**


- Turn toaster upside down so screws on bottom side are facing toward the ceiling and the door is facing towards you.

Step 2

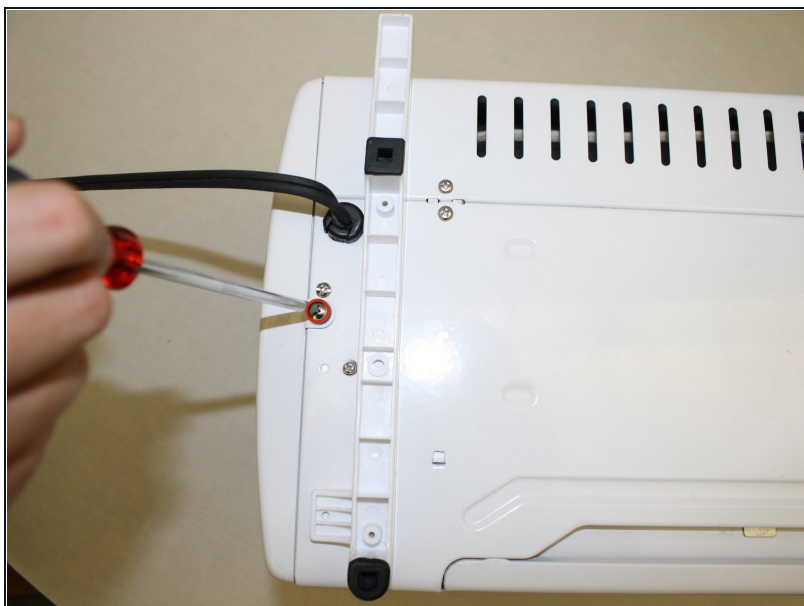


- On the left hand side, unscrew the middle screw.

Step 3

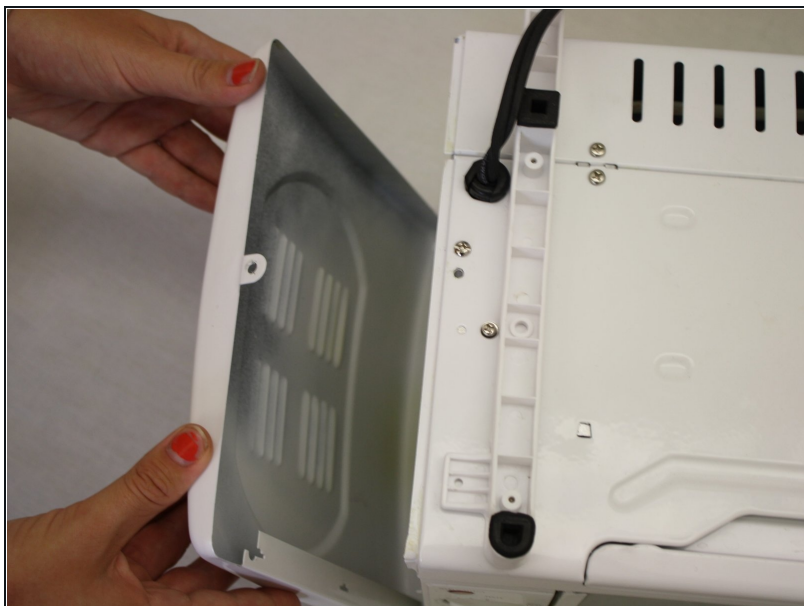



- Remove the panel on the left hand side. The indicator light is located in the red tube that has wires covered by black tubing coming out.

Step 4

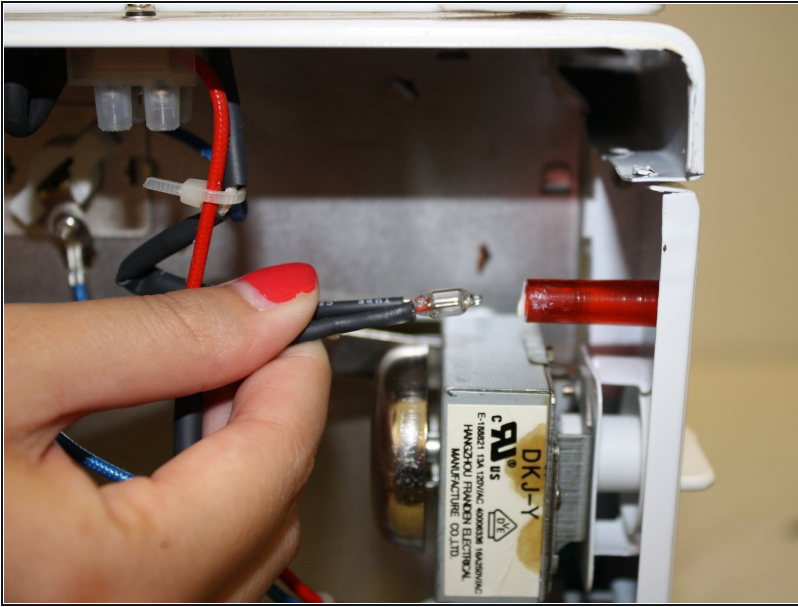


- Pull the black wires to remove the indicator light from the red tube.

Step 5

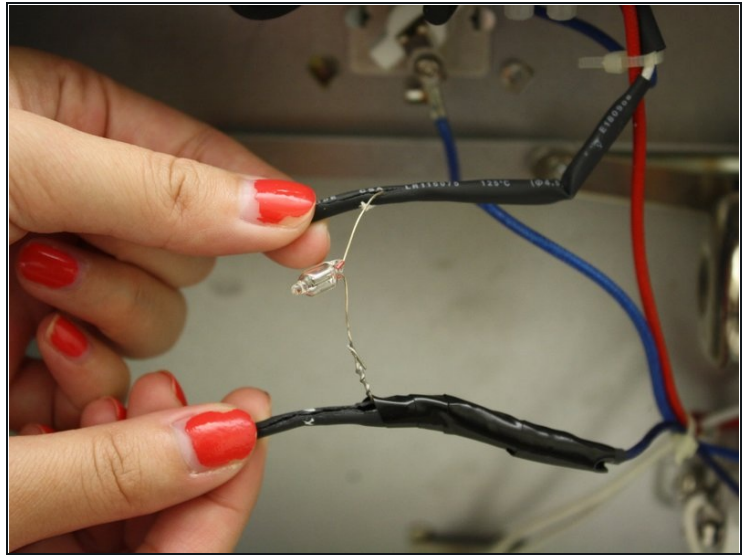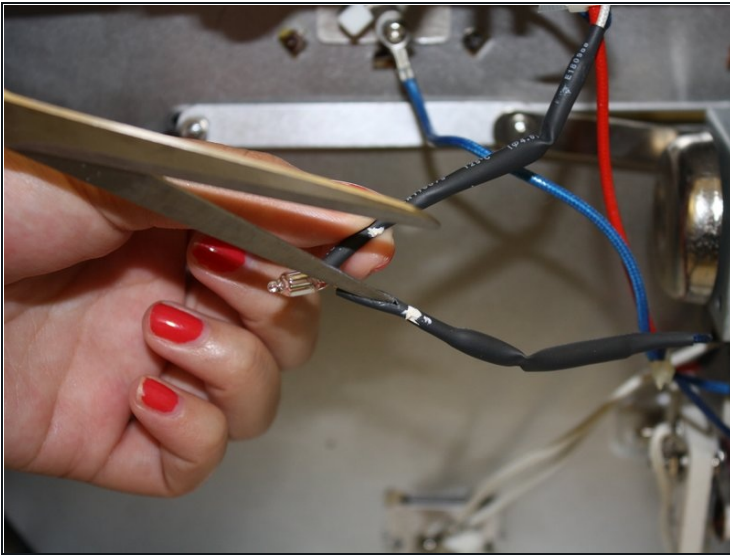


- Use scissors to cut open cord sheathing and peel back.

Step 6

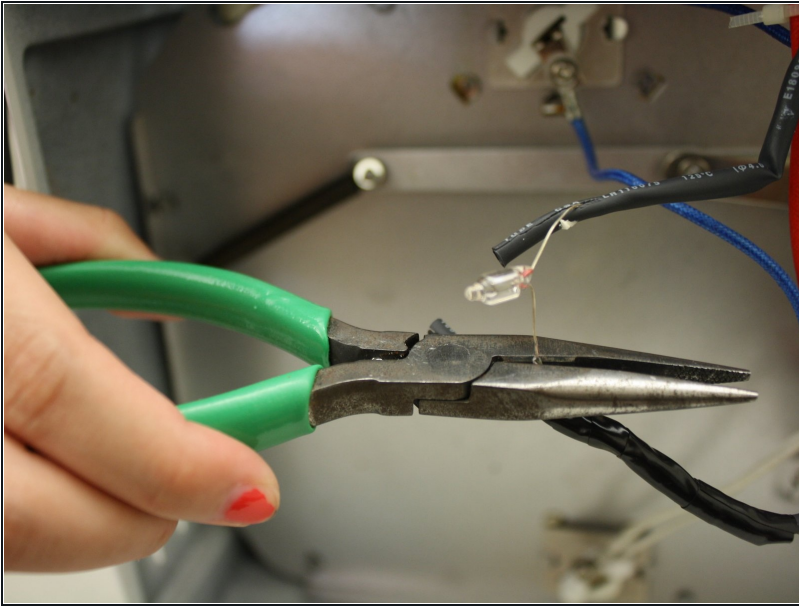


- Use the wire-cutters to remove the light bulb.

Step 7

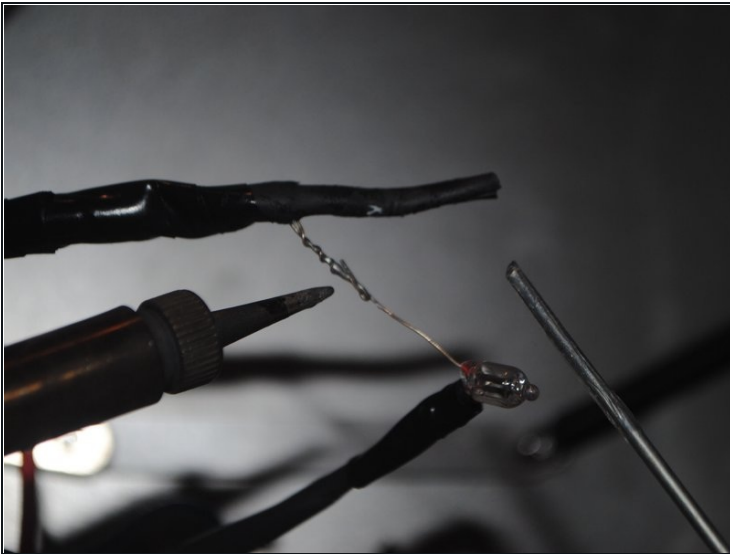


- Solder the replacement light bulb back onto its original position.

Step 8

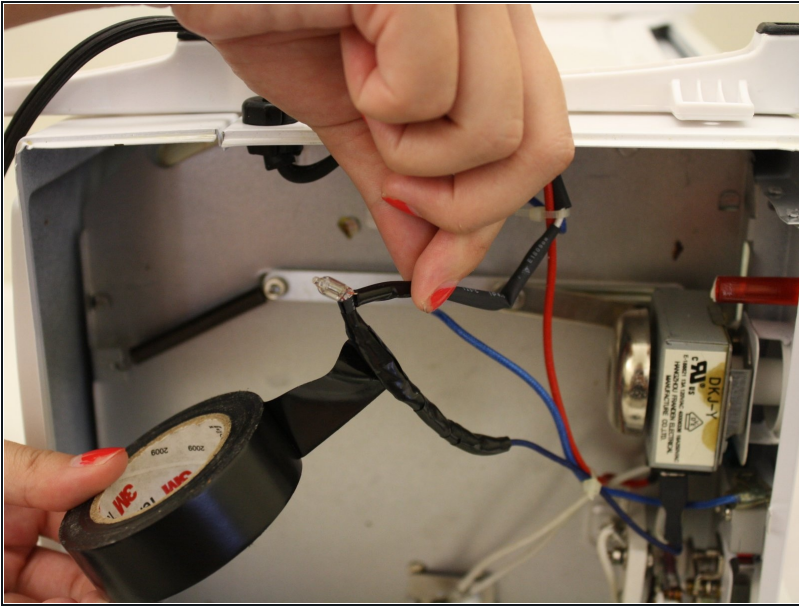

- Use electrical tape to reseal the sheathing.

Step 9

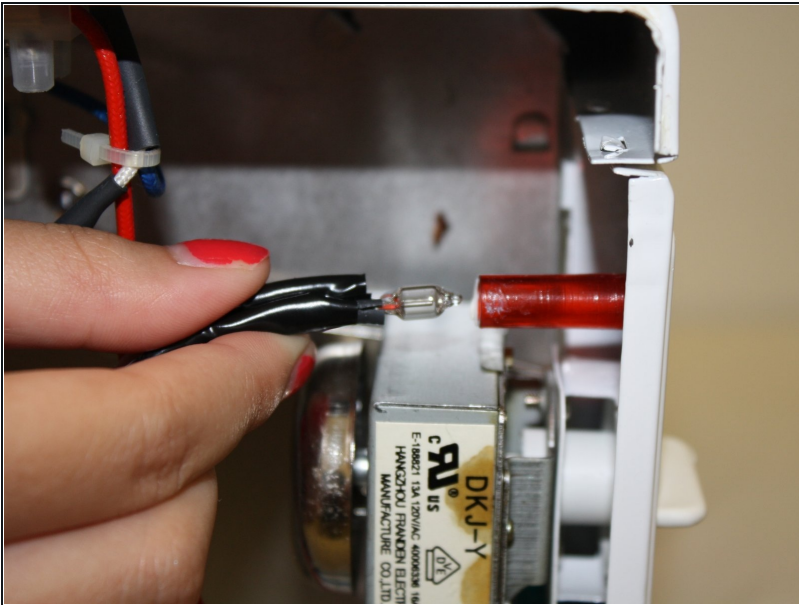


- Reinsert the indicator light back into the red tube.

Step 10



- Turn toaster upside down so screws on bottom side are facing toward the ceiling and the door is facing towards you.

Step 11

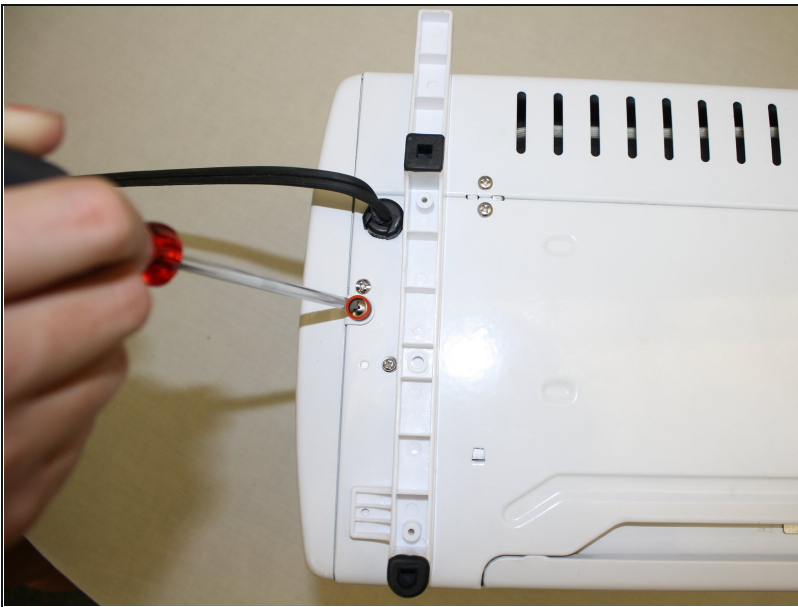

- On the left hand side, screw the middle screw back in.

To reassemble your device, follow these instructions in reverse order.