



# Dishwasher Bosch Ascenta SHE3AR55UC 08

## Disassembly

Stopped washing. Display goes from Active to Clean within 1 min and no action

Written By: Wolfgang

### INTRODUCTION

Dishwasher stopped washing. No pump sound. Display goes from Active to Clean in about 1 minute.



#### TOOLS:

- [Slip Joint Pliers](#) (1)

## Step 1 — Dishwasher Bosch Ascenta SHE3AR55UC 08 Disassembly



- Cause: pump impeller blocked. .

## Step 2



- Pump impellor blocked

### Step 3



- Take out water with a cup or turkey baster and sponge.

### Step 4



- Take out filter: left turn the cylindrical filter, take out the silver flat filter, drain water with sponge or turkey baster. Then remove white plastic part front/right by pulling out the long latch horizontally with pliers and then pull the plastic up.

## Step 5



- That gives access to the impeller. Make sure it is not blocked. In my case there was a broken piece of glass that blocked it. Make sure it turns freely.. Replace everything - should work now.

To reassemble your device, follow these instructions in reverse order.