



# Acer Aspire R7-572-6423 Battery Replacement

Battery replacement guide for the Acer Aspire R7-572-6423 laptop.

Written By: Gavin Hill



## INTRODUCTION

The battery is internally located and requires disassembly in order to replace it.



### TOOLS:

- [Spudger](#) (1)
- [T9 Torx Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:


- [Acer AP13B3K and AP13B8K Replacement Laptop Battery](#) (1)

## Step 1 — Battery



 Turn off the laptop and disconnect the power adapter before attempting this guide. Failure to do so can result in a shock hazard.

## Step 2

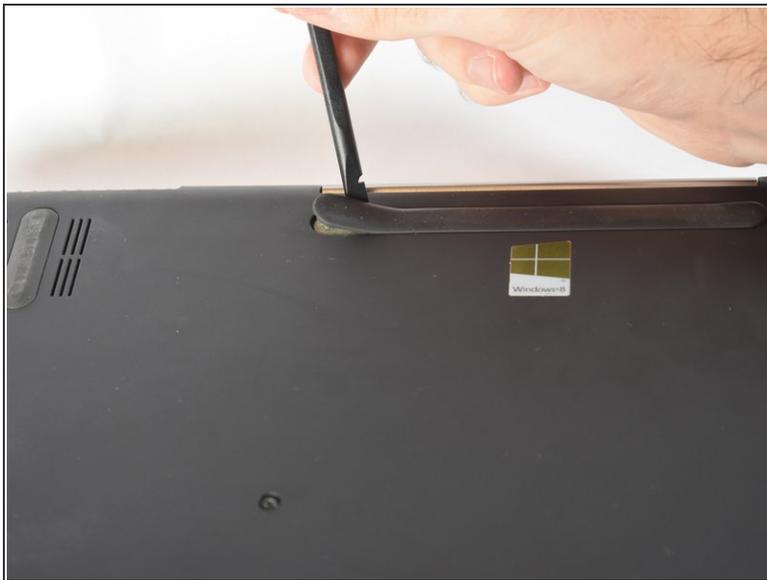

- Remove the top and middle rubber feet under the laptop to reveal hidden screws.

### Step 3




- Remove the five 6 mm T9 screws.
- Remove the eight 10 mm T9 screws.

### Step 4




- Remove the back cover.

## Step 5

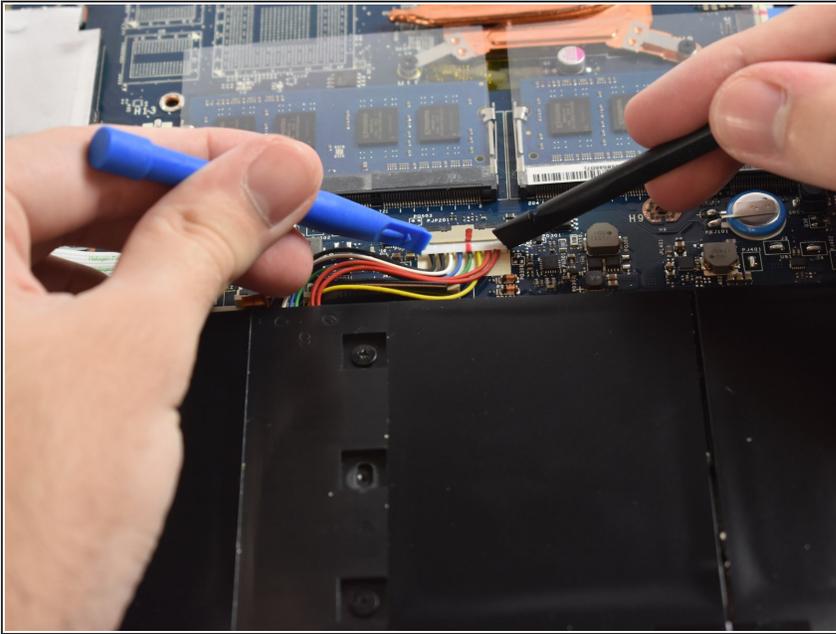



- Unplug the ribbon cable connecting the battery to the motherboard.
- ⚠ Be careful around the motherboard, as it is easily damaged.

## Step 6

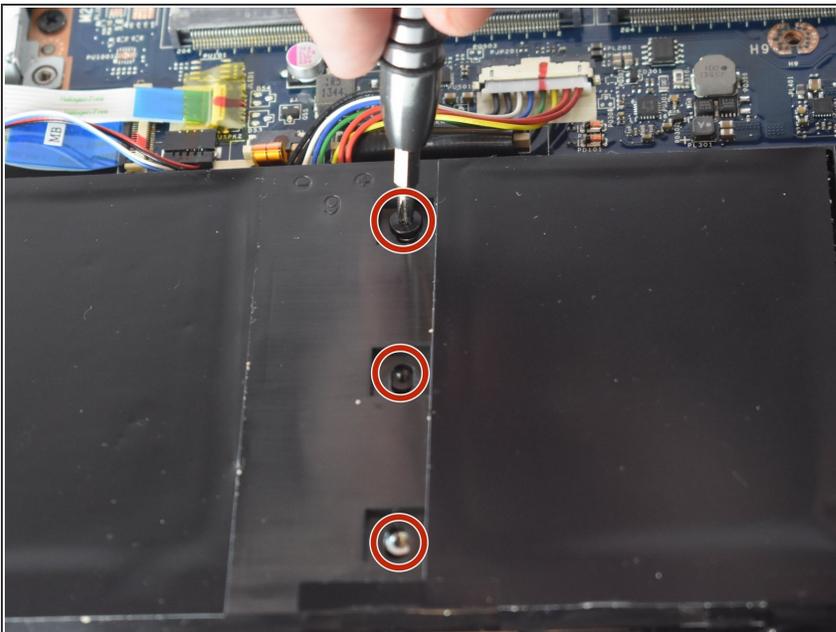

- Remove the three 4 mm Phillips #1 screws securing the battery.

## Step 7

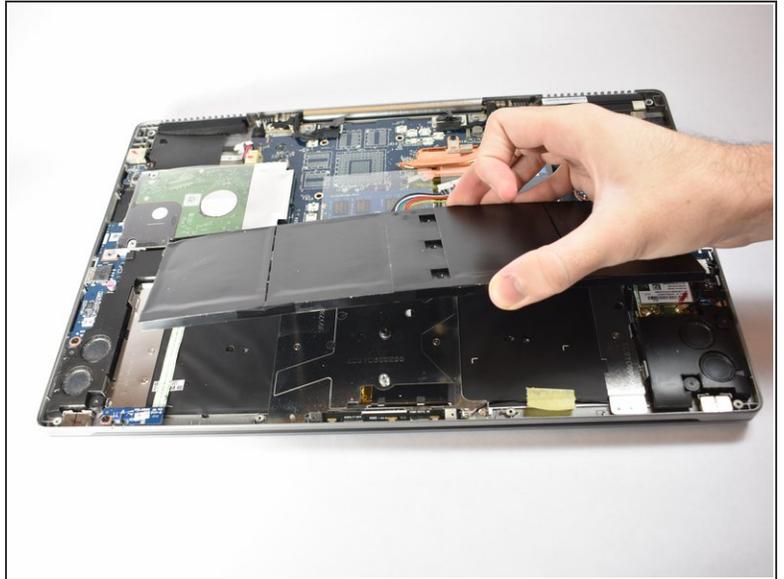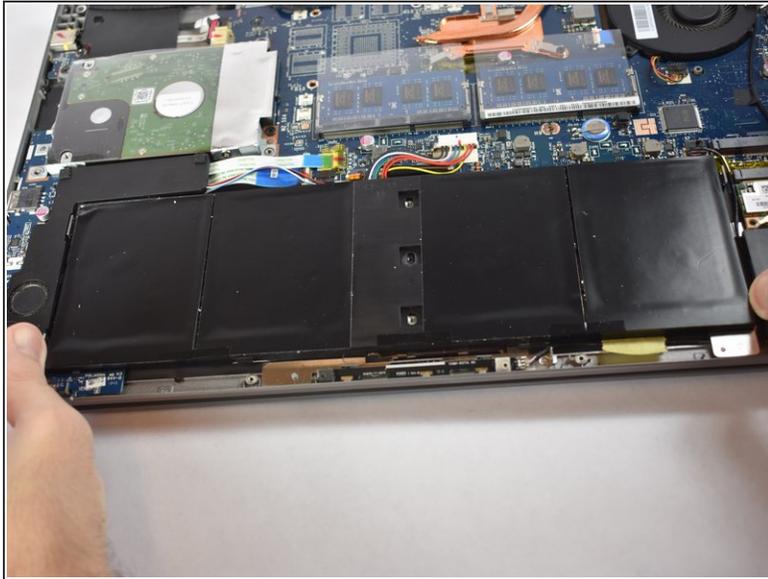

- Pull open the clips on either side of the battery to free it from the case.
- Remove the battery from the computer.

To reassemble your device, follow these instructions in reverse order.