



# Shark Flex DuoClean Side Component Replacement

How to take off the side components on the Shark Flex DuoClean Vacuum.

Written By: caoimhe



---

## INTRODUCTION

You will need a T10 Security Torx screwdriver and an iFixit Opening Tool to open the side components.

---

### TOOLS:

- [T10 Torx Screwdriver](#) (1)
  - [Metal Spudger Set](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Garage Door



- Open the garage door by sliding both of the release buttons away from you.
- Lift off the garage door.

## Step 2 — Side Component




- Remove the plastic screw covering using a metal spudger by pushing the sharp side into the crevice and prying the cover out.

### Step 3




- Turn the T10 Security Torx screwdriver counterclockwise to remove the 15mm screw.

### Step 4

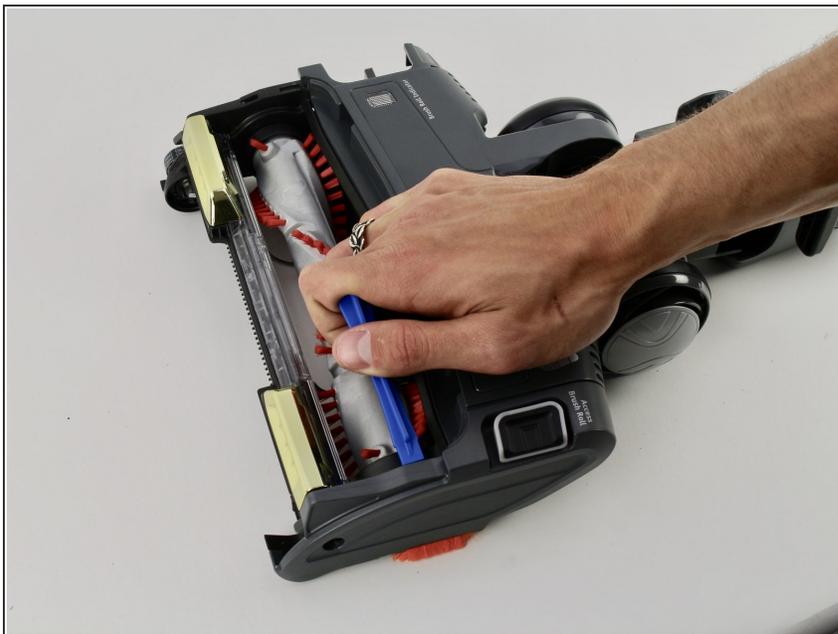

- Use the iFixit Opening Tool to pry the side of the vacuum open.

## Step 5

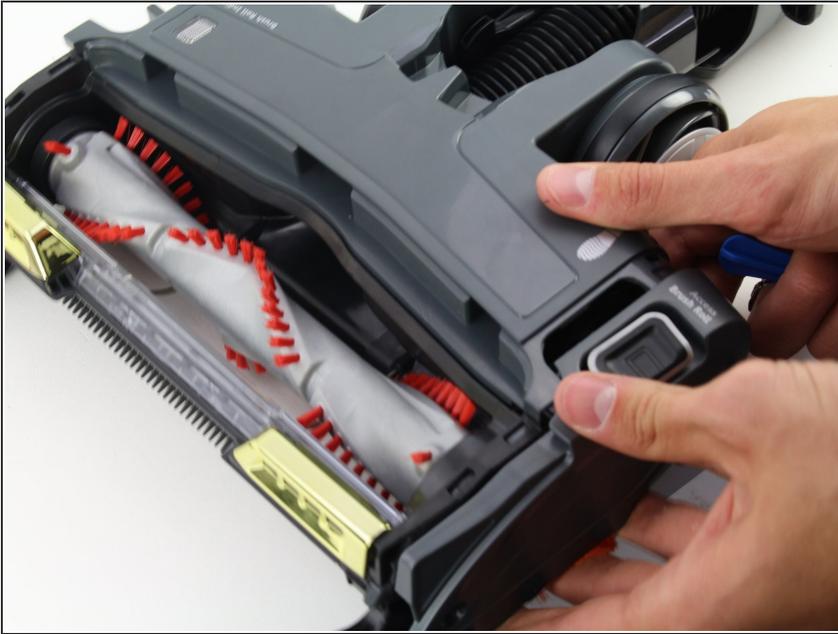

- Remove the side component with your hands.

To reassemble your device, follow these instructions in reverse order.