



Lenovo Ideapad Flex 4-1570 Hard Drive Replacement

If the laptop is lagging, and the mouse is slow...

Written By: Isaiah Vang



INTRODUCTION

If the laptop is lagging, and the mouse is slow to react, use this guide to replace your hard drive.



TOOLS:

T5 Torx Screwdriver (1)
Magnetic Project Mat (1)
iFixit Opening Tool (1)
Phillips #00 Screwdriver (1)



PARTS:


5H20J35762 - Lenovo Laptop Hard Drive - Genuine (1)
01FR402 - Lenovo Laptop Hard Drive - Genuine (1)

Step 1 — Back Panel



Shut down and unplug your laptop before you begin.

Step 2

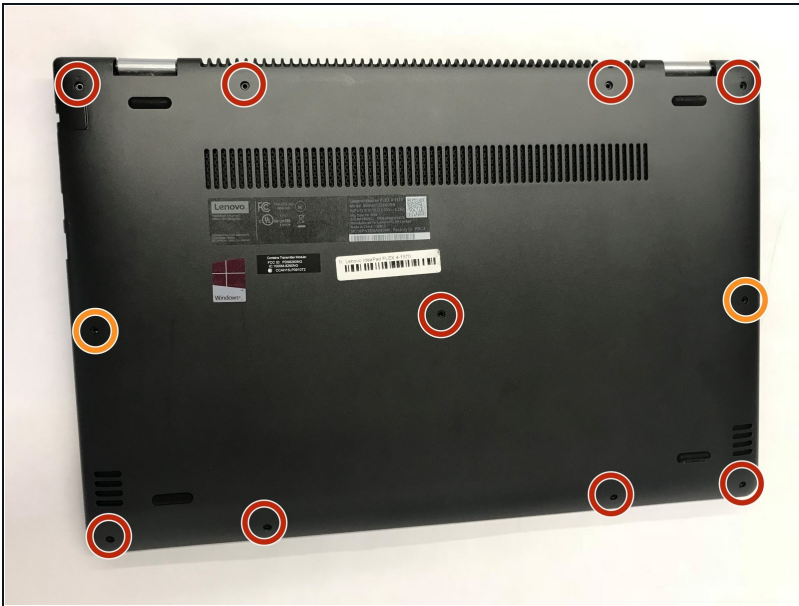


- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.

Step 3



- Use a plastic opening tool to carefully pry off the back cover.
- Remove the back cover.

 Step 4 — Hard Drive

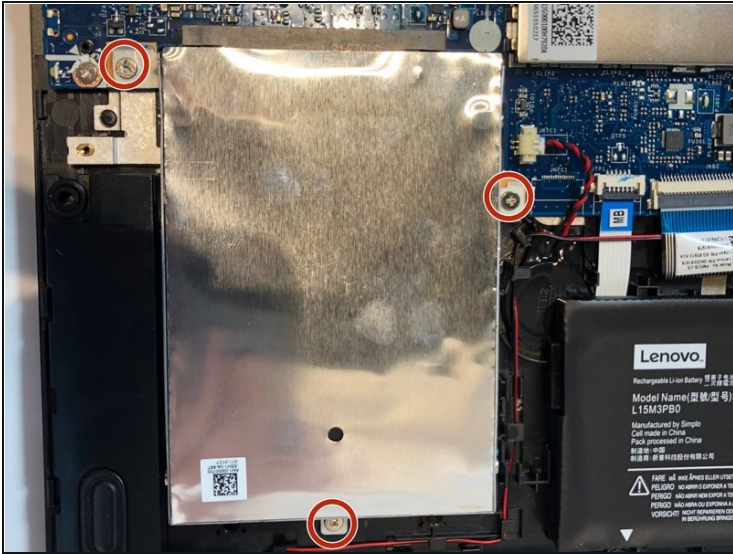

- Remove the three 4 mm screws using a Phillips #00 screwdriver.

Step 5



- Lift the hard drive up and out.

To reassemble your device, follow these instructions in reverse order.