


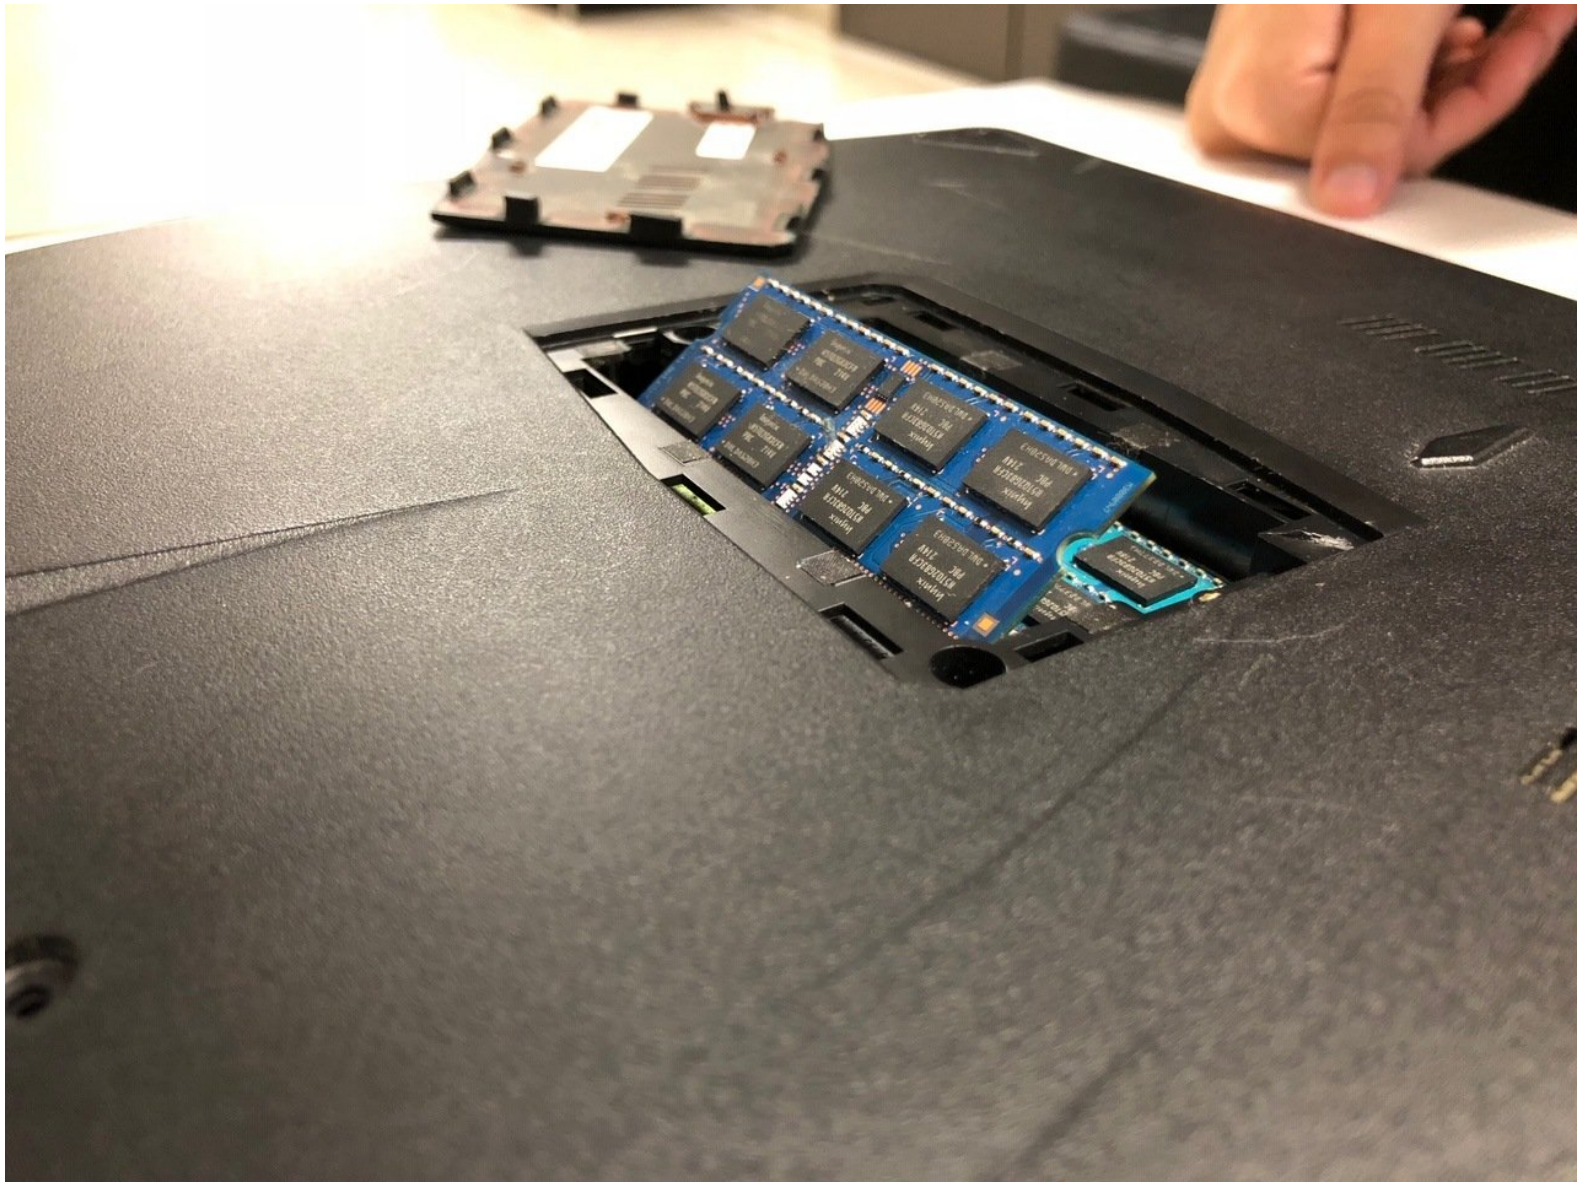

# ASUS ROG G46VW RAM Replacement

This guide will show you how to replace the RAM for your ASUS ROG G46VW

Written By: Amon Stewart



---

## INTRODUCTION


Before removing the RAM sticks, be sure you have a clean surface to place them on as they are sensitive to dust and dirt.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM

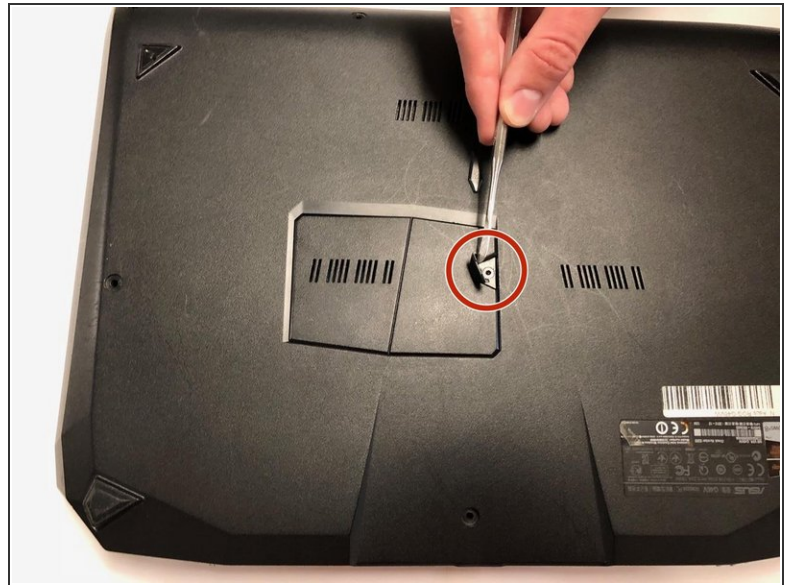

- Lift the screw cover and remove the screw using a Phillips #0 screwdriver.



## Step 2



- Remove the RAM cover by lifting the screw cover and pulling away firmly.




## Step 3

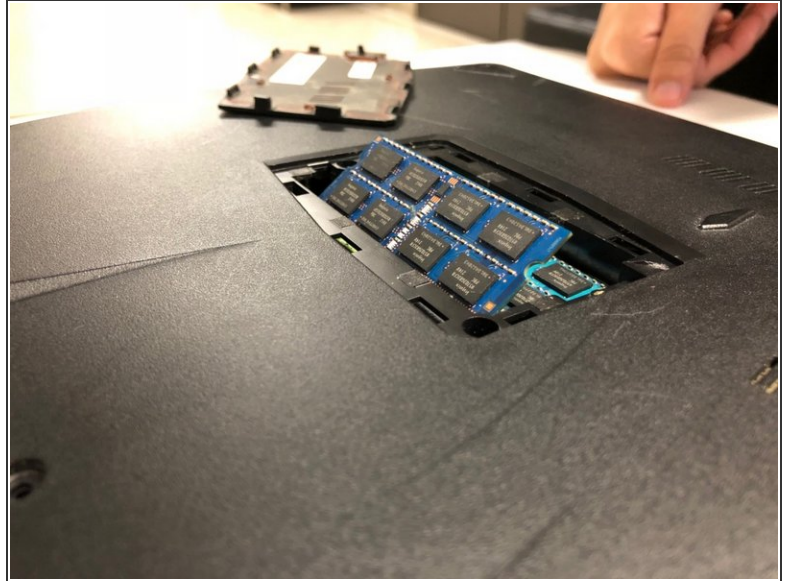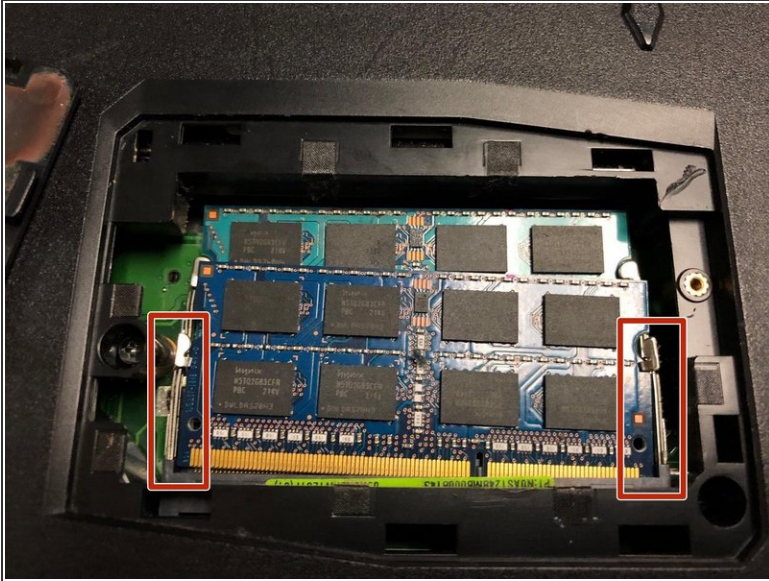

- Push outwards on the clips to release the RAM stick. The stick should pop up at an angle.


## Step 4

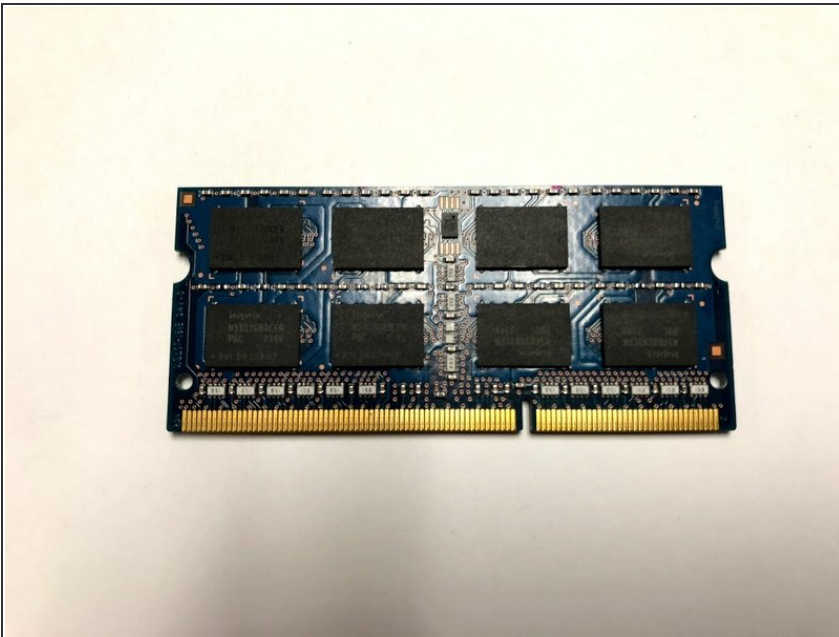

- Pull out the RAM stick carefully.

**⚠ Do not use a prying motion as this will damage the hardware. Be careful not to damage the gold section of the RAM stick.**

## Step 5

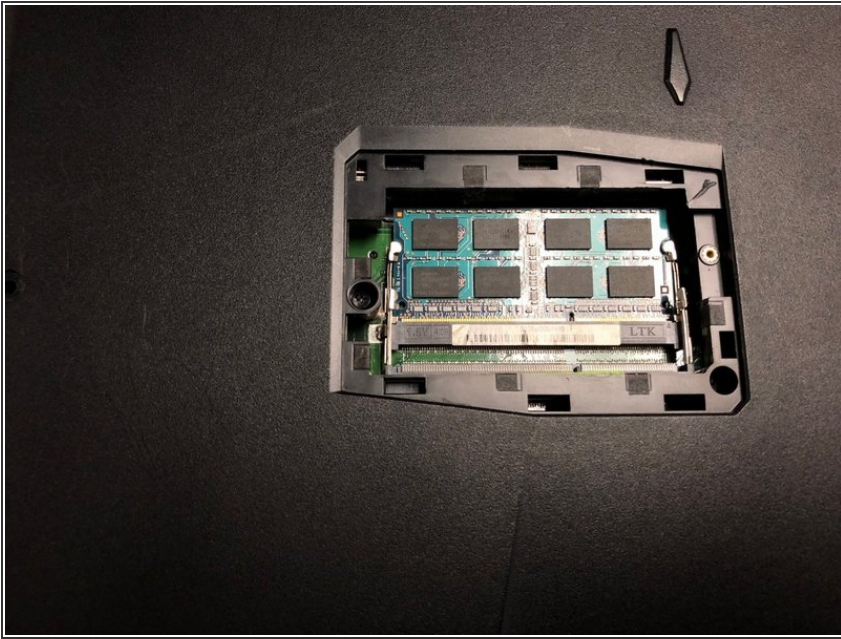

- Repeat steps 3-4 to remove the second RAM stick.

To reassemble your device, follow these instructions in reverse order.