



Atari Flashback 2 Reset and Select Button Replacement

This guide covers the steps necessary to disassemble and replace the reset and select buttons on the Atari Flashback 2.

Written By: Gabriel Robinson



This document was generated on 2020-11-14 05:24:50 AM (MST).

INTRODUCTION

If the button on an Atari Flashback 2 console is sticking or broken, then it will need to be cleaned or replaced. This guide covers the steps necessary to disassemble the console in order to access the buttons to do so.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Reset or Select Button



- Using the screwdriver and the PH1 bit, unscrew the five 10.0 mm screws on the bottom of the console.
- ⓘ One screw is under the main sticker in the middle of the console.

Step 2



- Unscrew the six 9.0 mm Phillips #1 screws on the brown circuit board that correspond to the reset and select buttons.
- ⚠ Remove gently. The circuit board is connected by wire to the console. Removing the cable from the console case may allow more slack.

To reassemble your device, follow these instructions in reverse order.