



# ASUS M51E-B2 Keyboard Keys Replacement

If your keyboard works but the response from your presses are slower than normal, or keys are sticking, you may need to replace your key covers.

Written By: Juston Brown



---

## INTRODUCTION

This guide demonstrates how to remove and replace the keys on your ASUS M51E-B2 laptop. Following this guide may help improve the response your keys receive.

---



### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard Keys



- Open the laptop.
- Press and hold the power button until the laptop powers on.

## Step 2

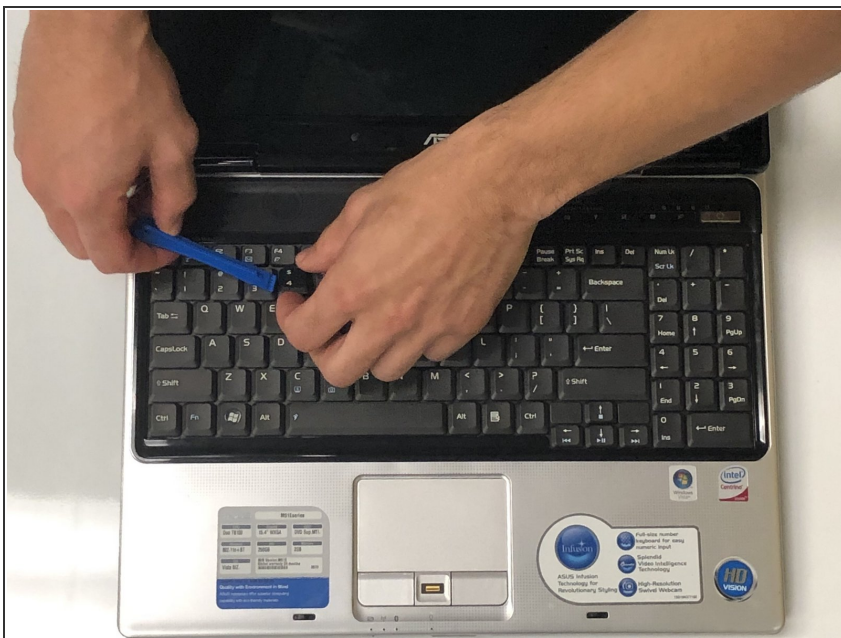

- Use your fingers and the blue 3.5 inch opening tool to gently pry off the problem keys.
- Press the new key into place using your fingers.

To reassemble your device, follow these instructions in reverse order.