




DJI Phantom 4 Advanced Remote Controller

Battery Replacement

The battery is attached to the back plastic and is towards the bottom the remote. First unplug the cord connected to the battery.

Written By: cade knott

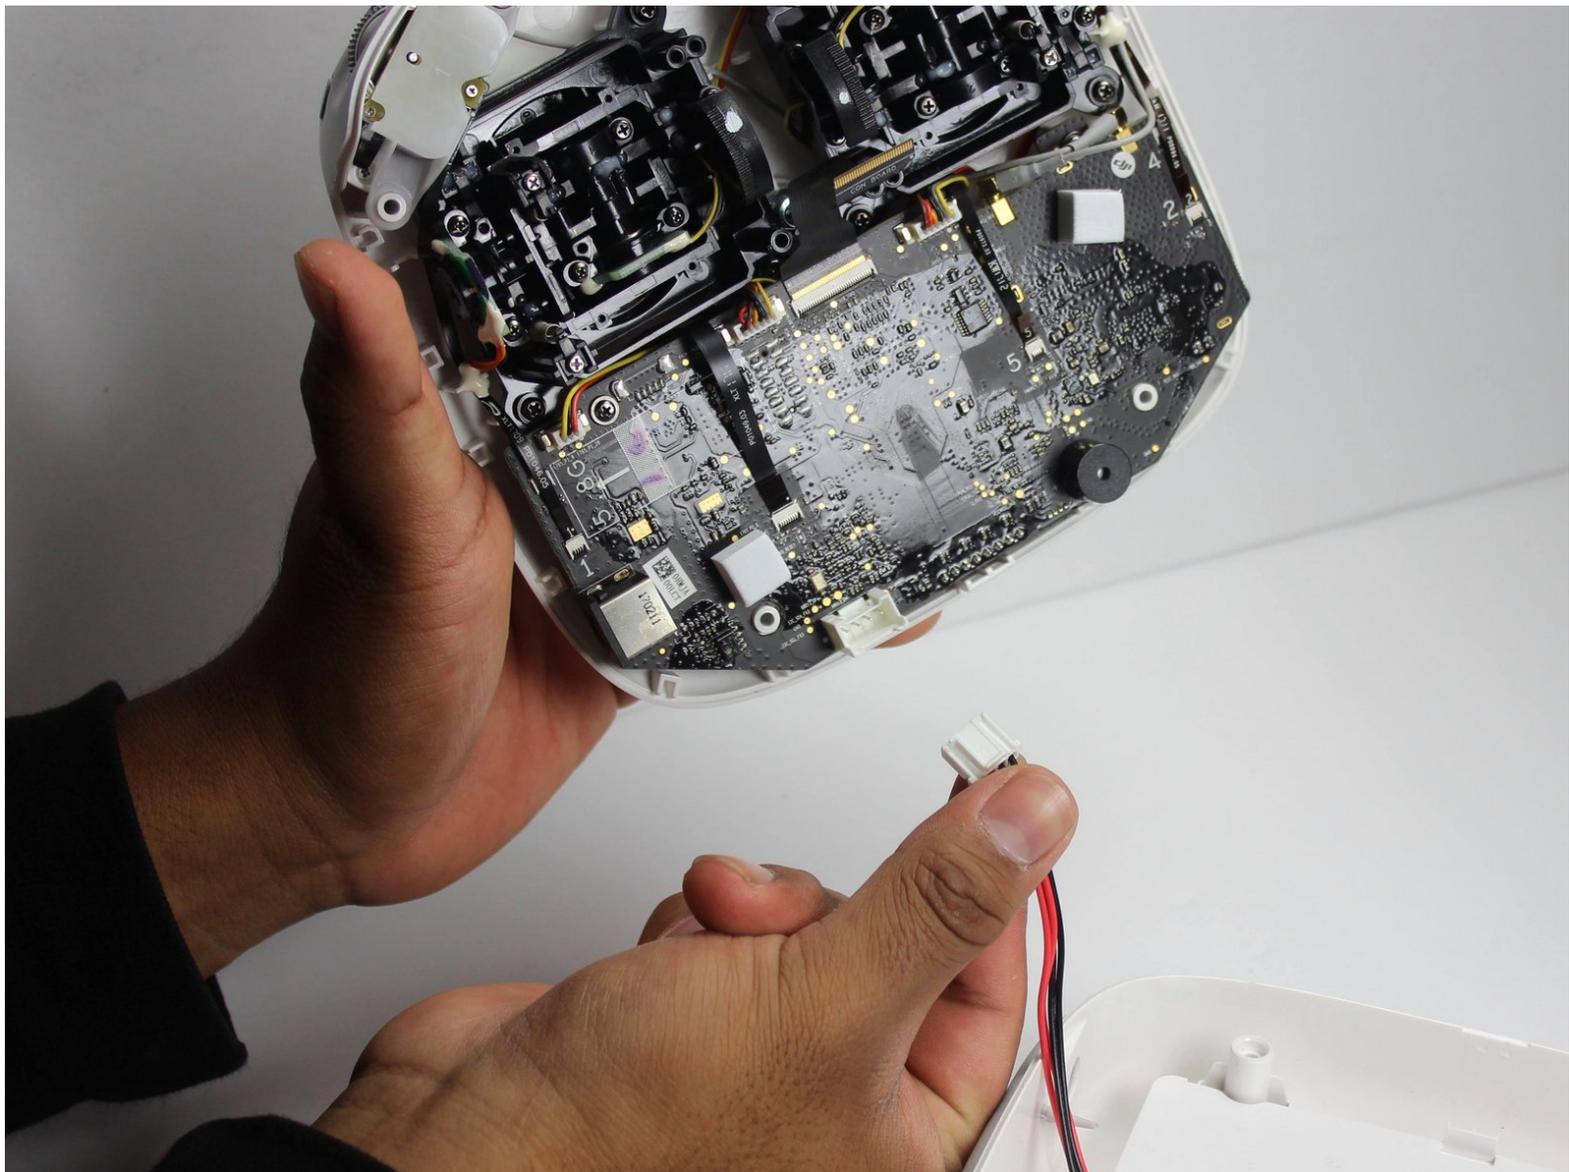

INTRODUCTION

The battery can be considered the heart of the device. Without it, the devices will not work and will be useless.

So that your enjoyment does not get ruined by a dead battery, this guide provides instructions on how to replace the battery on the DJI Phantom 4 Advanced Remote Controller.

TOOLS:


- [Spudger](#) (1)
 - [T8 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel



- Remove the four screws with a Torx T8 screwdriver to access the back con board.

Step 2

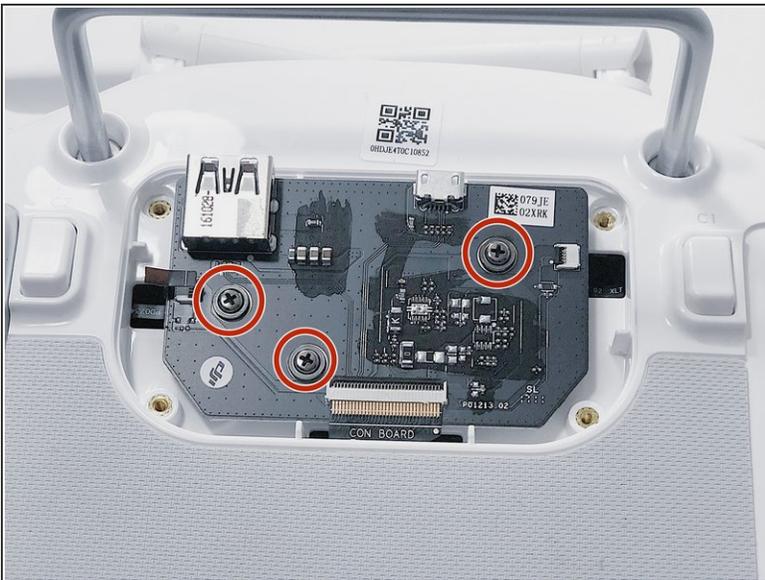


Phillips #00 screwdriver.



- Remove three screws using a Phillips #00 screwdriver.

Step 3

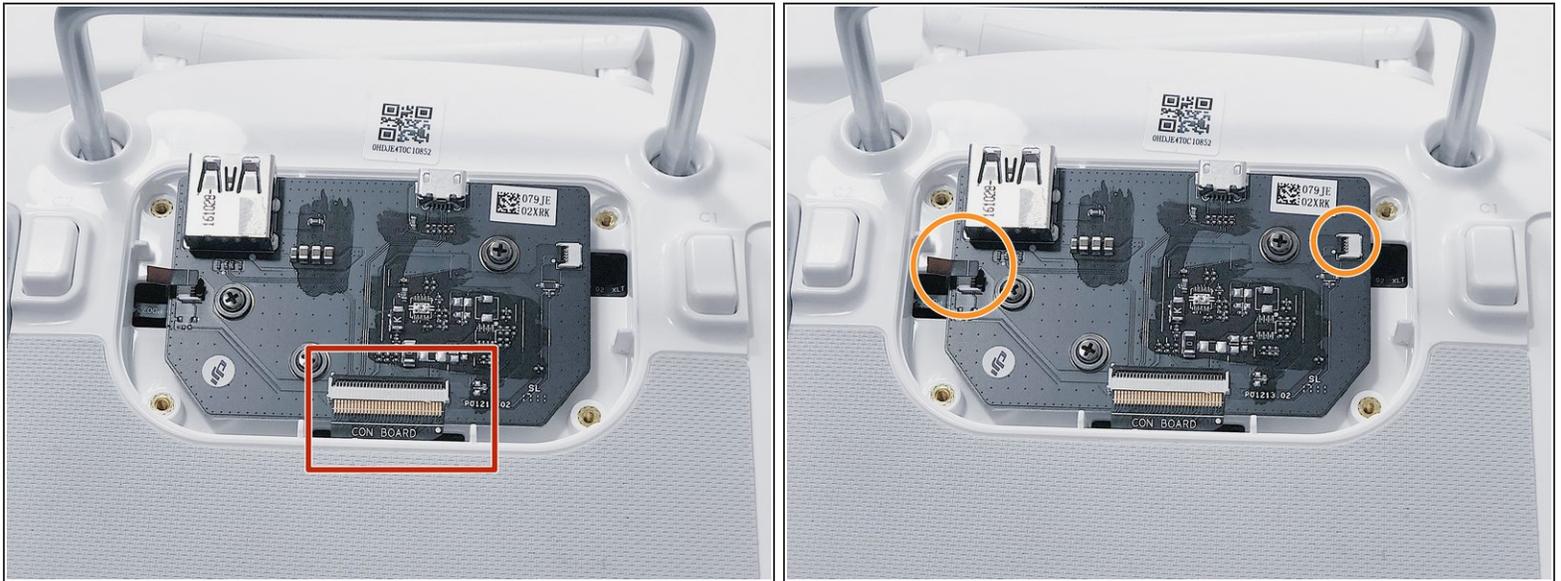

- With tweezers, gently remove the large con board tab.
- Use your hands to remove the two small clips. Pull out from the socket, in a horizontal direction.

Step 4




- Peel off the rubber grips to access the screw holes.

⚠ Make sure to save your grips and do not to get them stuck to anything, you are going to want to save the adhesive.


- Remove the back board and set it aside.

Step 5

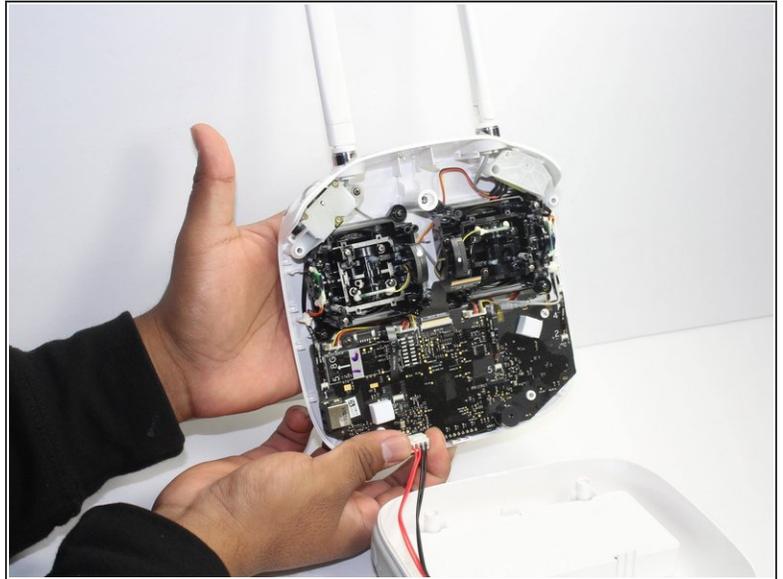


- Pull apart the back plastic panel.
- ⓘ Recommended tool for this would be the metal spudger, but not required.
- Once the back panel is off, you will have access to the motherboard.

Step 6 — Battery

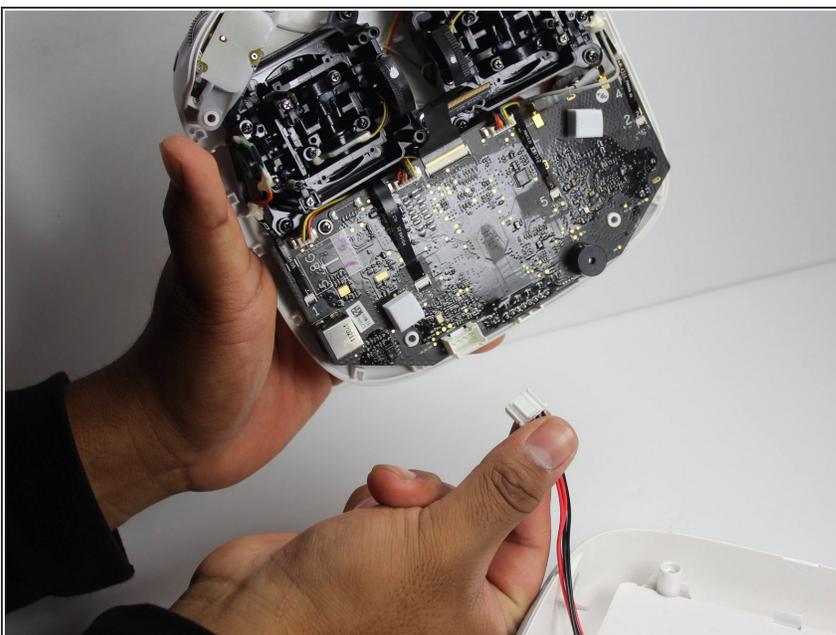

- ⓘ The battery is attached to the back plastic, and is towards the bottom of the remote.
- Unplug the cord that is connected to the bottom of the main board.

Step 7

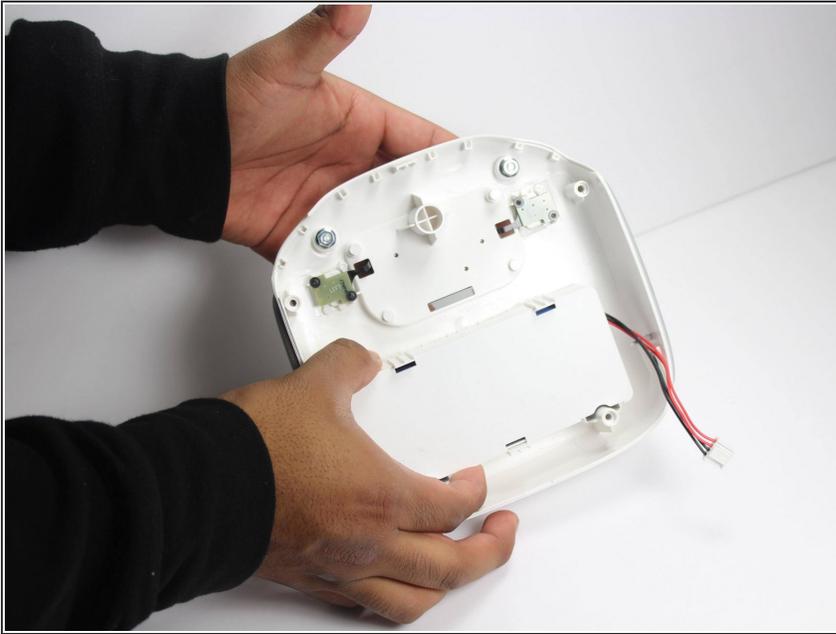

- After the cord is unplugged, remove the battery by lifting upon the plastic cover, which the battery is attached to.

Step 8



- Once the cover is off you can access the battery.

To reassemble your device, follow these instructions in reverse order.