


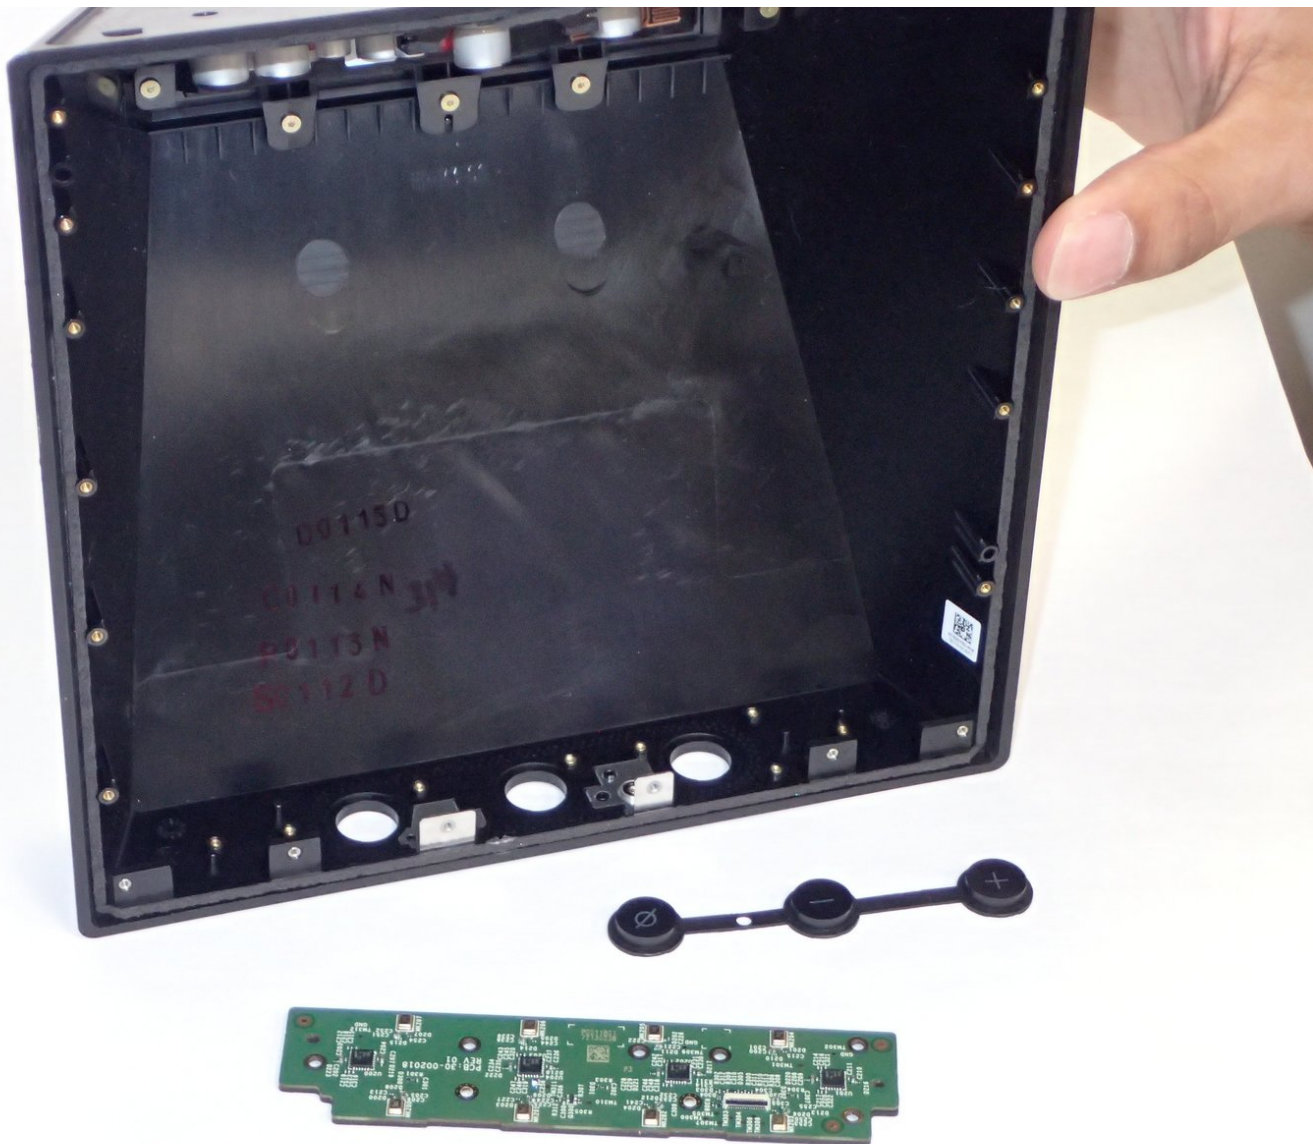

# Amazon Echo Show Back Cover Replacement

How to replace the Amazon Echo Show back cover.

Written By: Christina Simone



---

## INTRODUCTION

Most replacement guides will require you to open up the Alexa to access components, so following this guide will let you access the internal components quickly and safely.

---



### TOOLS:


- [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Using your hands, gently remove the taped-in rubber foot from device.

## Step 2

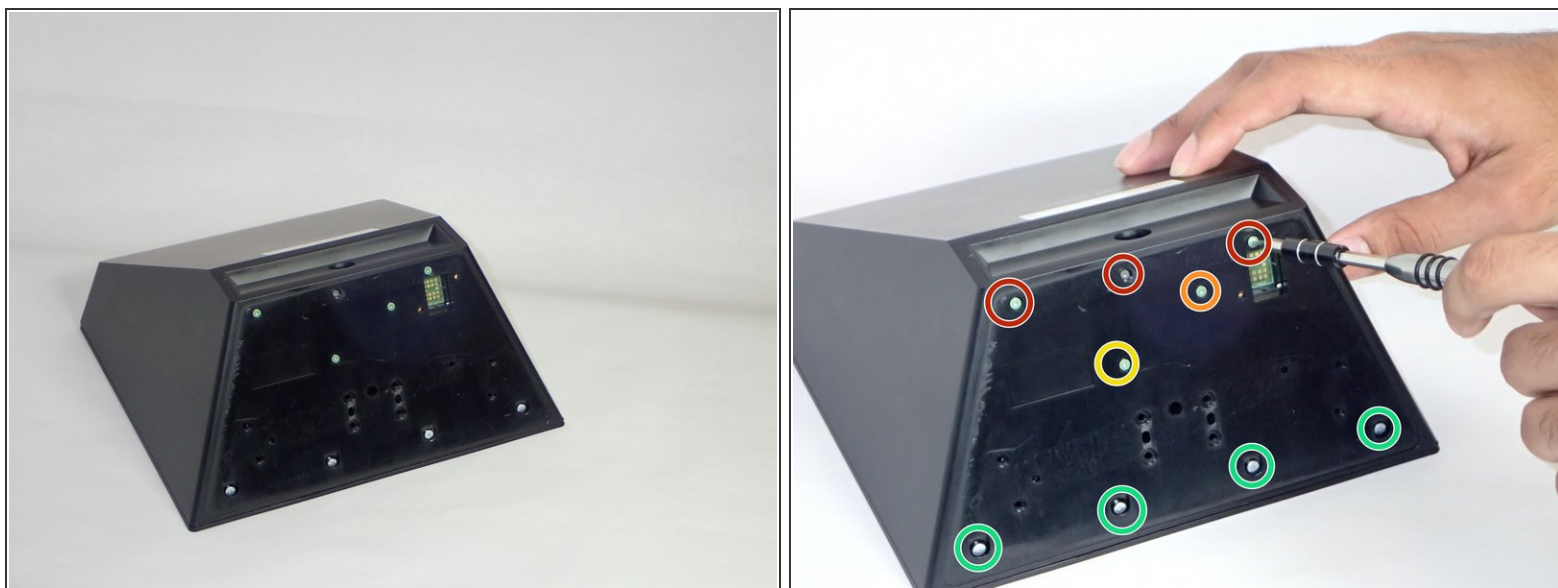

- Carefully peel off the bottom pad to expose the fastening screws.
- Remove three silver 1.4 T5 Torx screws on the top row.
- Remove one green 1mm T5 Torx screw in the middle.
- Remove a black 1.5mm T5 screw.
- Remove three green 1mm T5 screws from the bottom row.


### Step 3



- After the screws are removed, grip the front panel and remove, using a plastic opening tool if necessary. This will expose the inside of the device.



## Step 4

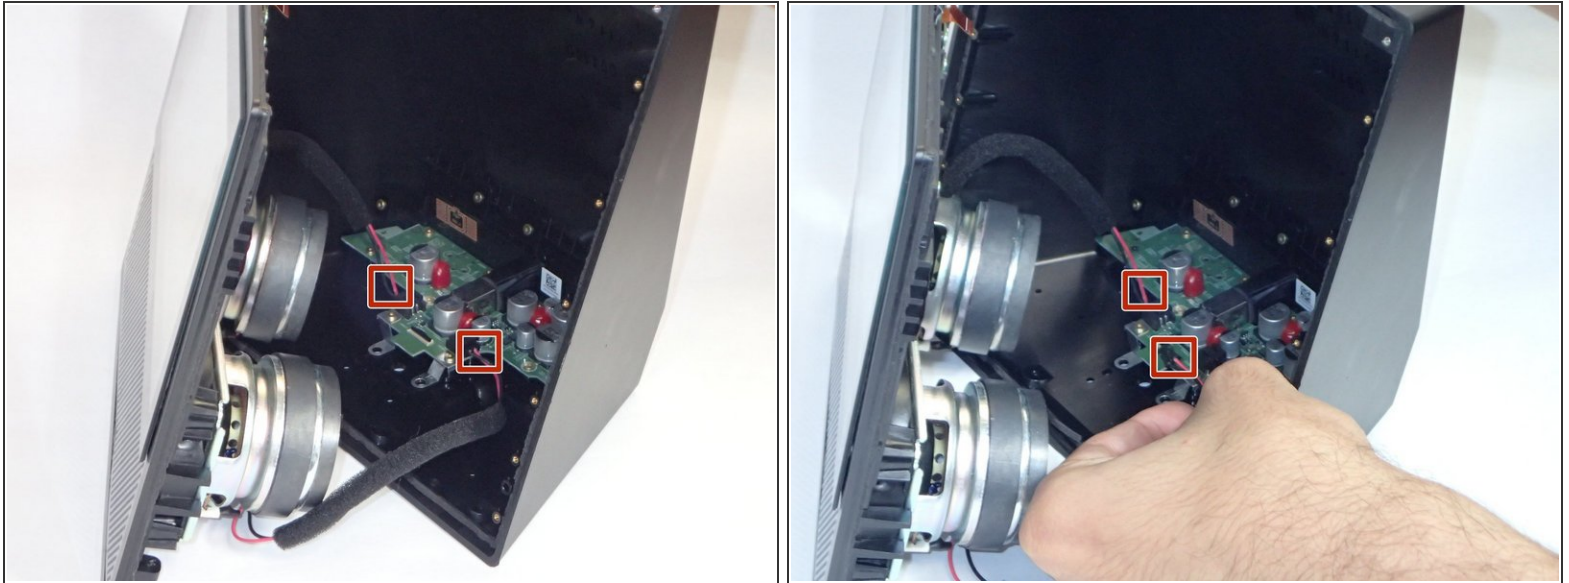

- Use tweezers or your hands to carefully disconnect the red wires connecting the speakers to the power supply board.
  - Repeat this step for the other speaker, and lay the front section flat with the facing down.
- ⚠ Make sure to ground yourself against a metal object nearby (ex. a metal chair, a door frame) before you touch any circuitry. An accidental static discharge can permanently damage a circuitboard.

To reassemble your device, follow these instructions in reverse order.