



OnePlus 5 Earpiece Speaker Replacement

Remove and replace a defective earpiece speaker for the OnePlus 5.

Written By: Arthur Shi



INTRODUCTION

Follow this guide to remove and replace a defective earpiece speaker for the OnePlus 5. This requires removing the motherboard. The hardest part of the guide is getting the frame clips free.


Some guide images will show the battery and rear-facing camera module already removed from the phone. You do not need to remove them for this procedure.



TOOLS:

- [SIM Card Eject Tool](#) (1)
 - [T2 Torx Screwdriver](#) (1)
 - [Suction Handle](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — SIM Card Tray

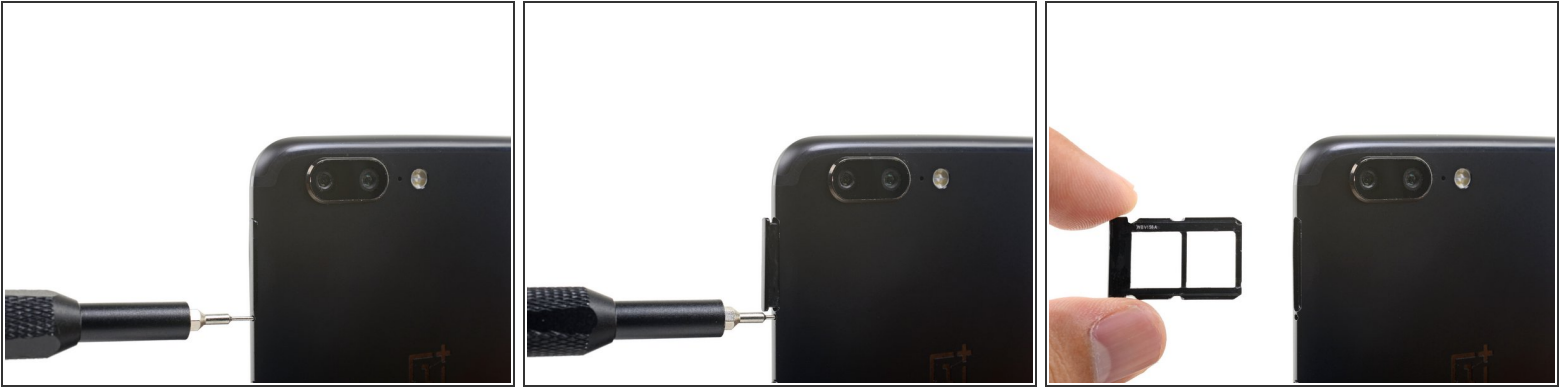

- Insert a SIM card eject tool, bit, or a straightened paperclip into the small hole below the SIM card tray, located near the rear cameras on the edge of the phone.
 - Press firmly to eject the tray.
- ☒ During reassembly, be sure to properly orient the SIM tray you you insert it.

Step 2 — Back Cover



- Remove the two 2.6 mm T2 screws straddling the USB-C port on the bottom edge of the phone.

Step 3



⚠ There is a high risk of damaging the display panel if this opening procedure is improperly followed.



i The following four steps show how to pry the rear case from the plastic frame. Read through the steps first before attempting the procedure.

⚠ There are two different seams between the body and the screen of the phone:

- *Display panel seam*: This seam is part of the display assembly. **Do not pry** at this seam, or you will separate and damage the display panel.
- *Frame seam*: This is where the plastic frame meets the back cover. **Only pry at this seam.**
- There are twelve clips that hold the frame against the rear case. Be aware of their location as you pry the back cover off in the following steps.

Step 4



-  As you work, try not to accidentally power on the phone. If you do, turn the phone off before resuming disassembly.
- Place a suction cup near the bottom edge of the display.
 - Pull on the suction cup with strong steady force.
 - Press the edge of an opening tool straight into the frame seam near the suction cup until the edge wedges between the plastic frame and the back cover's lip.
-  Due to tight tolerances, this will take substantial force. Using a new opening tool with an unmarred edge will help with this step.

Step 5



- Once the opening tool's edge is wedged in position, carefully slide the tool along the bottom edge of the phone.
- Carefully guide the opening tool around the left corner of the phone while keeping the tool's edge within the seam.

Step 6



- Lever the opening tool to release the first clip from the frame.

Step 7





- Continue sliding the opening tool along the long edge, releasing the clips along the way.
- ⓘ The last clip in the top-left corner near the front-facing camera is recessed and can be difficult to release. Take your time and use the flat end of a spudger or an opening pick to help.


Step 8



- With the bottom and left edge of the phone freed, gently wiggle the frame to release the top and right edge clips.


 **The frame is still connected to the back cover by a long flex cable. Do not remove the back cover.**

 During reassembly, pause here to test your phone's functionality before securing the back cover.

 To reinstall the back cover:


- [Align the top edge of the frame](#) to the back cover and ensure that the top clips slip into place.
- [Squeeze along the long edges of the phone](#) to snap the remaining clips into place.

Step 9

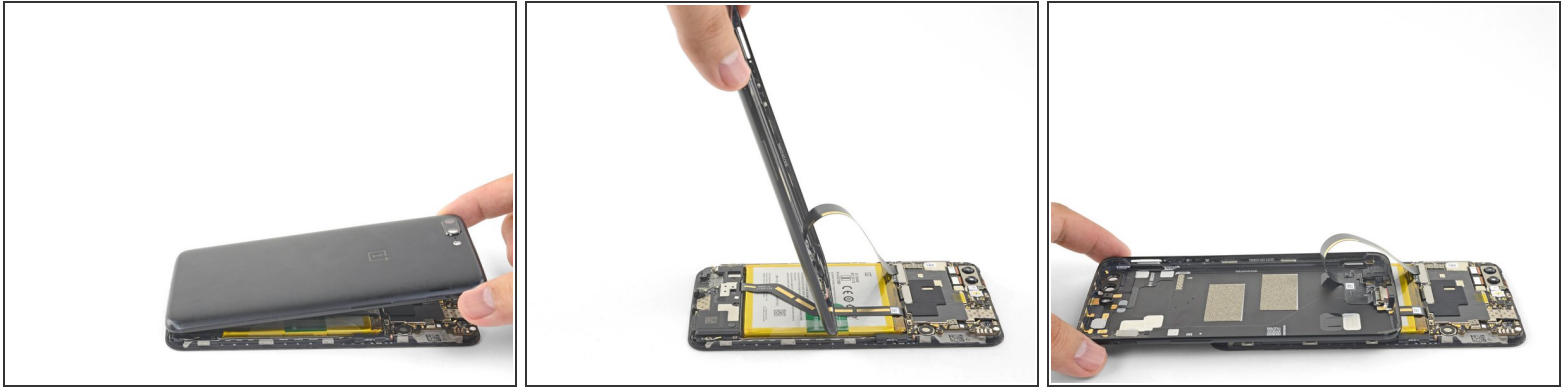


- With all the clips released, flip the phone over so that the display is face-down.
- Swing the back cover around and rest it on top of the exposed frame.
 - ⓘ Be careful not to stress the flex cable connecting the back cover and the frame.

Step 10

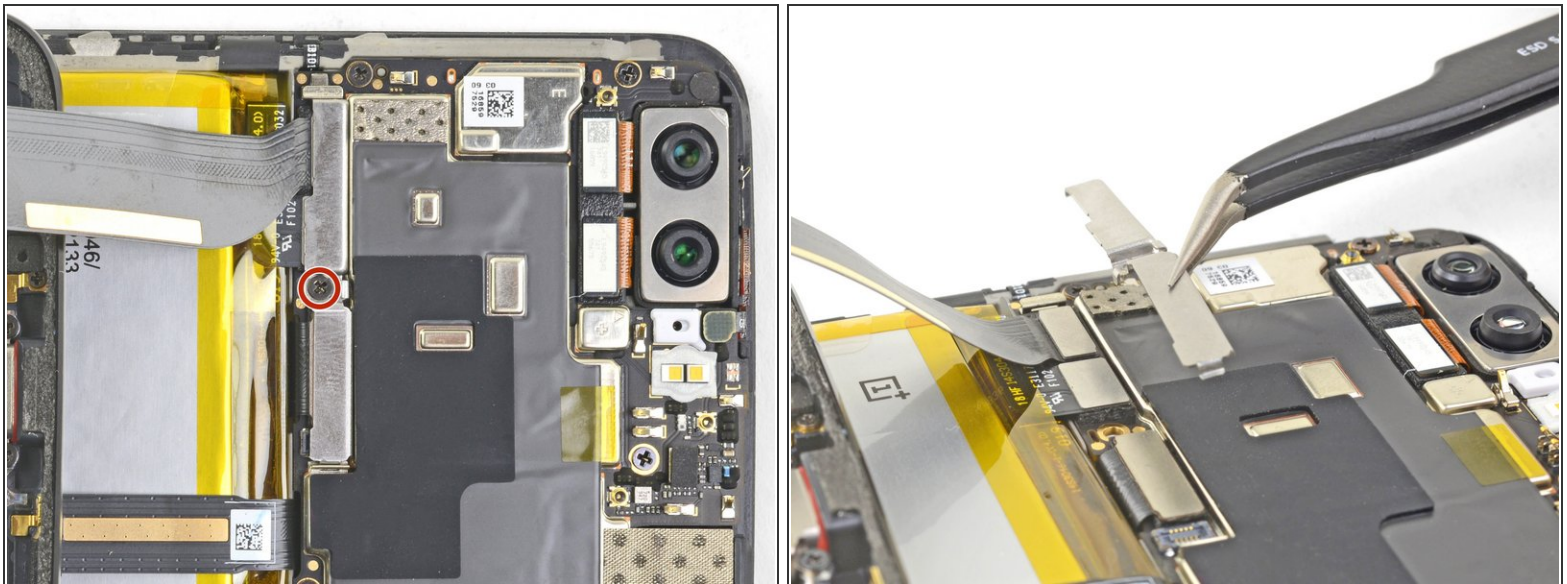

- Remove the 2.6 mm Phillips screw holding the cable bracket above the battery in place.
- Lift up and remove the cable bracket.
- ☑ To reinstall the bracket, [position one end into place](#), and bend the bracket slightly to spring the other end into place.

Step 11

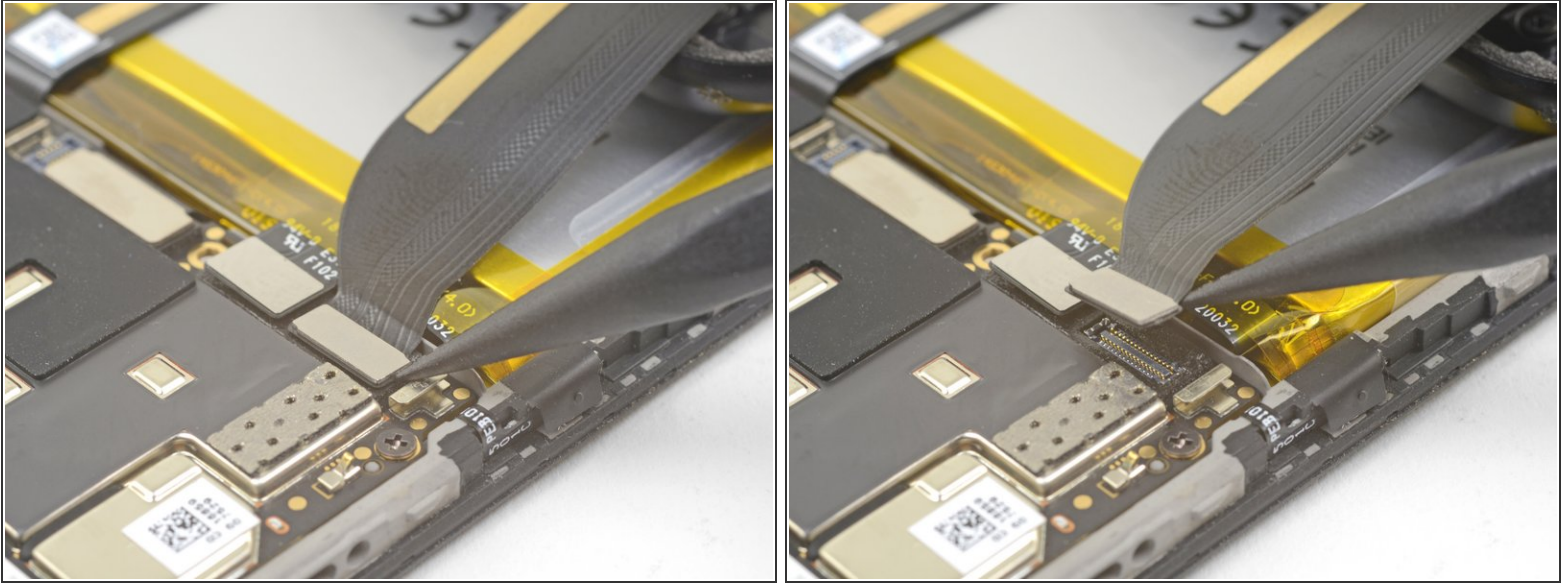


- Use the point of a spudger to pry up and disconnect the back cover flex cable from its socket.
- i** To re-attach [press connectors](#) like this one, carefully align and press down on one side until it clicks into place, then repeat on the other side. Do not press down on the middle. If the connector is misaligned, the pins can bend, causing permanent damage.

Step 12



- Remove the back cover.

Step 13 — OnePlus 5 Battery Disconnect

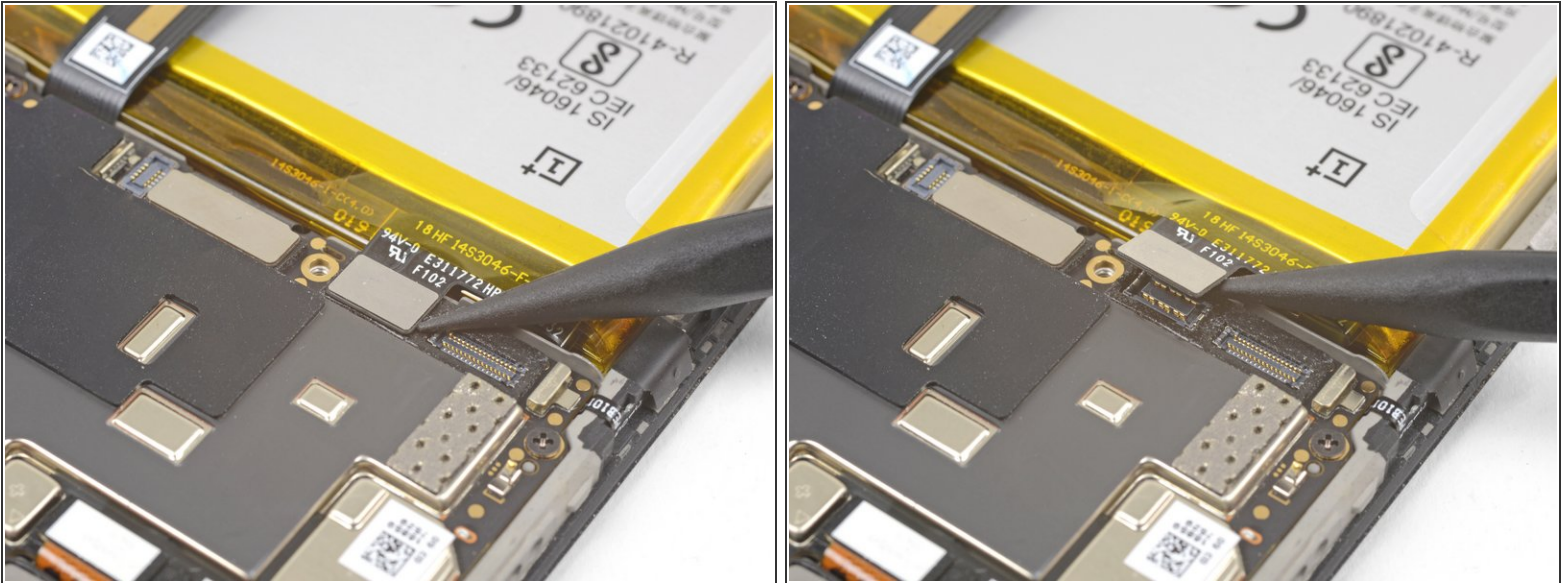

- Use the point of a spudger to pry up and disconnect the battery connector from its socket.

Step 14 — Loudspeaker



- Remove the six 2.6 mm Phillips screws securing the loudspeaker to the frame.

Step 15




- Insert the flat end of a spudger into the corner of the loudspeaker assembly and pry slightly, loosening the loudspeaker from its recess.

Step 16




- Remove the loudspeaker.
- ★ To reinstall the loudspeaker, align the loudspeaker's bottom edge to the frame, then press the assembly into place.
- i During reinstallation, make sure that the [display cable connector](#) under the loudspeaker assembly is still securely fastened.

Step 17 — OnePlus 5 Interconnect Cable Disconnect

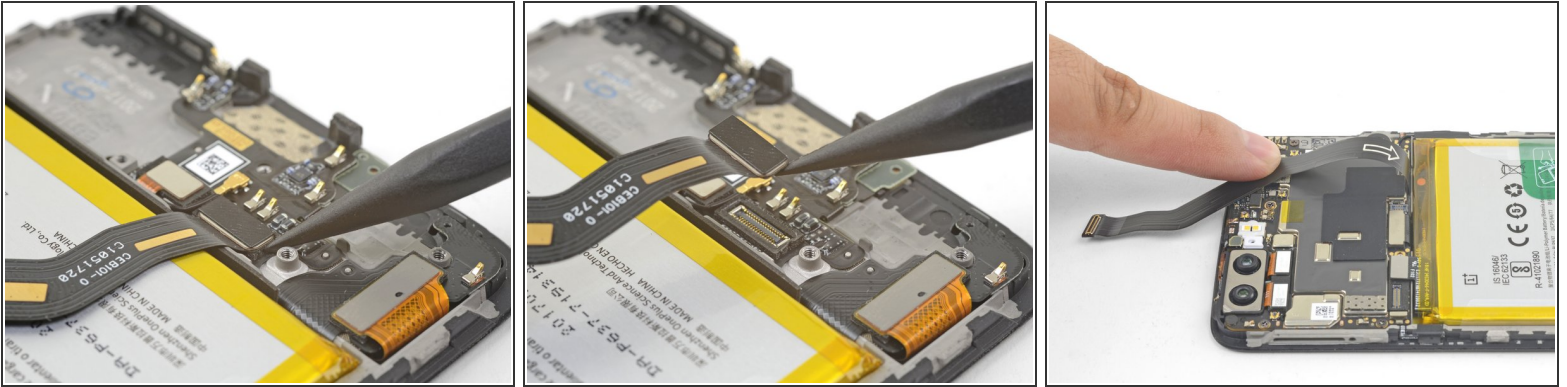


- Use the point of a spudger to pry up and disconnect the interconnect flex cable from the socket.
- ⓘ If you are replacing the battery, bend the interconnect flex cable away from the phone and secure it out of the way with a rubber band or tape.

Step 18 — Motherboard

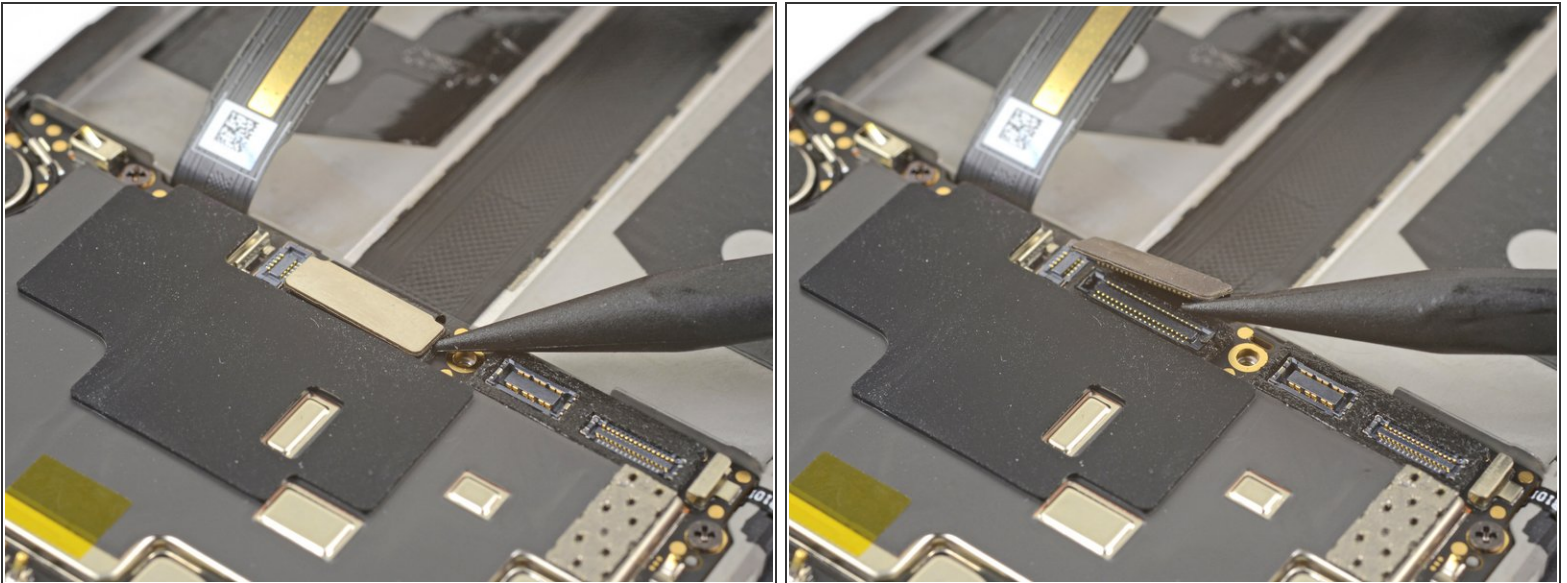


- Use the point of a spudger to pry up and disconnect the display interconnect cable from its socket near the bottom edge of the motherboard.

Step 19

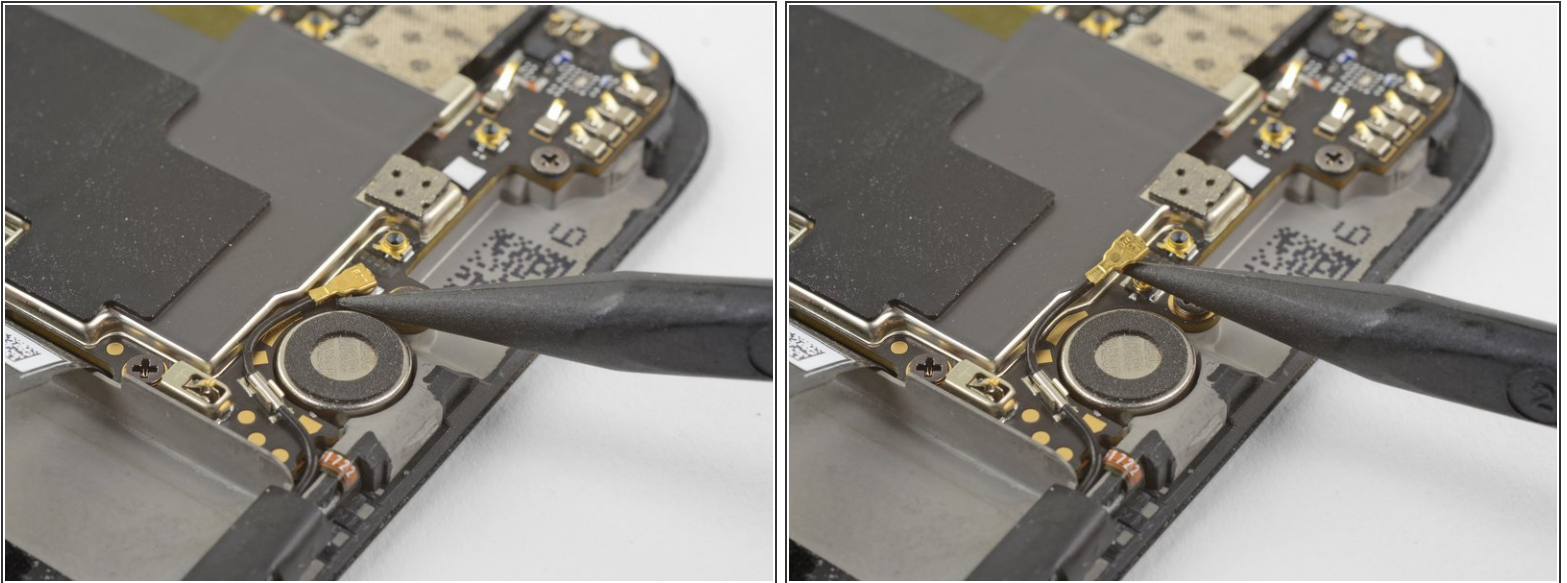


- Slide the point of a spudger underneath the antenna interconnect cable that is connected to the motherboard above the vibration motor.
- Pry up to disconnect the cable from its socket.
- De-route the cable out of its motherboard grounding clip and move it out of the way.

Step 20

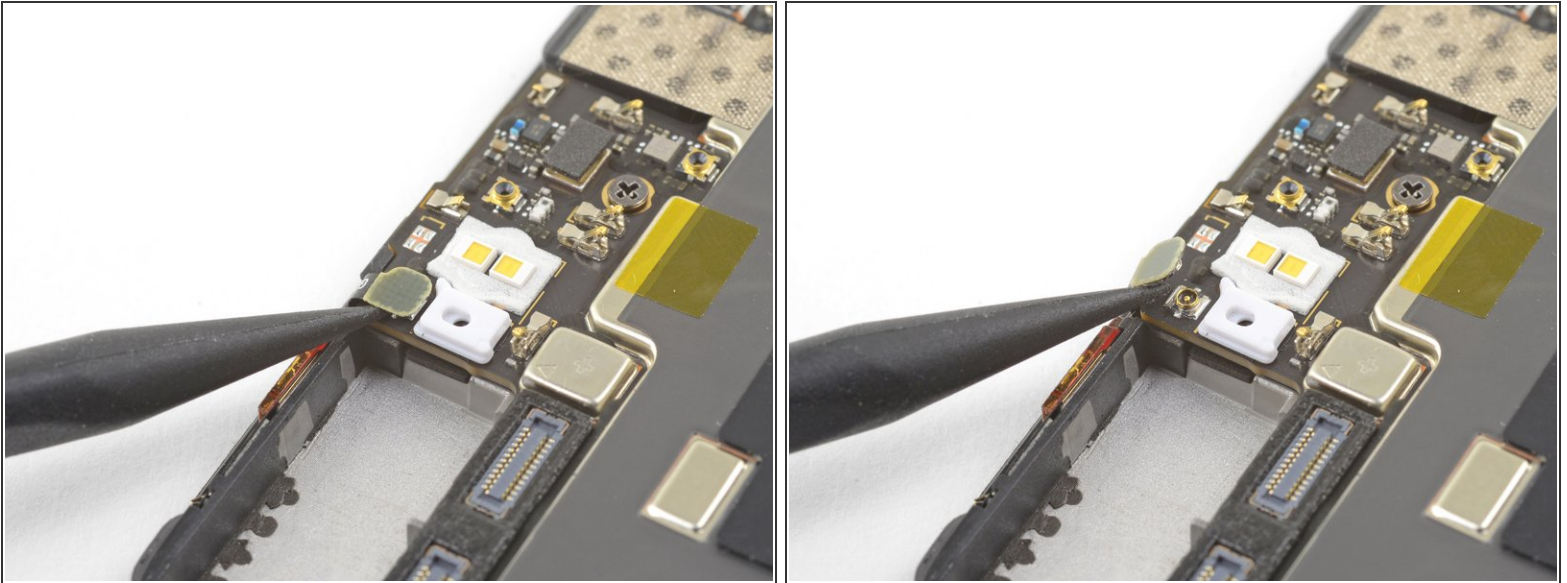


- Slide the point of a spudger under the small square antenna connector connected to the motherboard near the top edge.
- Pry up to disconnect the antenna connector from its socket.

Step 21

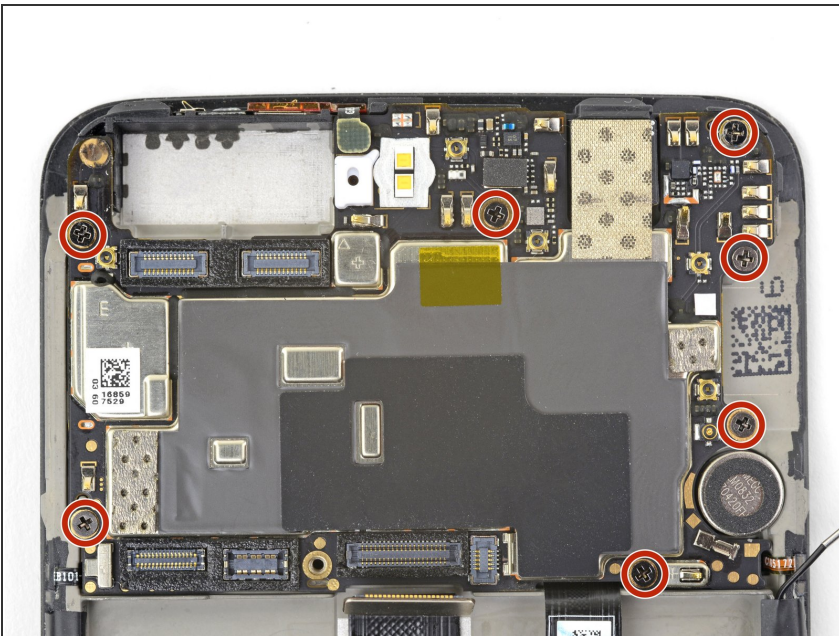


- Remove the following seven 2.6 mm Phillips screws securing the motherboard:
- ❗ Some screws may be hidden under stickers. Remove the stickers to access the screws.

Step 22

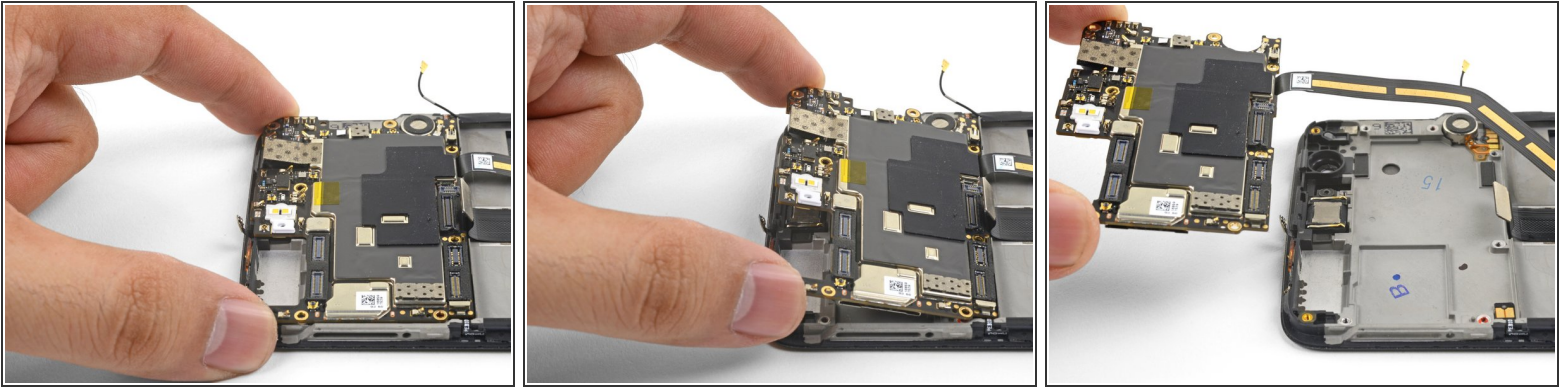

- Use your fingers to lift up the top edge of the motherboard.
- Lift the motherboard out of its recess and remove it.

Step 23 — Earpiece Speaker

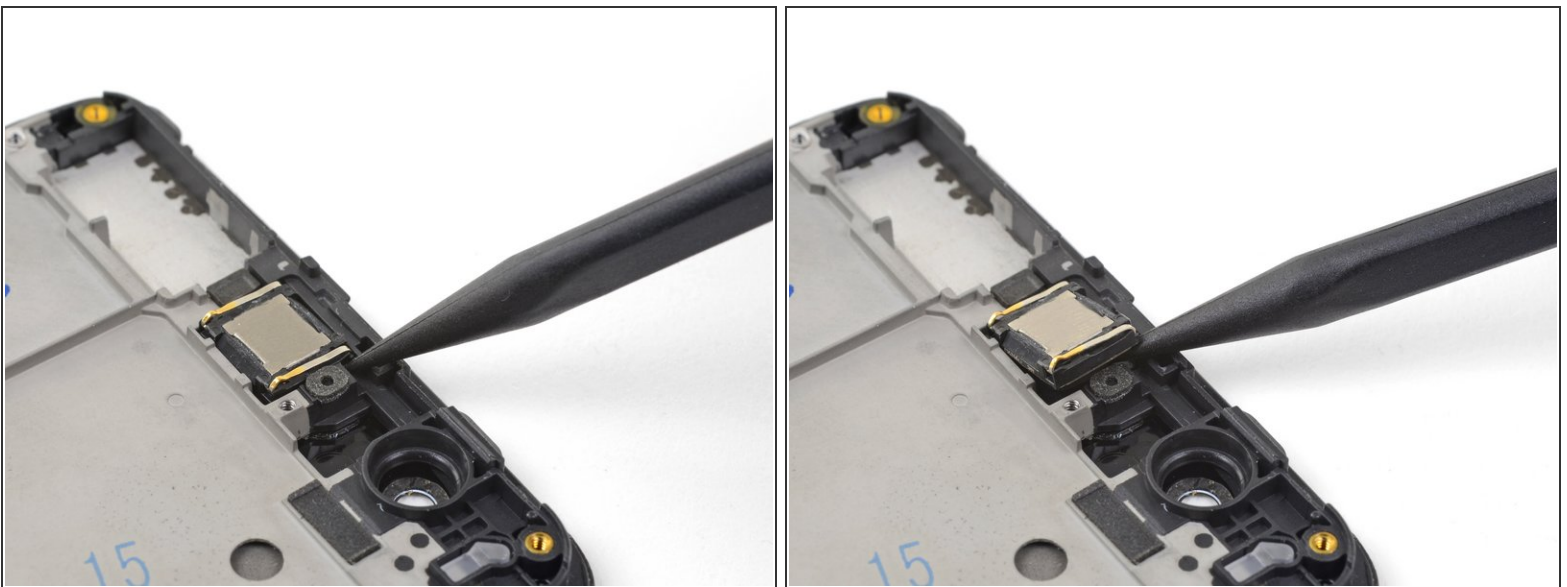

- Insert the point of a spudger under the top right corner of the earpiece module and pry up, loosening the module from its recess.

Step 24



- Remove the earpiece module.
- ☑ During reinstallation, be sure that the earpiece module is [properly oriented](#) such that the gold contacts face downwards.
- ☑ If you are transferring the earpiece module to a replacement frame, be sure to peel and remove [the white adhesive liner](#) before pressing the earpiece module into place.

To reassemble your device, follow these instructions in reverse order.

Repair didn't go as planned? Check out our [OnePlus 5 Answers Community](#) for troubleshooting help.