



Samsung Chromebook 3 Battery Replacement

This guide will explain how to replace the battery in a Samsung Chromebook 3.

Written By: Austin Blakely



INTRODUCTION

This guide show you how to replace the battery in your Samsung Chromebook 3. You will need to open the device as the battery is located inside the case.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

PARTS:

- [Samsung XE500C13 Chromebook Battery](#) (1)

Step 1 — Bottom Case



- Place the Chromebook face down so that the bottom case is exposed.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

Step 2



- Use a iFixit opening tool to gently pry the case up from the vent on the hinge side of the Chromebook.
- ⓘ You should hear a popping sound as the connectors disengage inside the case.

Step 3



- Lift the case up and off the device

Step 4 — Battery



- Locate the battery and remove the four 4.6mm screws at the corners which attach it to case using a Phillips #00 screwdriver.

Step 5



- Use a spudger to gently pry the power cable cord upwards from the motherboard.

Step 6



- Lift the battery up and out from the case.

To reassemble your device, follow these instructions in reverse order.