



# Samsung Chromebook 3 Speakers Replacement

How to replace your Samsung Chromebook 3 speakers.

Written By: Sarah Westberg



## INTRODUCTION

This guide will explain how to replace your Samsung Chromebook 3 speakers. Before you begin you will need to remove the bottom case.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Samsung XE500C13 Chromebook Lower Case](#) (1)
- [Samsung XE500C13 Chromebook Left Speaker](#) (1)
- [Samsung XE500C13 Chromebook Right Speaker](#) (1)

## Step 1 — Bottom Case



- Place the Chromebook face down so that the bottom case is exposed.
- Using a Phillips #00 screwdriver, remove nine 4.6mm screws from the back casing.

## Step 2



- Use a iFixit opening tool to gently pry the case up from the vent on the hinge side of the Chromebook.
- ⓘ You should hear a popping sound as the connectors disengage inside the case.




## Step 3



- Lift the case up and off the device

## Step 4 — Speakers

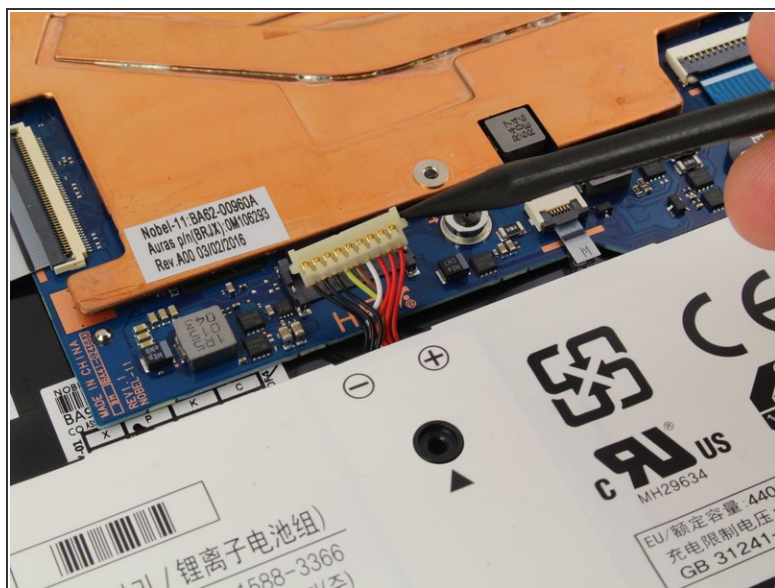


- Disconnect the battery from the motherboard by prying upwards on the cable connector with a spudger.

## Step 5




- Remove one 4.9mm silver screw from each speaker with a Phillips #00 screwdriver.

## Step 6

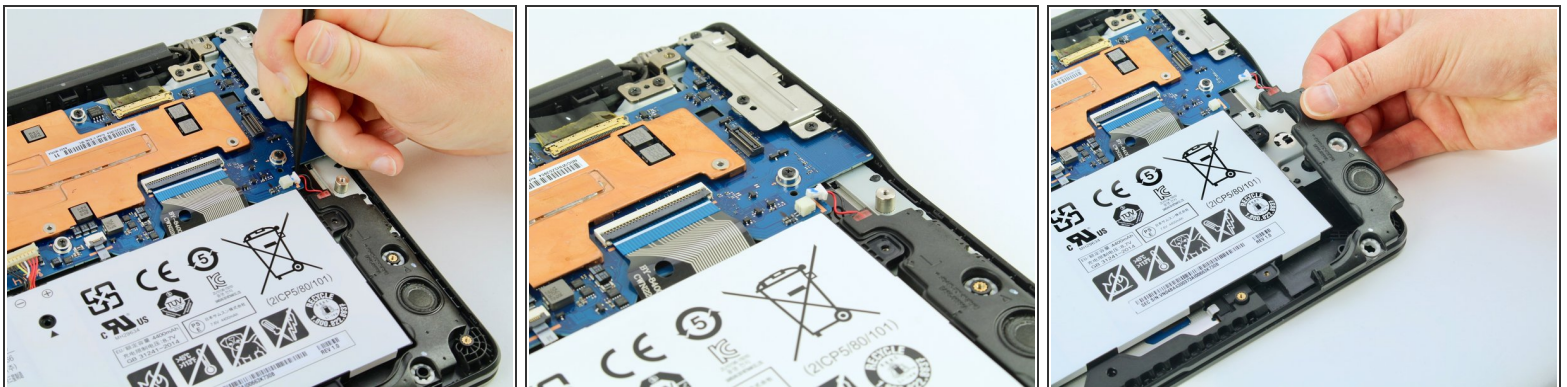

- Use a plastic spudger to gently coax the cable connector sideways from the motherboard and the left speaker. When disconnected, remove speaker.

## Step 7

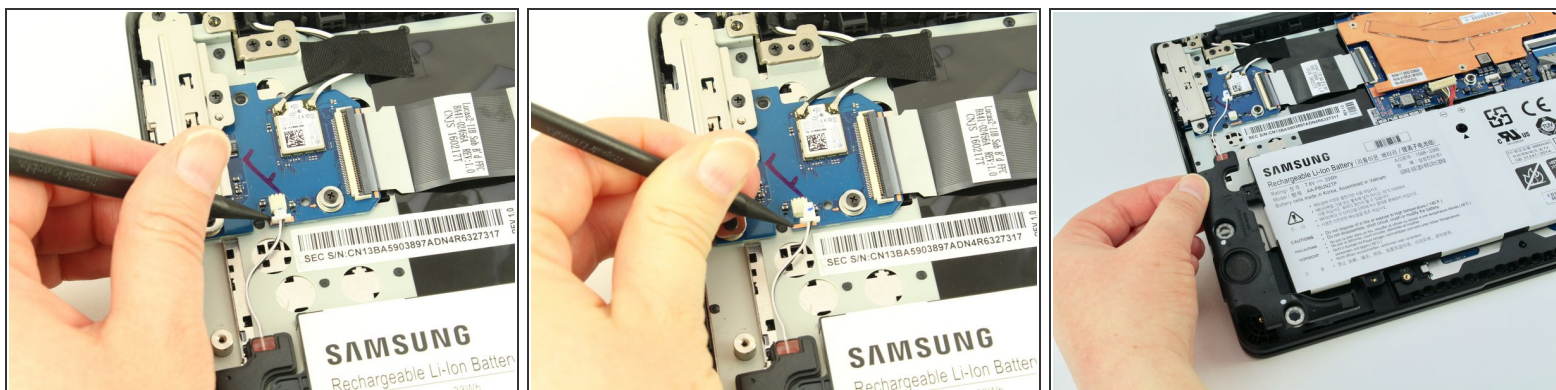

- Use a plastic spudger to gently disconnect the cable connector from the daughterboard and the right speaker. Remove the speaker.

To reassemble your device, follow these instructions in reverse order.