




Samsung Chromebook Series 3 Screen Replacement

How to replace the display screen on a Samsung Chromebook Series 3 (XE303C12-A01US).

Written By: Tyler Schultz

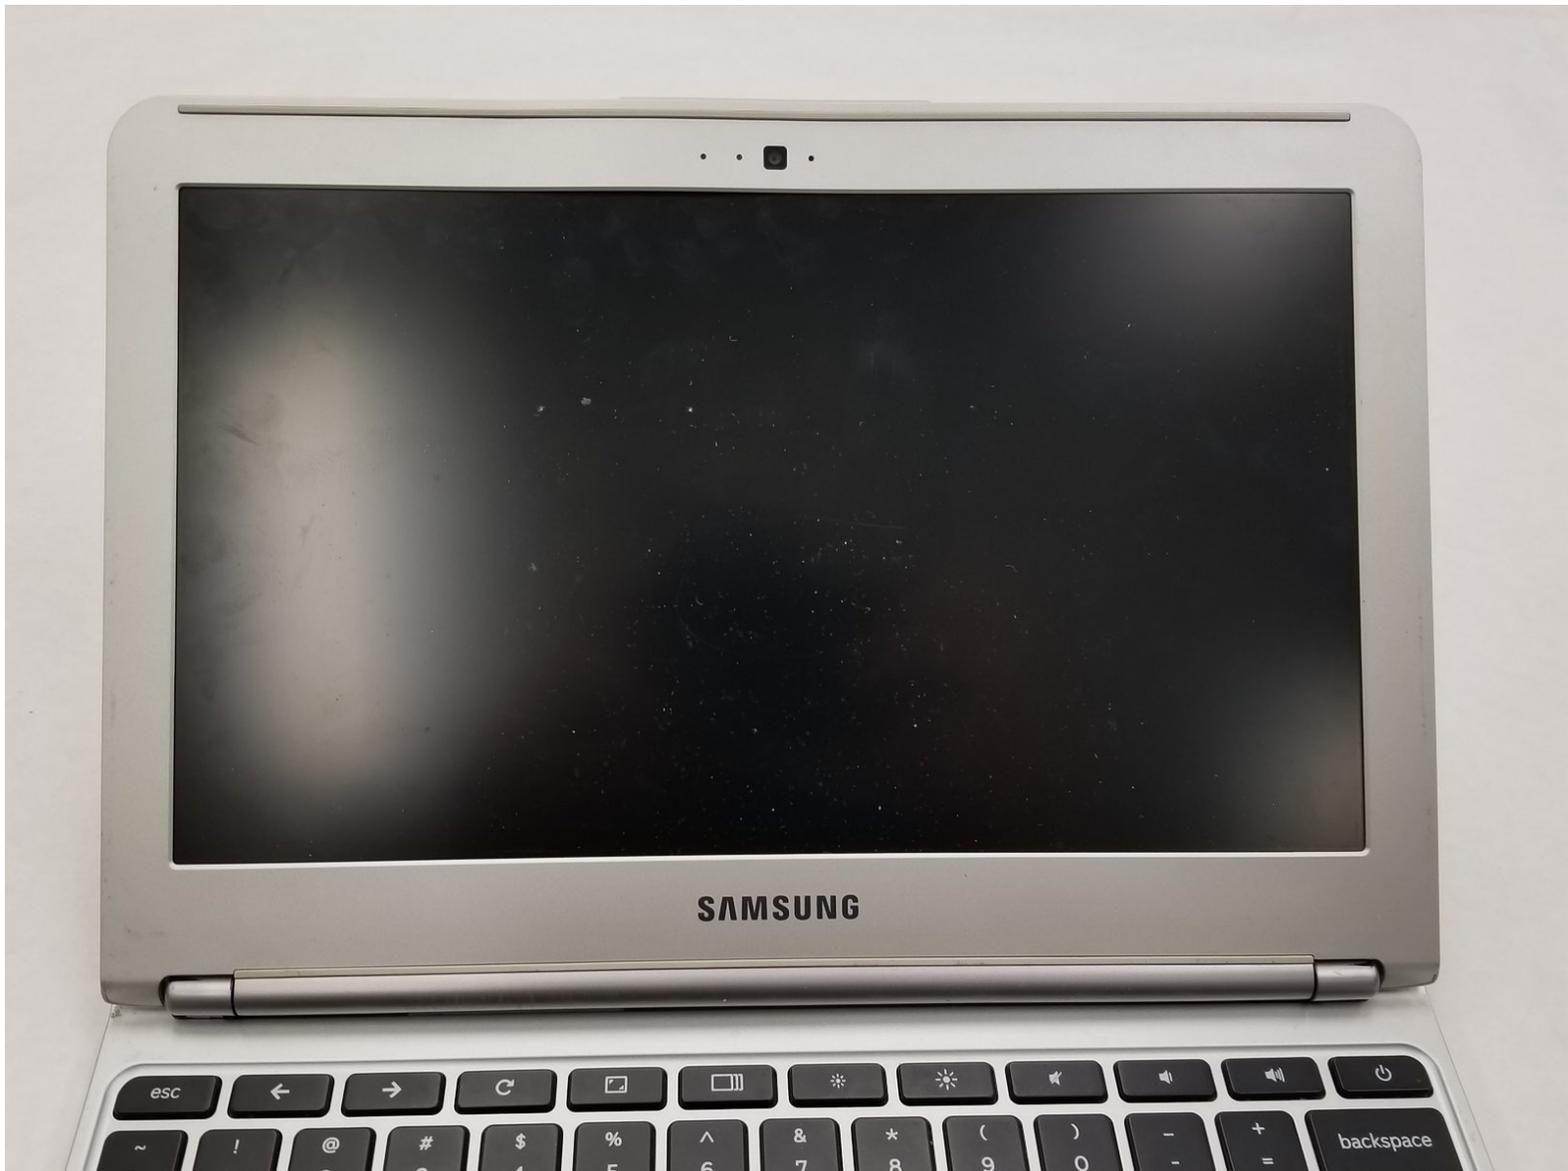

INTRODUCTION

This guide will demonstrate how to remove and replace the display screen on your Samsung Chromebook Series 3.


TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

PARTS:


- [11.6" Chromebook LCD B116XW03V.1-HW 0B FW 0](#) (1)

Step 1 — Screen

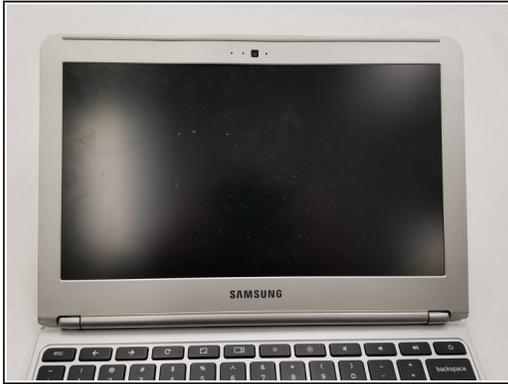

- Use the iFixit opening tool to get under the front cover and pop it out of place

Step 2

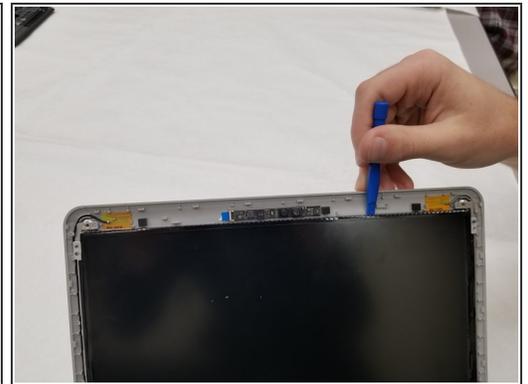


- Remove the four 2.9 mm screws with the Phillips #00 Screwdriver bit.
- Using the iFixit opening tool, try to lift up the screen (it is held down by some adhesive).

Step 3



- Lift the lever to release the cable and pull the cable out.

Step 4

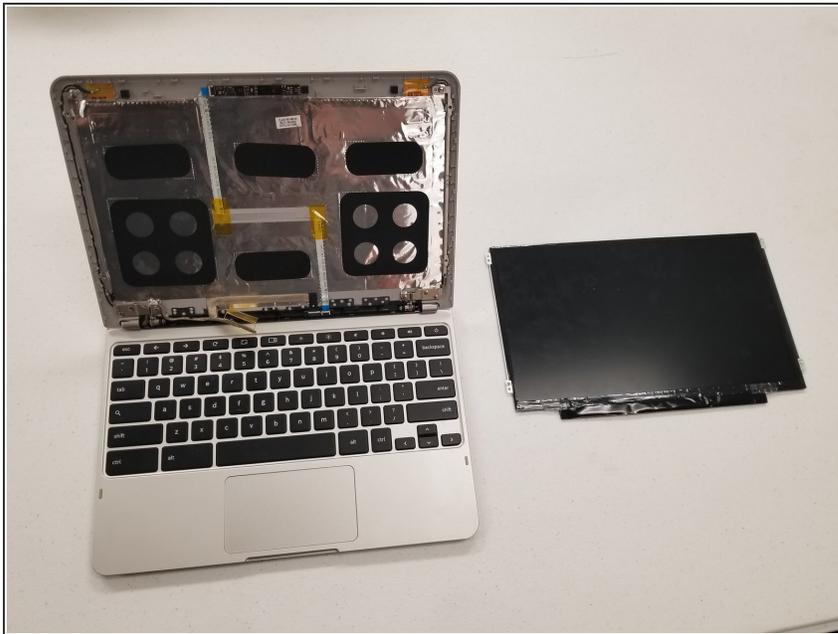

- You can now remove the screen.

To reassemble your device, follow these instructions in reverse order.