



Asus Chromebook C300M Mousepad Replacement

This guide will show how to remove the mousepad of the Asus C300M Chromebook.

Written By: Rachel Cadle



INTRODUCTION

This repair guide will give step-by-step instructions on how to remove the back of the Chromebook to remove and replace the Mousepad.



TOOLS:


- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Asus Chromebook C300M Touchpad](#) (1)

Step 1 — Mousepad

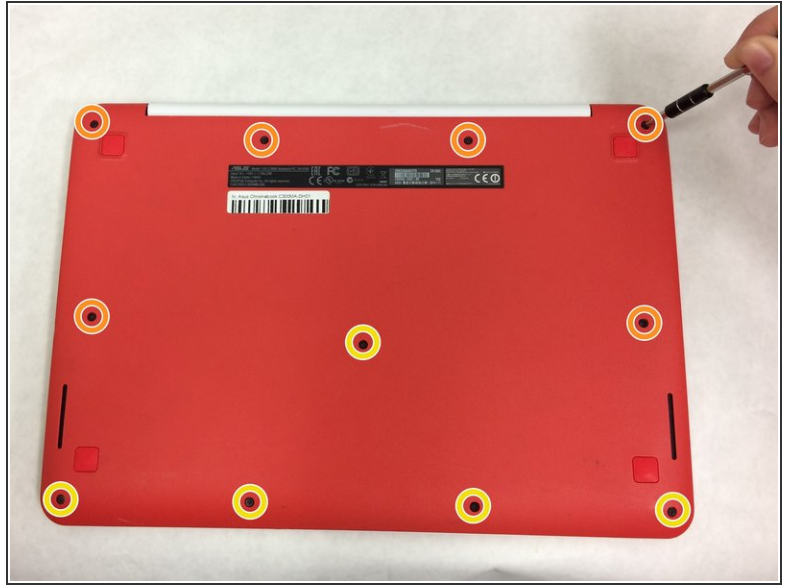



- Flip the Chromebook on its front.
- Remove the screws on the back using the Phillips #1 screwdriver.
- Remove the six 8mm screws.
- Remove the five 5mm screws.

Step 2



- Separate the plastic case from the keyboard at the seam by using a plastic opening tool.


Step 3

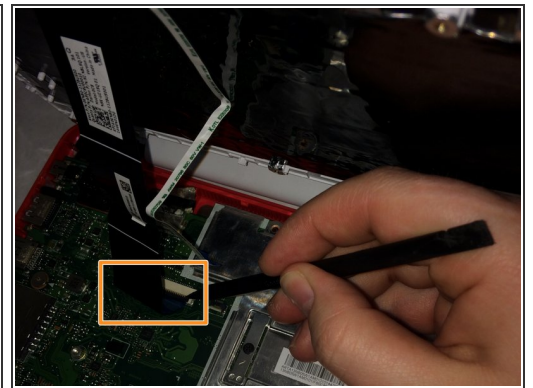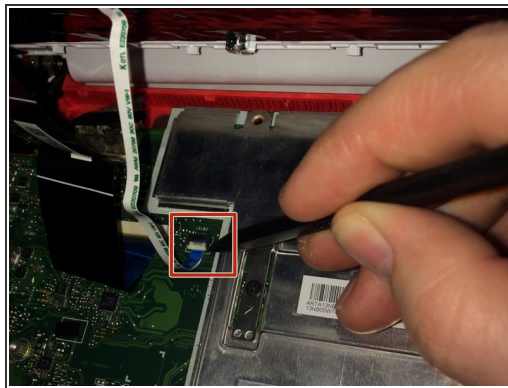

i The small and wide ribbon cables connect the keyboard to the motherboard.

- Disconnect the small ribbon cable by lifting the flap and sliding it out of the motherboard input toward the battery using a spudger.
- Disconnect the wide ribbon cable by lifting the flap and sliding it out of the motherboard input toward the battery using spudger.

Step 4

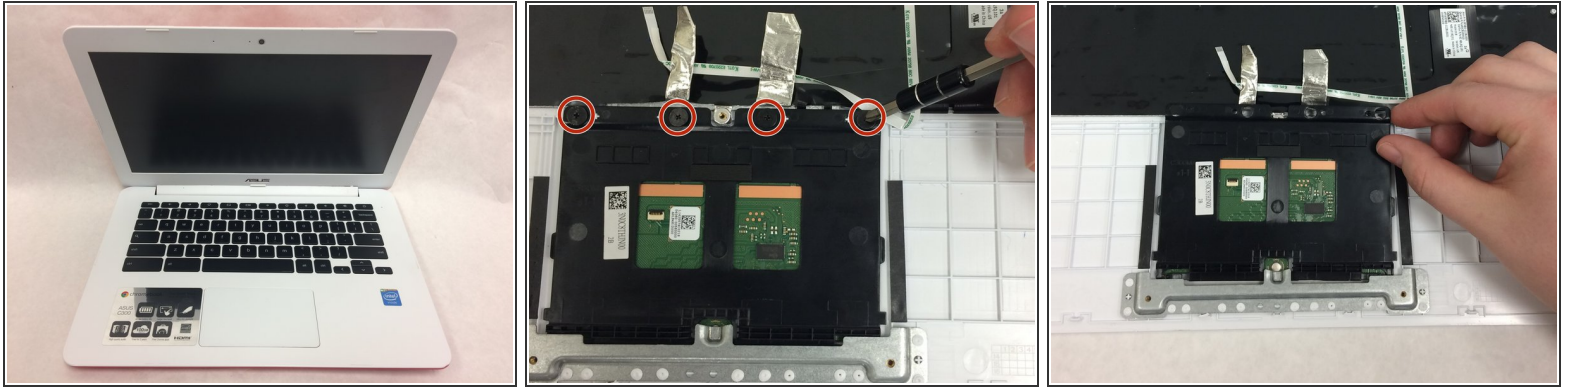

- Remove the keyboard and flip it onto its front. You should see the back of the mousepad.
- Lift the foil strips to reveal two hidden screws. Then remove all four 2mm screws from the top of the trackpad with the Phillips #1 screwdriver.
- Remove the mousepad by sliding it upward.

To reassemble your device, follow these instructions in reverse order.