


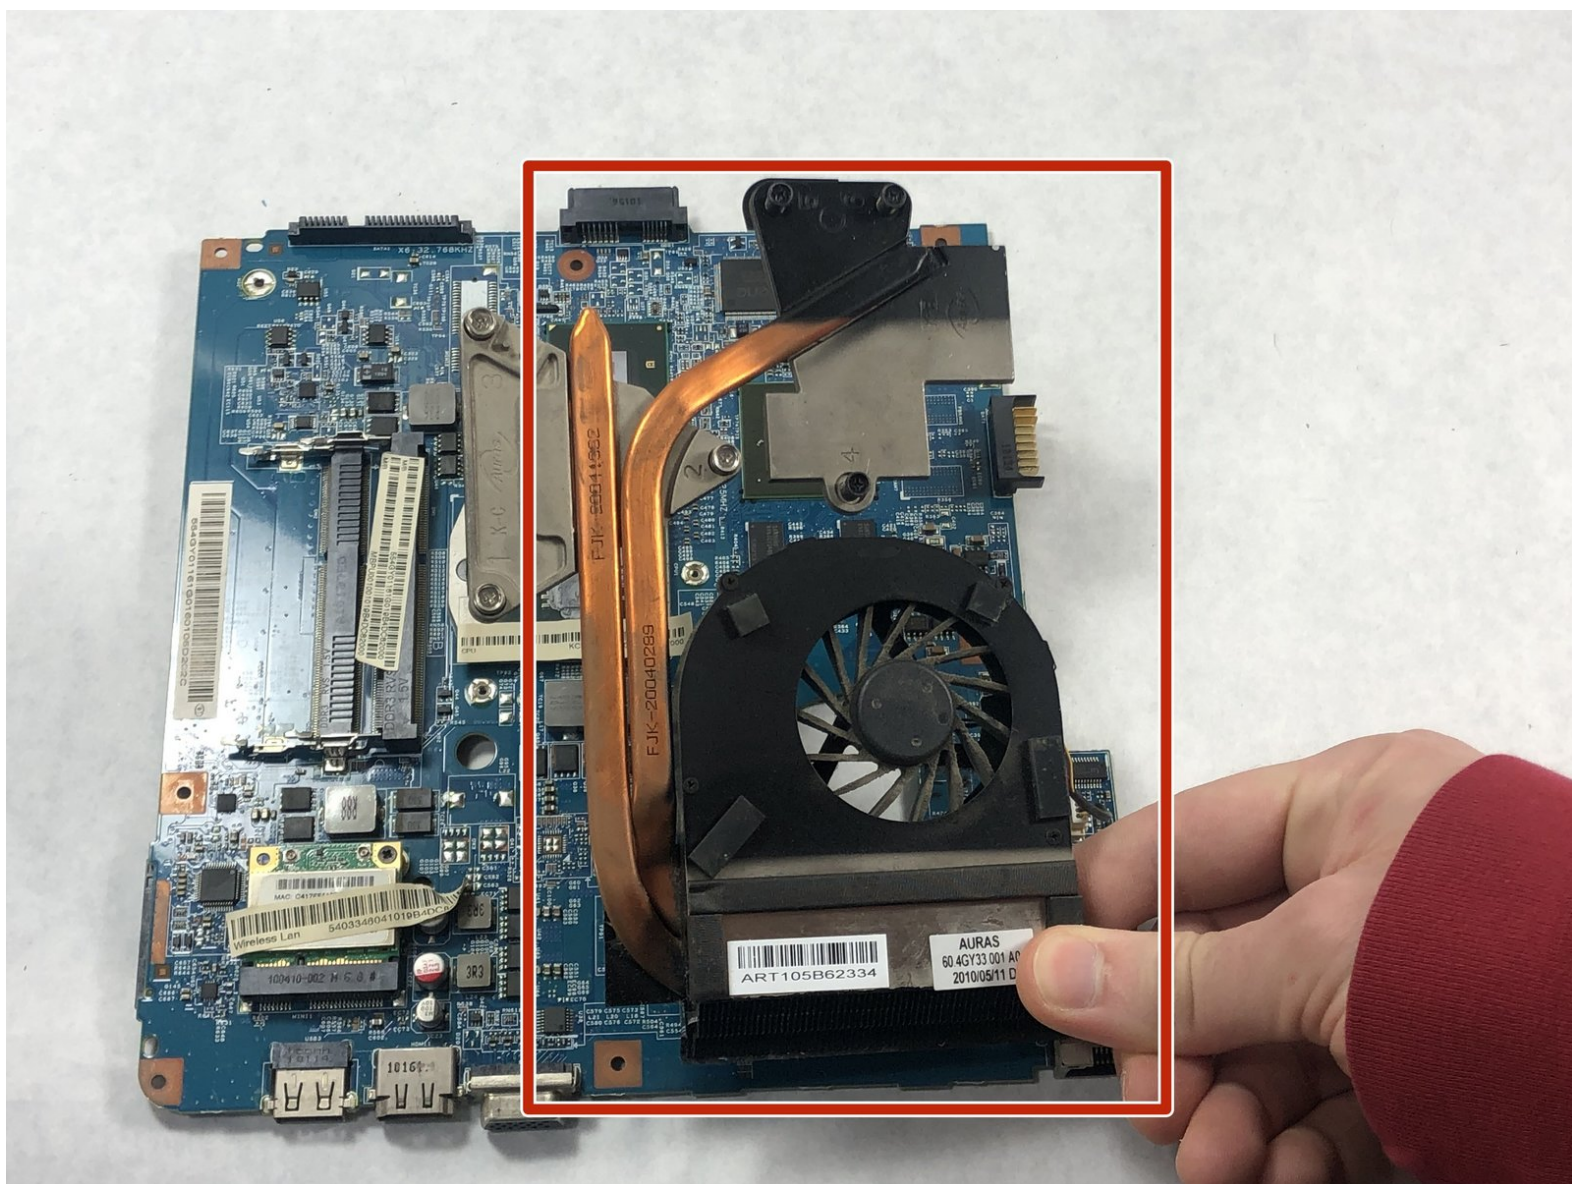

Acer Aspire 4741G-332G32Mn Fan Replacement

This guide will help remove the fan and stop the overheating in your Acer Aspire 4741G-332G32Mn.

Written By: Tu Nguyen



INTRODUCTION

This guide will walk you through how to replace or remove the fan from an Acer Aspire 4741G-332G32Mn. The fan may need to be removed if it is damaged or your computer is overheating. The USB must be unscrewed and removed before accessing the fan. All you need is a Philips #0 screwdriver.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery




- Flip the lock latch to unlock battery.

Step 2




- Slide the middle latch and remove the battery.

Step 3 — Backplate

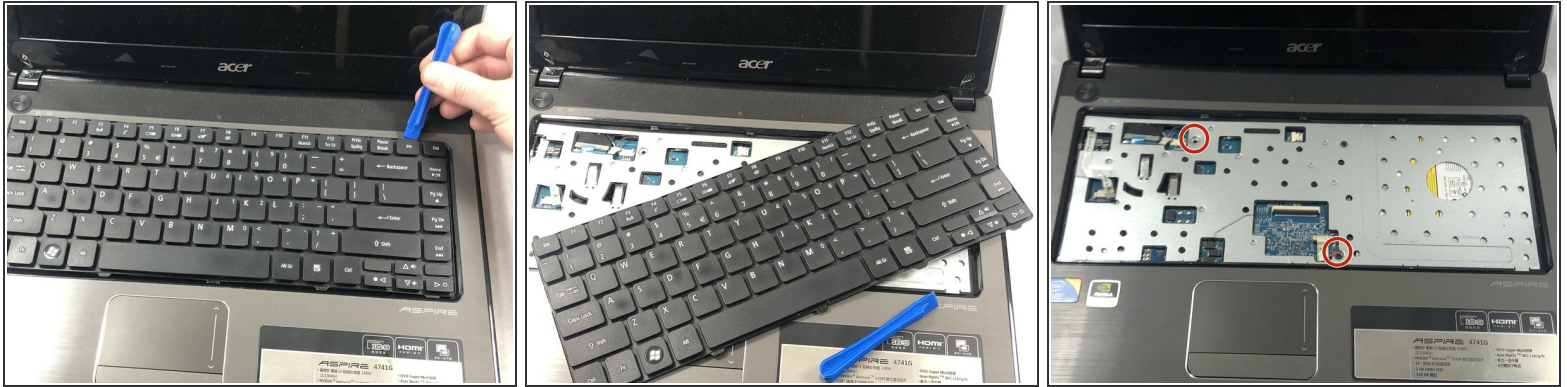

- Pry off the keyboard using the opening tool.
- Remove the two screws that are connected to the motherboard using a Phillips #0 screwdriver.

Step 4

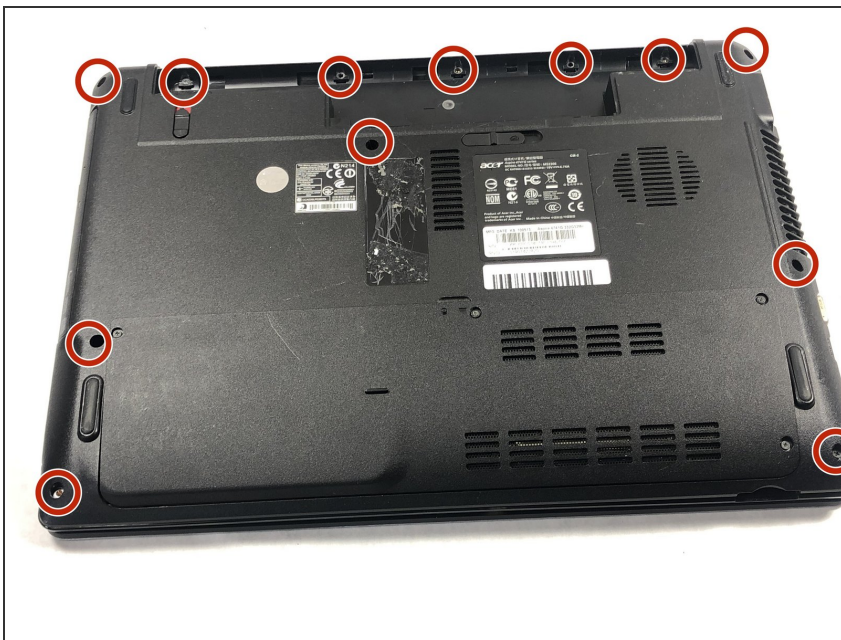



- Remove all 12 screws from the backplate using a Phillips #0 screwdriver.

Step 5




- Using the prying tool to remove the bottom of the laptop.

Step 6 — Fan

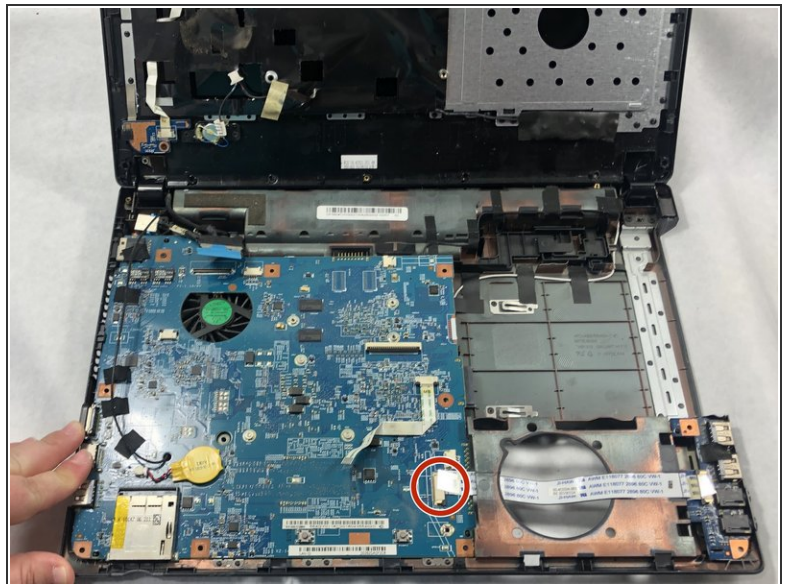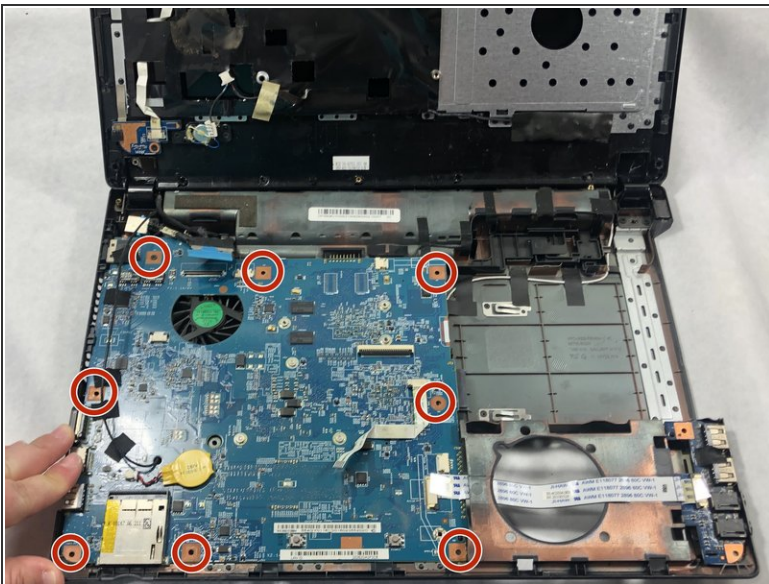

- Using a Phillips #0 screwdriver, remove the eight screws that hold the motherboard to the frame of the laptop.
- Disconnect the USB port from the motherboard.

Step 7

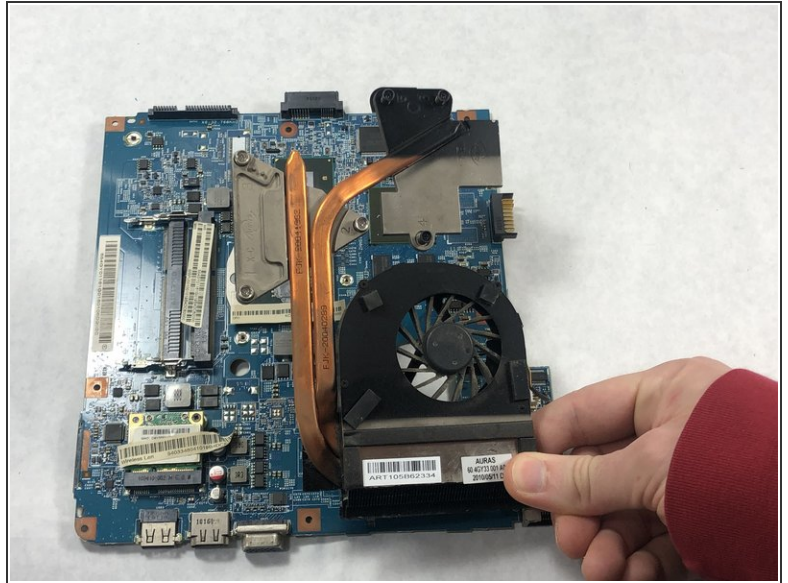

- Unscrew the 6 screws that hold the fan to the motherboard using the same screwdriver.

To reassemble your device, follow these instructions in reverse order.