



Asus UL80VT RAM Replacement

This guide will show you have to replace the RAM in the Asus UL80VT.

Written By: James DellaMorte



INTRODUCTION

Replacing the RAM is very simple in this case. Removing a few screws and a plastic plate will reveal the RAM which can be replaced. This repair would be needed if the RAM is old and PC performance is lacking.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM



- Flip computer over and unscrew the two 5 mm screws using the Phillips #0 screwdriver.

Step 2



- Pull the clips toward the chassis of the computer. The RAM will pop up and can easily be removed.

To reassemble your device, follow these instructions in reverse order.