


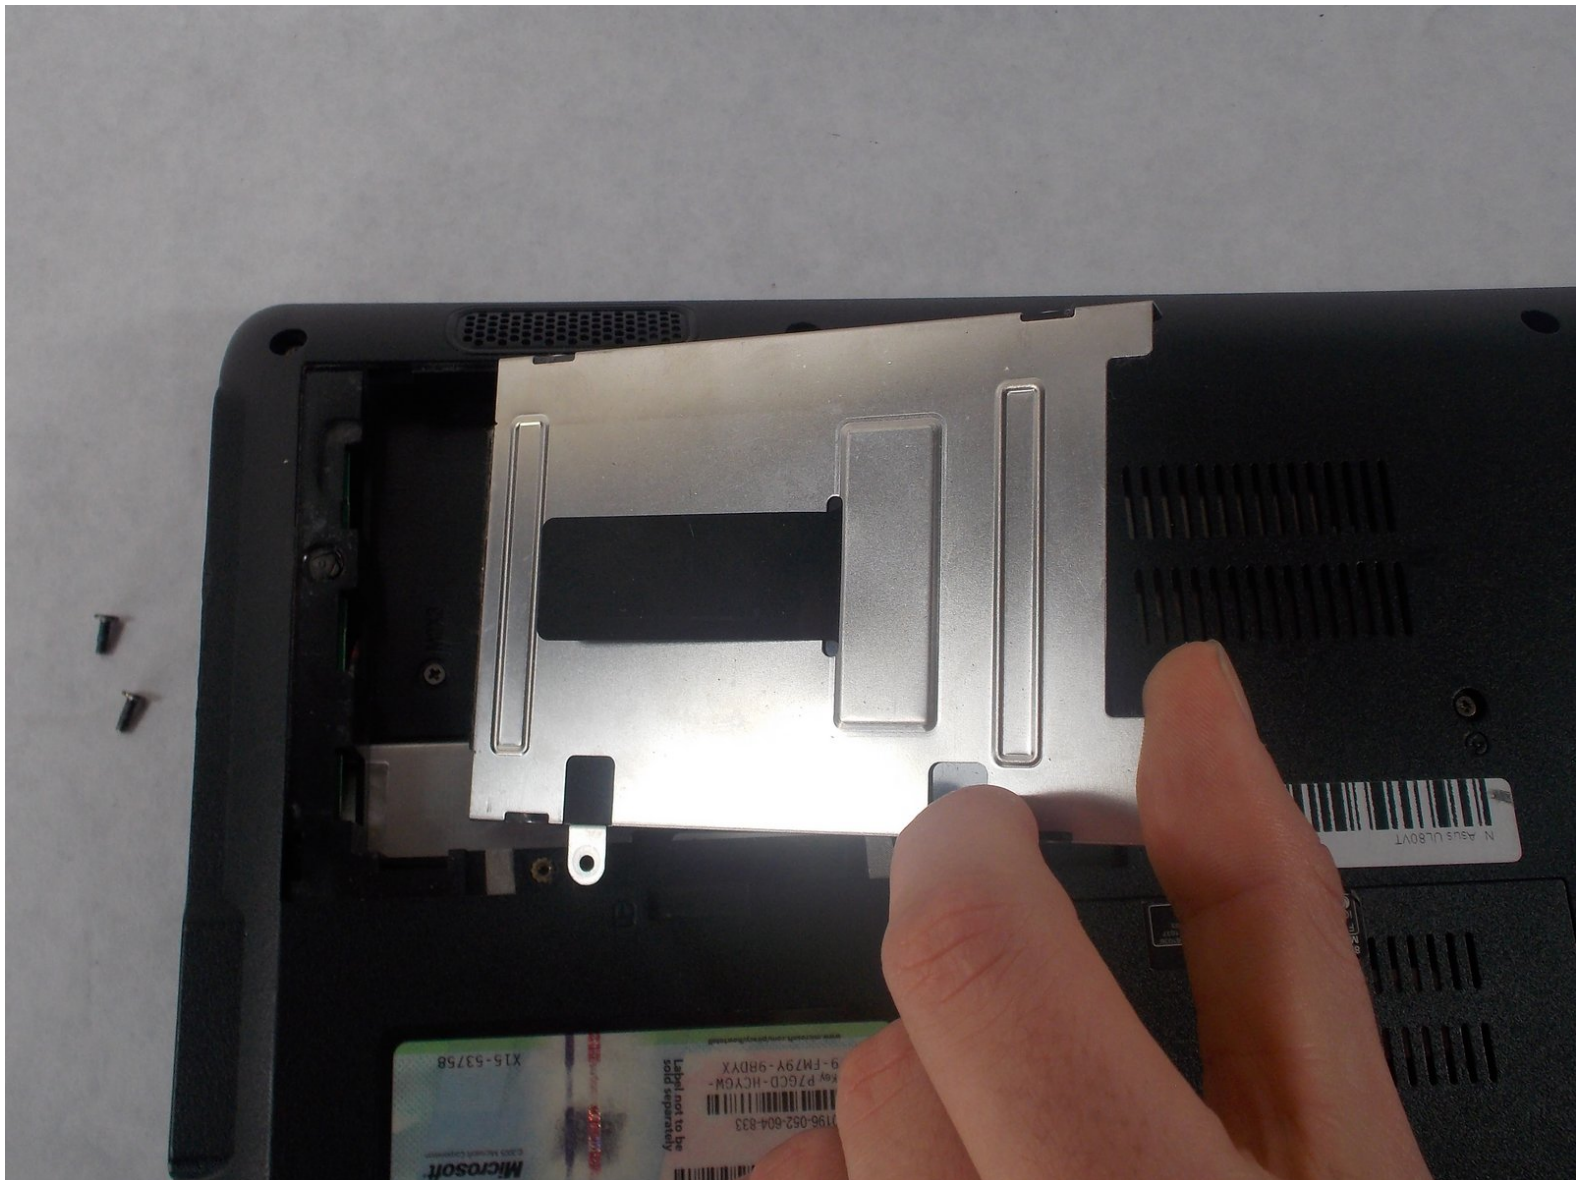

# Asus UL80VT Hard Drive Replacement

This guide will instruct how to remove and replace the Hard Drive in your Asus UL80VT.

Written By: James DellaMorte



---

## INTRODUCTION

This guide will show how to replace the Hard Drive. It can be completed in a couple of minutes. Hard Drives can fail over time and it is a good idea to replace them before all data is lost, especially on an older device.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Hard Drive



- Flip the computer over, and unscrew the two 5 mm screws using the Phillips #0 screwdriver.
- Lift the panel from the device.

## Step 2

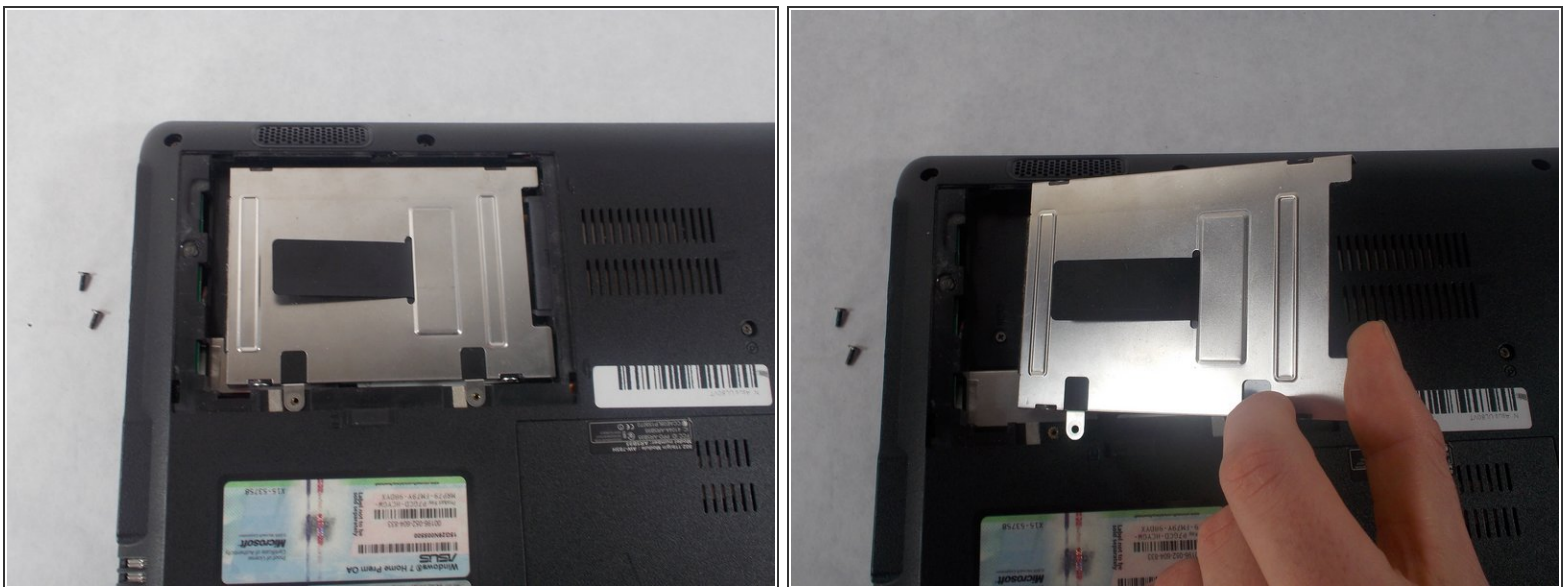

- Slide the hard drive away from the SATA connector and remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.