



# Dell Latitude E5470 Screen Assembly Replacement

Guide to replace the whole screen assembly of the Dell Latitude E5470 or 5470 laptops.

Written By: Ethan Jones



---

## INTRODUCTION


When a problem exists with the display, wifi, camera, or even the laptop lid itself, it is often easier to just replace the whole screen assembly. This guide is a quick simple way to accomplish this task.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Remove Bottom Cover

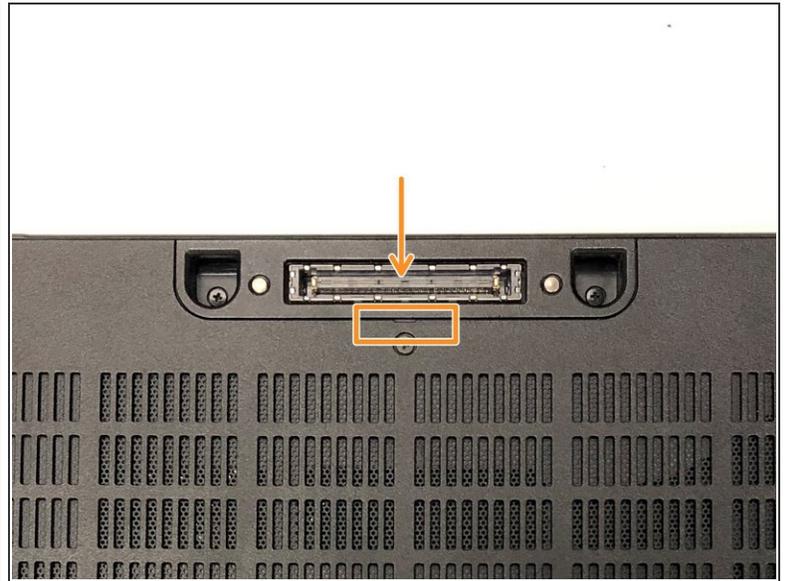


- Loosen the 8 Philips screws on the bottom of the laptop. They will not come all the way out but loosen till they spin freely.
- Use a splurger to slowly pry the bottom cover off the laptop. Pull the bottom off in the direction of the arrow.
- **Important** Be carefull to not break the snaps as they are delicate.

## Step 2 — Disconnect Battery

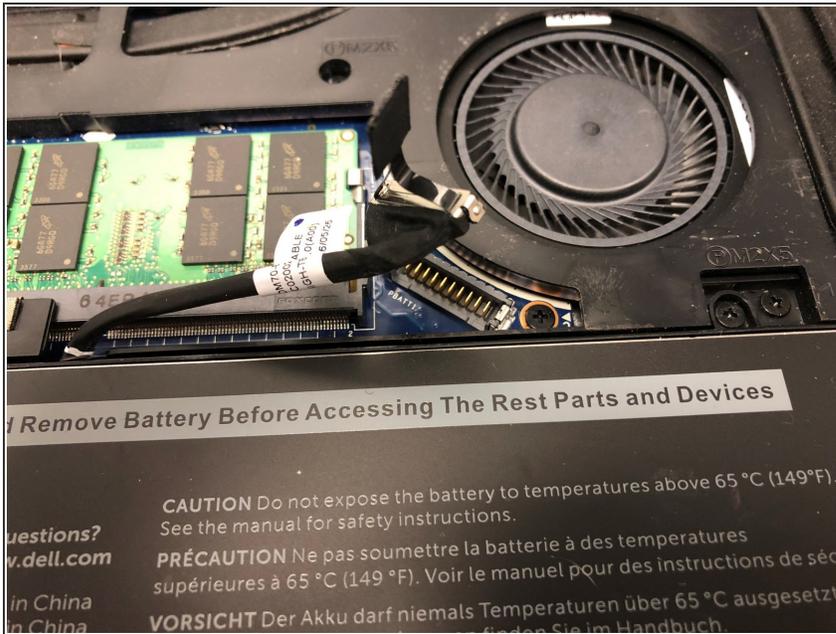


- **Important** Disconnect the battery before any work is done. Failure to do so could result in electric shock and cause harm to you and the laptop.
- Carefully use the plastic tab to remove the battery cable from the motherboard.

## Step 3 — Disconnect Wireless Card

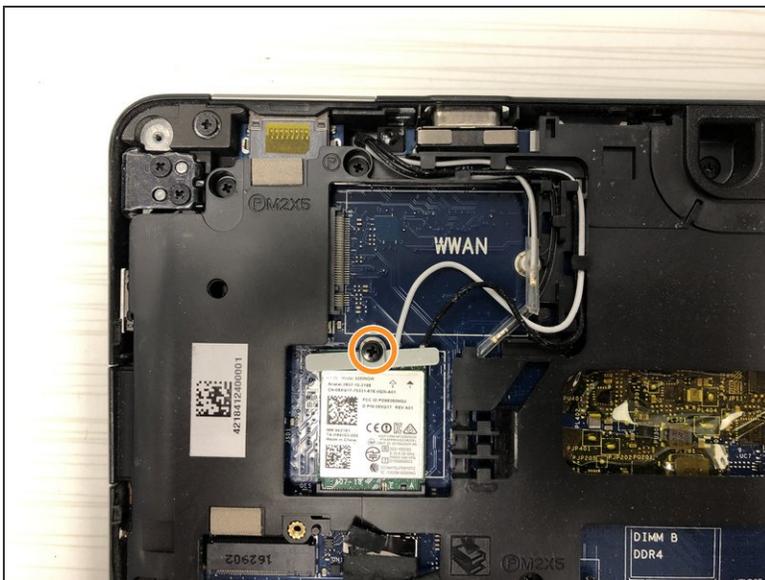



- Unscrew the screw holding the card in place.
- Remove the metal guard holding the connections in place.
- Use the splurger to gently lift the wires from the card.

## Step 4 — Disconnect Display

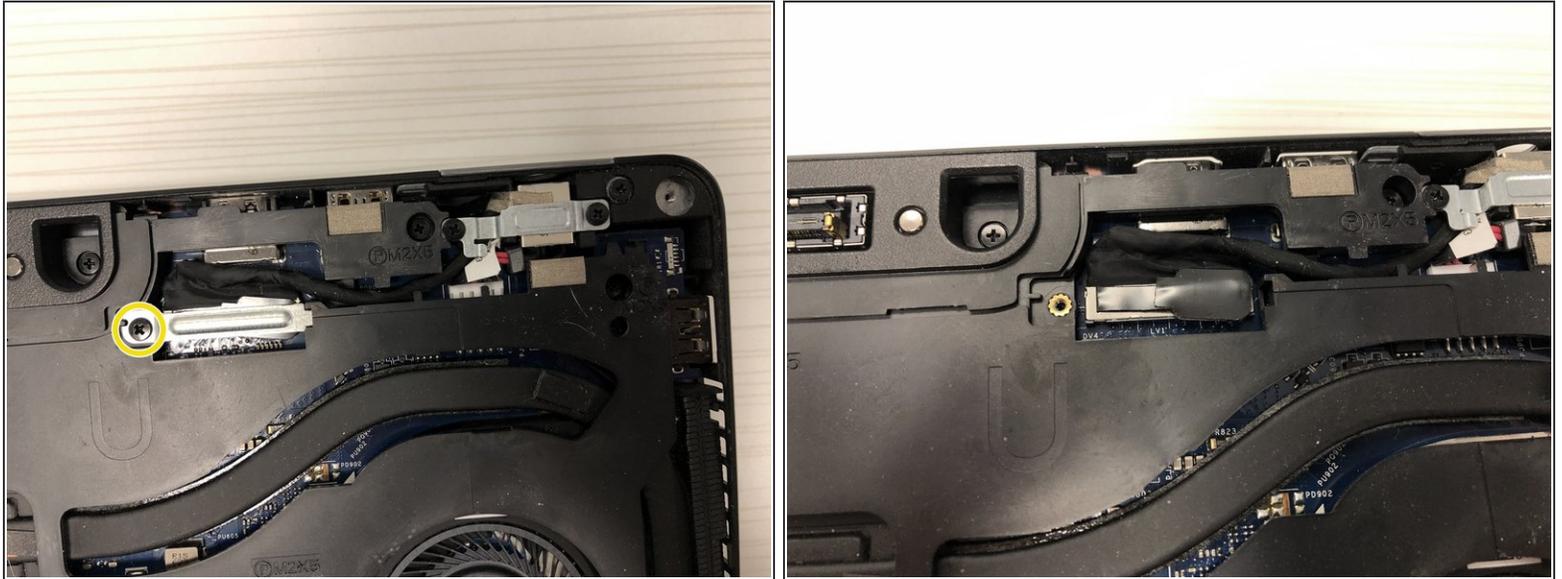

- Remove screw holding the metal plate in place.
- Remove metal plate
- Carefully pull on the tab to disconnect the display cable from the motherboard.

## Step 5 — Free display cables

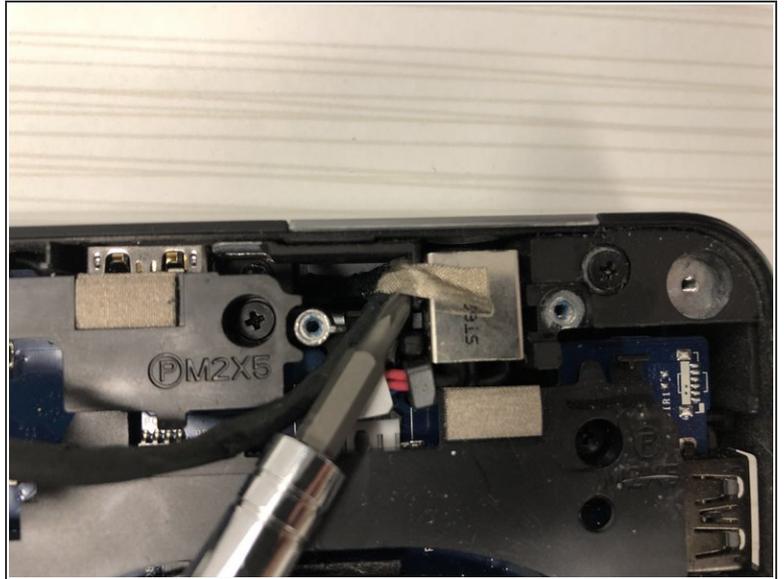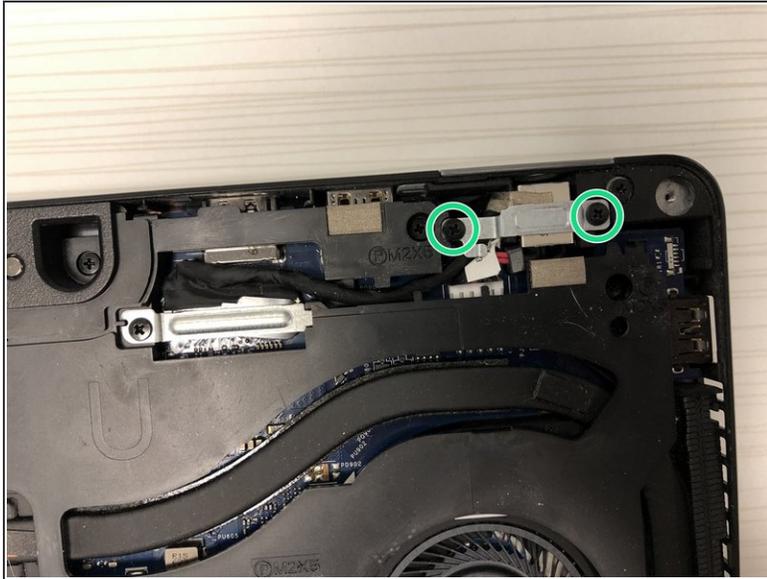

- Remove both screws holding the plate in place.
- Remove plate
- Remove tape holding the display cable to the laptop.
- Pull the cable free

## Step 6 — Remove hinge covers



- Remove both the screws and hinge covers on the back of the device.

## Step 7 — Remove display screws - Part 1



- Remove two screws from the bottom of the device

## Step 8 — Remove display screws - Part 2



- Remove screws underneath the hinge covers on the back of the device

## Step 9 — Remove display



- Carefully remove the display from its slots.
- Be mindful to feed the WiFi and Display cables through the holes.

## Step 10 — You are done!



- The display is now disconnected from the laptop.

To reassemble your device, follow these instructions in reverse order.