



LG K30 Front-Facing Camera Replacement

How to replace the front-facing camera for the LG K30 phone.

Written By: Alisha Lee



INTRODUCTION


This guide will show you the steps to replace the front-facing camera for the LG K30.

This is a relatively easy fix, but please be sure to go slow and steady when replacing the front-facing camera so that you do not accidentally tear any of the wires or damage the connecting points.

TOOLS:

- [Jimmy](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

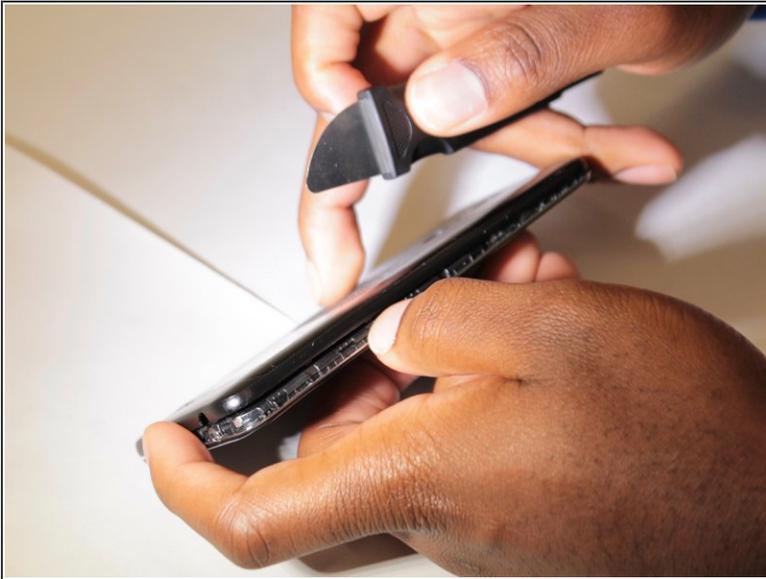

⚠ Before disassembling your LG K30, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your Phone before beginning disassembly.
- Use the 'Jimmy' and 'Metal Spudger' to slowly pry open the outsides of the back case.

Step 2



- Remove the thirteen 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

Step 3



- Use a metal spudger or plastic opening tool to pry open the outer cover.

Step 4



- Use the flat end of a spudger to detach the battery connector from the logic board.

Step 5



- Use a spudger to pry the battery from the phone.
- ⓘ There may be an adhesive on the back of the battery and the phone. Pry the battery gently to prevent puncture or damage.
- ⚠ Do not bend or puncture the battery.

Step 6 — Front-Facing Camera



- Use the plastic spudger to disconnect the cable connector.

Step 7



- Gently pry out the front-facing camera from the device.

To reassemble your device, follow these instructions in reverse order.