



ASUS F555UA-EH71 RAM Replacement

This guide will explain the process of installing more RAM, or replacing pre-existing RAM in your Asus F555UA-EH71.

Written By: Justin Nebel



INTRODUCTION

This guide will explain the process of installing more RAM, or replacing pre-existing RAM. The ASUS F555UA-EH71 includes 4gb of RAM soldered to the motherboard, along with a slot for additional memory located in the bottom of the device.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM



- Flip the laptop over to access the bottom side of the device. Remove the black Phillips #0 screw that holds the RAM access panel in place.
- ⓘ There may be a rubber cover on this screw that can be removed with an iFixit opening pick.
- Gently lift up on the side of the panel to remove it.

Step 2

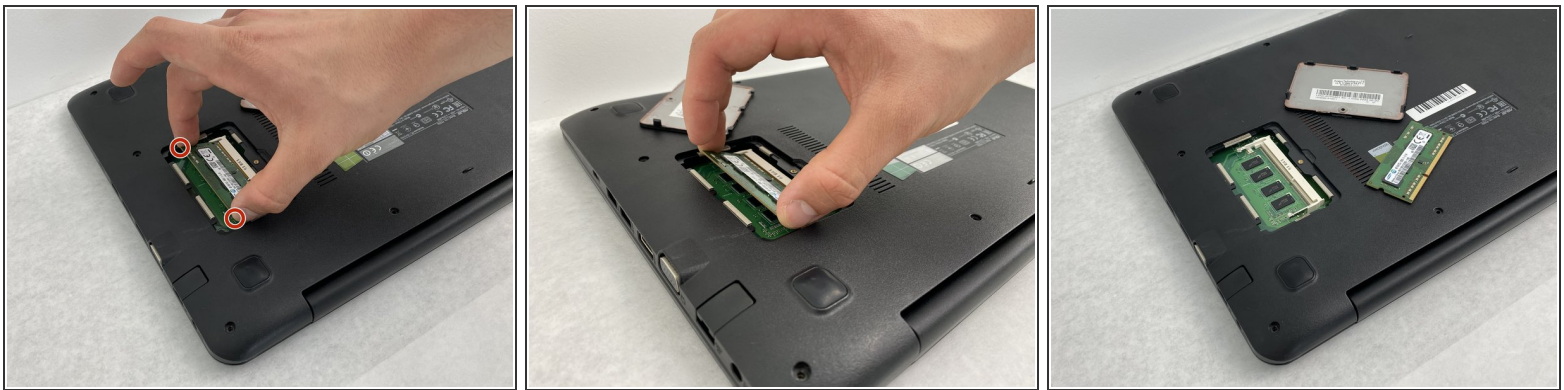

- Gently pull the retainers away from the RAM to remove it from the device.
- ⓘ Repeat this step for any additional sticks of RAM.

To reassemble your device, follow these instructions in reverse order.