




ASUS F555UA-EH71 Battery Replacement

This guide will detail the battery replacement process of the ASUS F555UA-EH71.

Written By: Jared Curtis

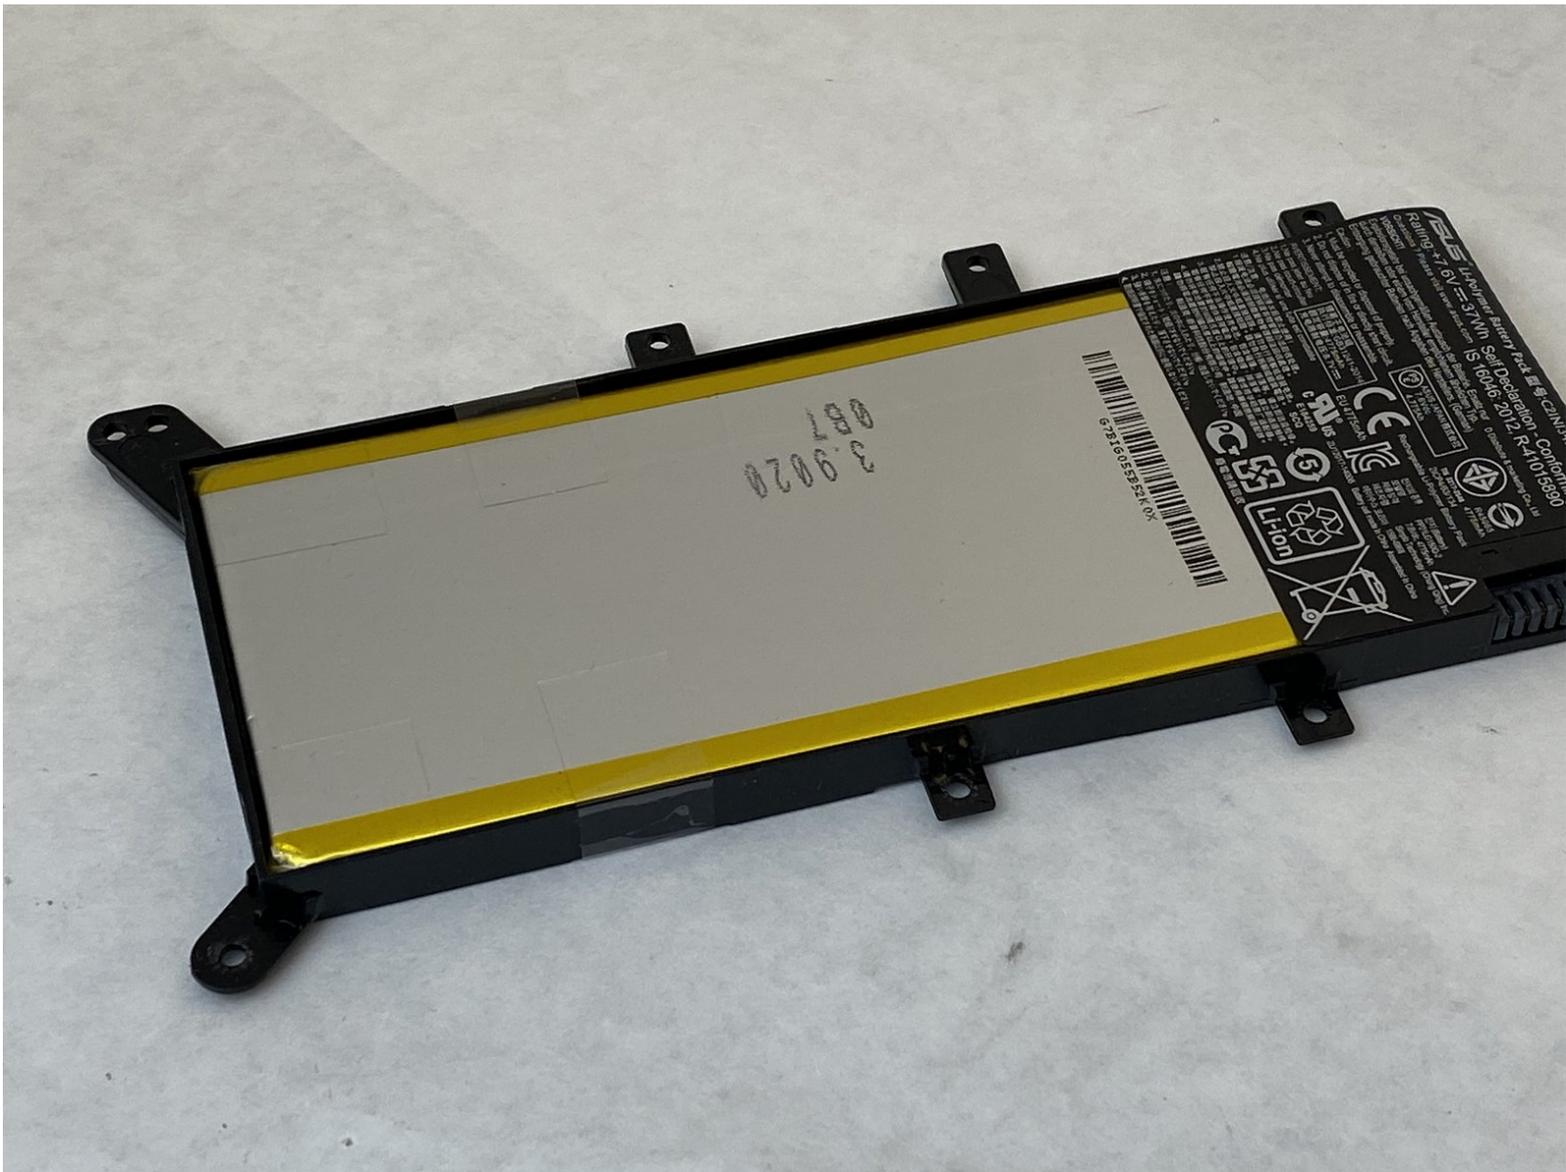

INTRODUCTION

This guide will explain the process of installing a new battery, or replacing an existing one. The ASUS F555UA-EH71 comes with a 14.8V 38Wh Li-ion battery.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:


- [Asus C21N1347 Replacement Battery](#) (1)

Step 1 — Keyboard Panel



- Remove the ten 18 mm screws holding down the outer shell of the laptop using the Phillips #000 screwdriver.

Step 2

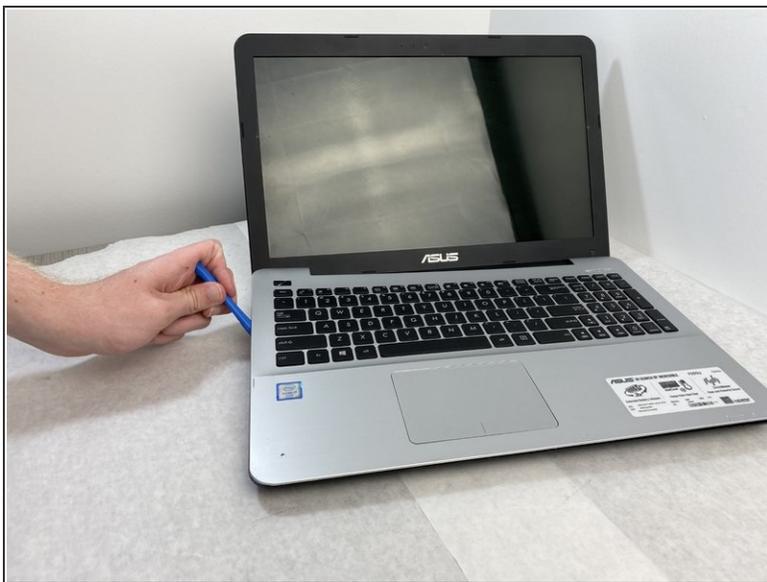

- Use your fingers to gently pry open the gap between the silver and black parts of the casing.
 - Separate the keyboard panel from the body of the laptop by wedging the iFixit Opening Tool in between the keyboard panel and the body.
- i** The teeth of the casing should make a clicking noise as they're pulled apart.


This document was generated on 2021-02-05 11:55:11 AM (MST).

Step 3



- Gently open the casing until the white, silver, and gold power strips are visible. Gently peel the strips from the bottom side of the laptop.
- Disconnect the two cables connecting the keyboard panel to the laptop.

Step 4

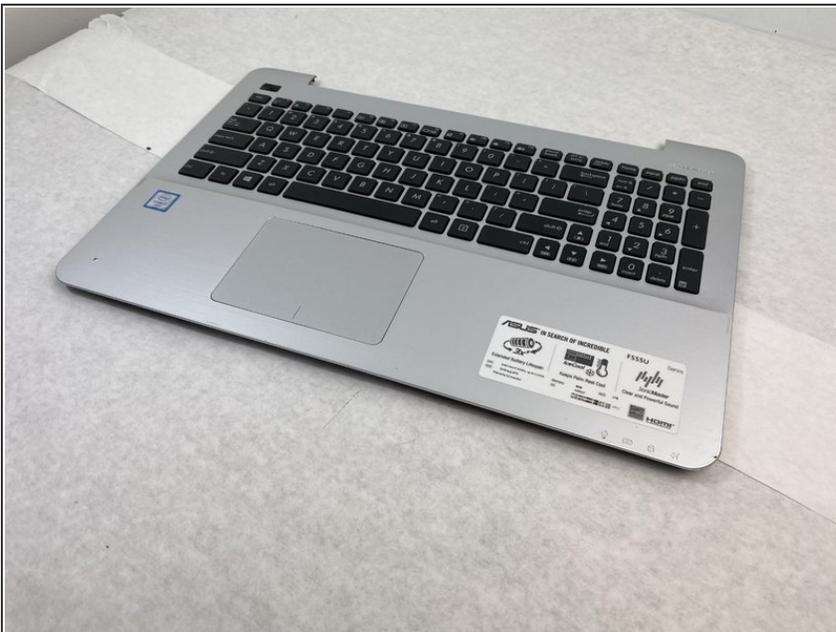

- Remove the keyboard panel from the laptop.

Step 5 — Battery



- Use the Phillips #000 screwdriver to remove the eight 4 mm screws holding the battery in place.

Step 6



- Carefully remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.