



Acer Spin 5 N17W2 Screen Assembly Replacement

This technical guide provides a step-by-step...

Written By: YUJIE WANG



INTRODUCTION


This technical guide provides a step-by-step process for replacing the screen assembly of an Acer Spin 5 N17W2 laptop. The Acer Spin 5 N17W2 is a popular convertible laptop that features a touchscreen display, making it a great device for both productivity and entertainment. However, if the screen becomes damaged or stops working, it can be a frustrating issue to deal with. With this guide, you'll be able to replace the screen yourself, saving you time and money compared to taking it to a repair shop. The guide includes detailed instructions, helpful tips, and recommended tools to ensure a successful screen replacement.

TOOLS:

[Phillips #1 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Screen Assembly

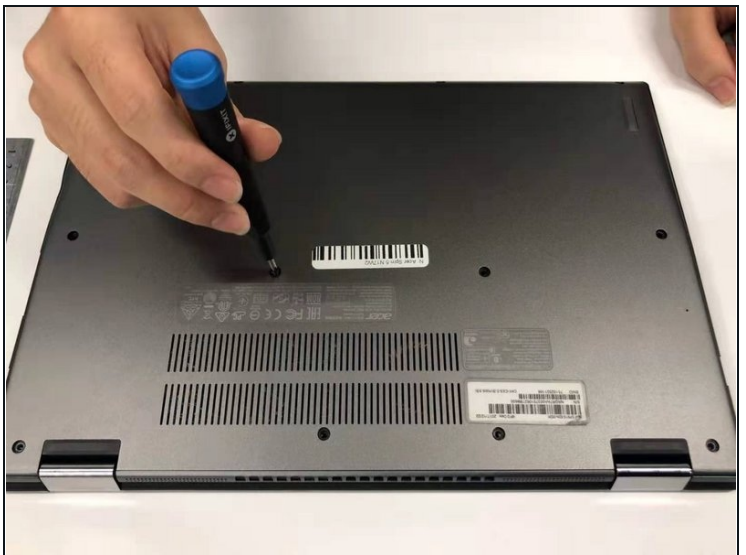


- Use the Phillips #1 screwdriver to remove the six 6mm screws.
- Use Phillips #1 screwdriver to remove six 5mm screws.

Step 2

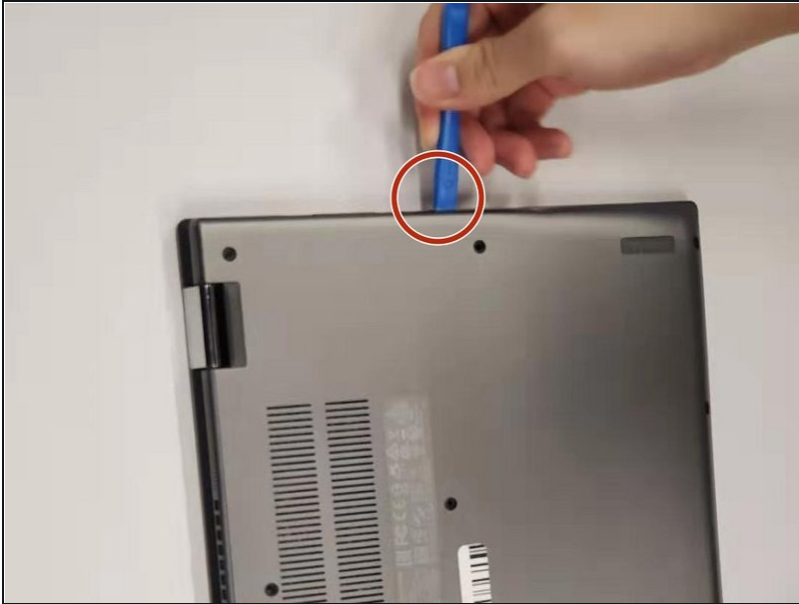


- Use an opening tool to pry the back cover open.

Step 3

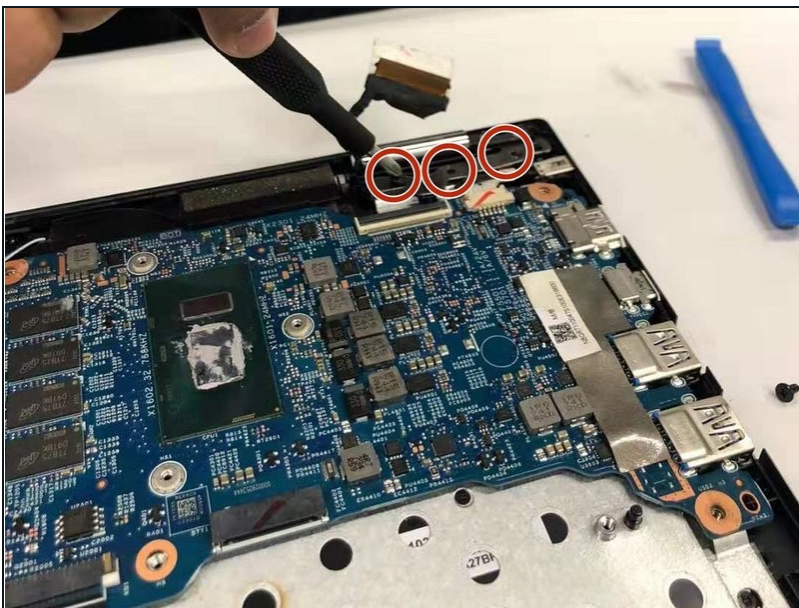


- Use the Phillips #1 screwdriver to remove the three 5mm screws.
- Use the Phillips #1 screwdriver to remove the three 5mm screws on another side of hinge.

Step 4

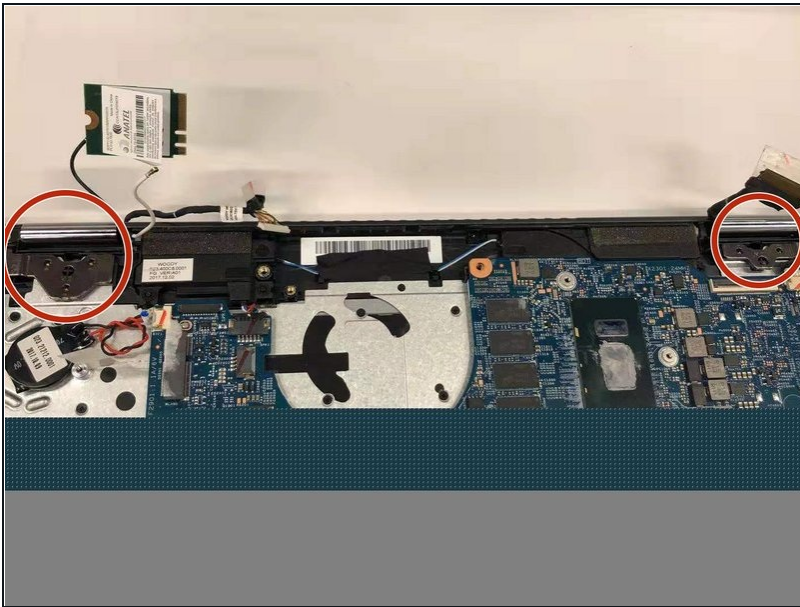


- Disconnect chips from the two end side of hinge.

Step 5

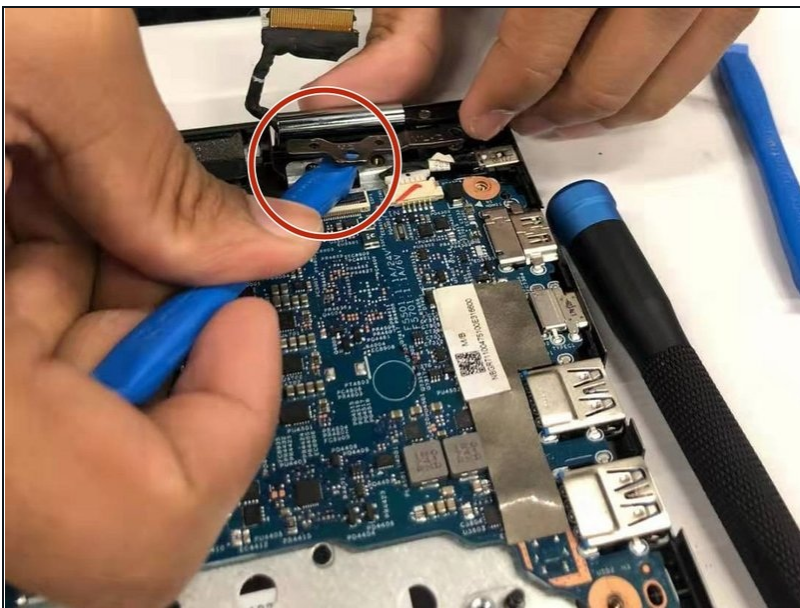


- Use the plastic opening tool to pry the hinge up.

Step 6

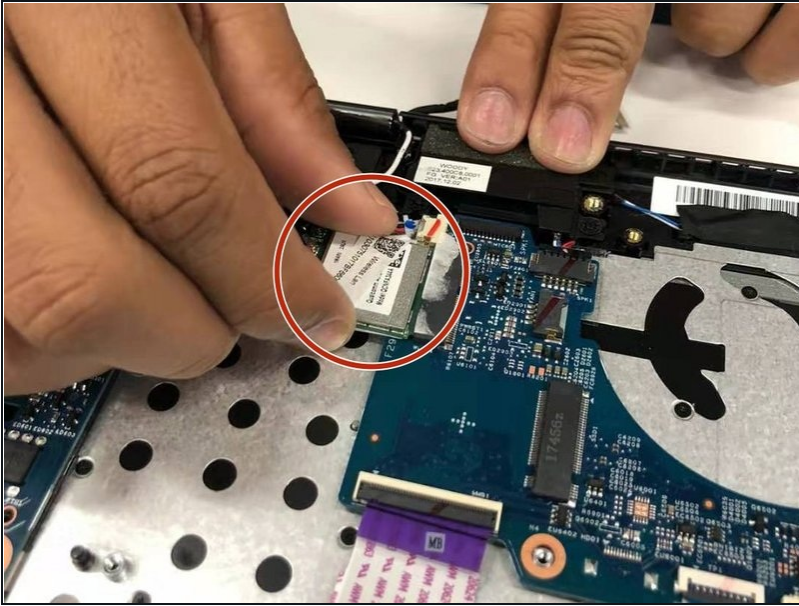

- Remove the wireless LAN chip from the motherboard.

Step 7

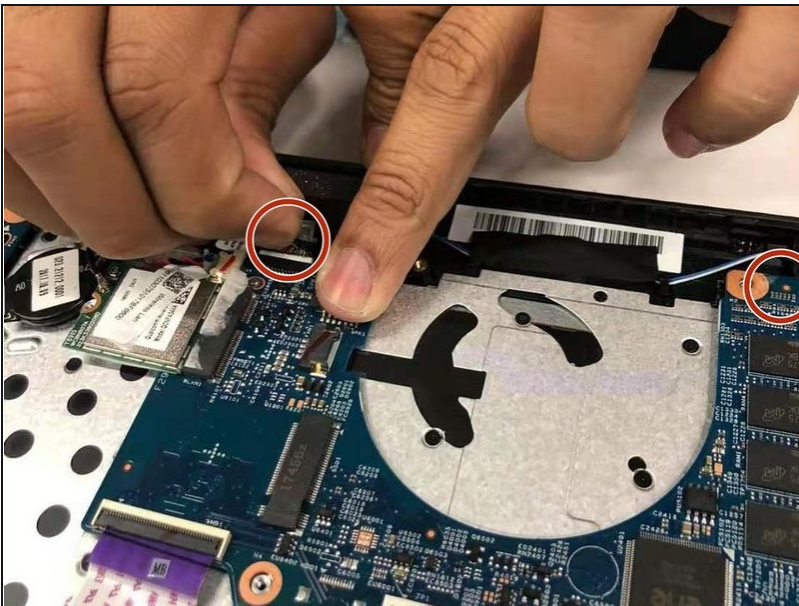

- Detach the sensors on each side of the hinge from the motherboard.

Step 8



- Detach the screen assembly from the device.

To reassemble your device, follow these instructions in reverse order.