



Microsoft Surface RT Kick-stand Replacement

Use this guide to replace the kickstand for...

Written By: Kevin Hua



INTRODUCTION

Use this guide to replace the kickstand for your Surface RT.

TOOLS:

T5 Torx Screwdriver (1)

PARTS:

Microsoft Surface RT (1st Gen) Kickstand (1)

Step 1 — Kick-stand



- Turn the tablet over so the screen is facing down.
- Pull up on the bottom corners to open the stand.
- Remove the stand by unscrewing the two 5.08mm T5 Torx screws located on the left and right sides.
- Gently wiggle the stand until the lever in the middle is free, releasing the stand.

To reassemble your device, follow these instructions in reverse order.