



LG VX5300 outer LCD screen replacement

Written By: Ashley



TOOLS:

iFixit Opening Tool (1)

Phillips #00 Screwdriver (1)

Tweezers (1)

Step 1 — Front LCD Screen



- Remove the rubber stoppers from the four corners of the front screen.

Step 2




- Using the Phillips screwdriver, carefully remove all four screws.

Step 3




- To pry open the face plate, place the iFixit Opener tool in the crease of the phone.

Step 4 — LCD Screen

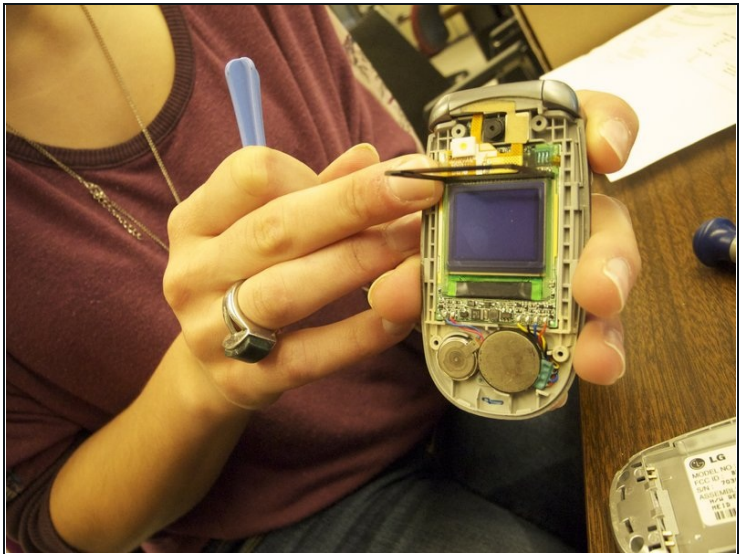


- Carefully lift off the black frame around the LCD screen and set it aside.

Step 5

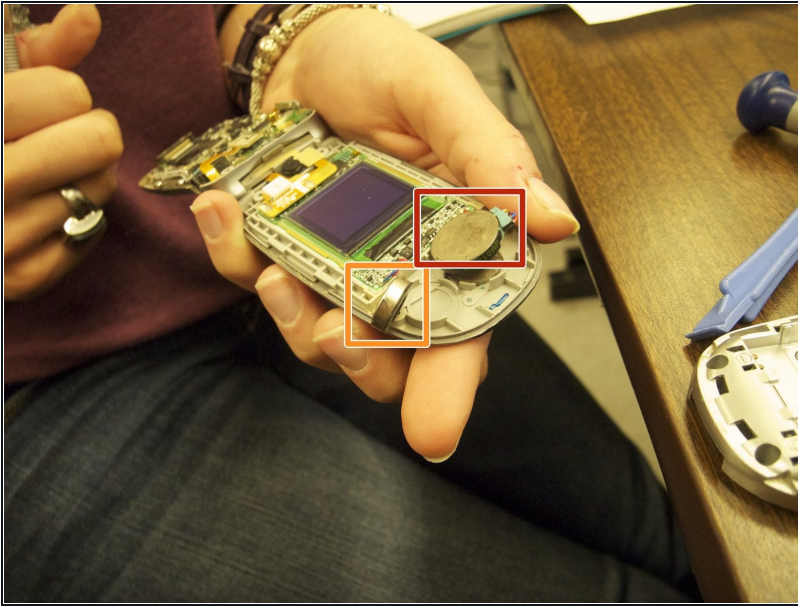


- Lift the speaker out by using [tweezers](#).
- Next, lift the battery out using the tweezers.

Step 6

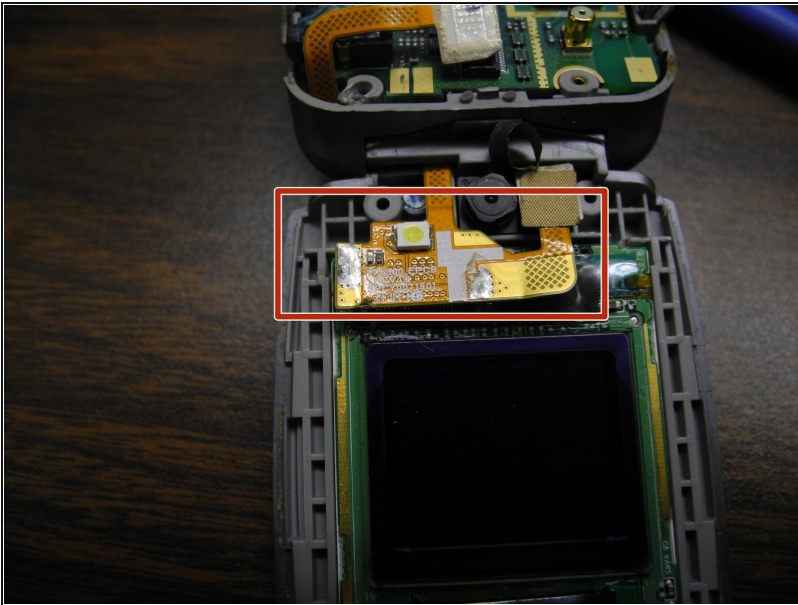

- Using tweezers, carefully disconnect the orange ribbon from the computer chip.

Step 7

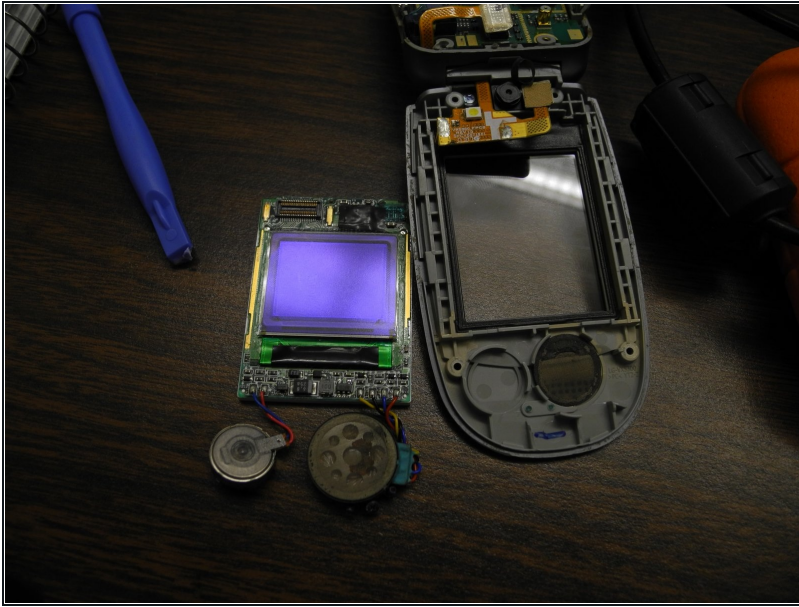

- Remove the LCD screen and replace with a new one.
- Finally, replace the battery and the speaker.

To reassemble your device, follow these instructions in reverse order.