

Lenovo IdeaPad Flex 5-1470 SSD Replacement

If you want to upgrade the SSD card in your...

Written By: Lexie Sakoda



INTRODUCTION

If you want to <u>upgrade the SSD</u> card in your Lenovo IdeaPad Flex 5-1470, use this guide to replace the SSD card. The SSD card in the Lenovo IdeaPad Flex 5-1470 is connected to the device's motherboard.

Before replacing the SSD in your Lenovo IdeaPad Flex 5-1470, research which SSD cards are <u>compatible</u> with the device.

The only step to do before removing the SSD card is to remove the device's back panel.


F TOOLS:	DARTS:	
Phillips #00 Screwdriver (1) iFixit Opening Tool (1)	Crucial P3 NVMe PCIe M.2 2280SS SSD (1) Crucial P3 Plus NVMe PCIe M.2 2280SS SSD (1) Crucial P5 Plus PCIe M.2 2280SS SSD (1)	

	0
0	

Step 1 — Back Panel

• Remove all ten 6.6 mm screws with a Phillips #00 screwdriver.

Step 2

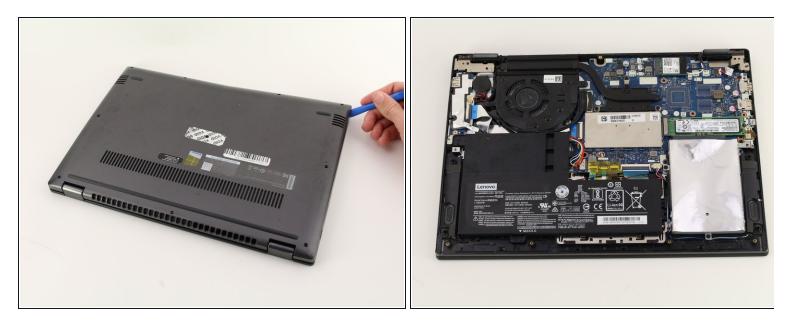

• Use the plastic opening tool to lift up and remove the casing.

Step 3 — SSD



- Remove the single 3.6 mm screw using a Phillips #00 screwdriver.
 - *i* The SSD will pop up on its own after removing the screw.

To reassemble your device, follow these instructions in reverse order.