




# HP Pavilion 15-ba003ds RAM Replacement

How to replace an HP Pavilion 15-ba003ds RAM.

Written By: Krushnam Badami

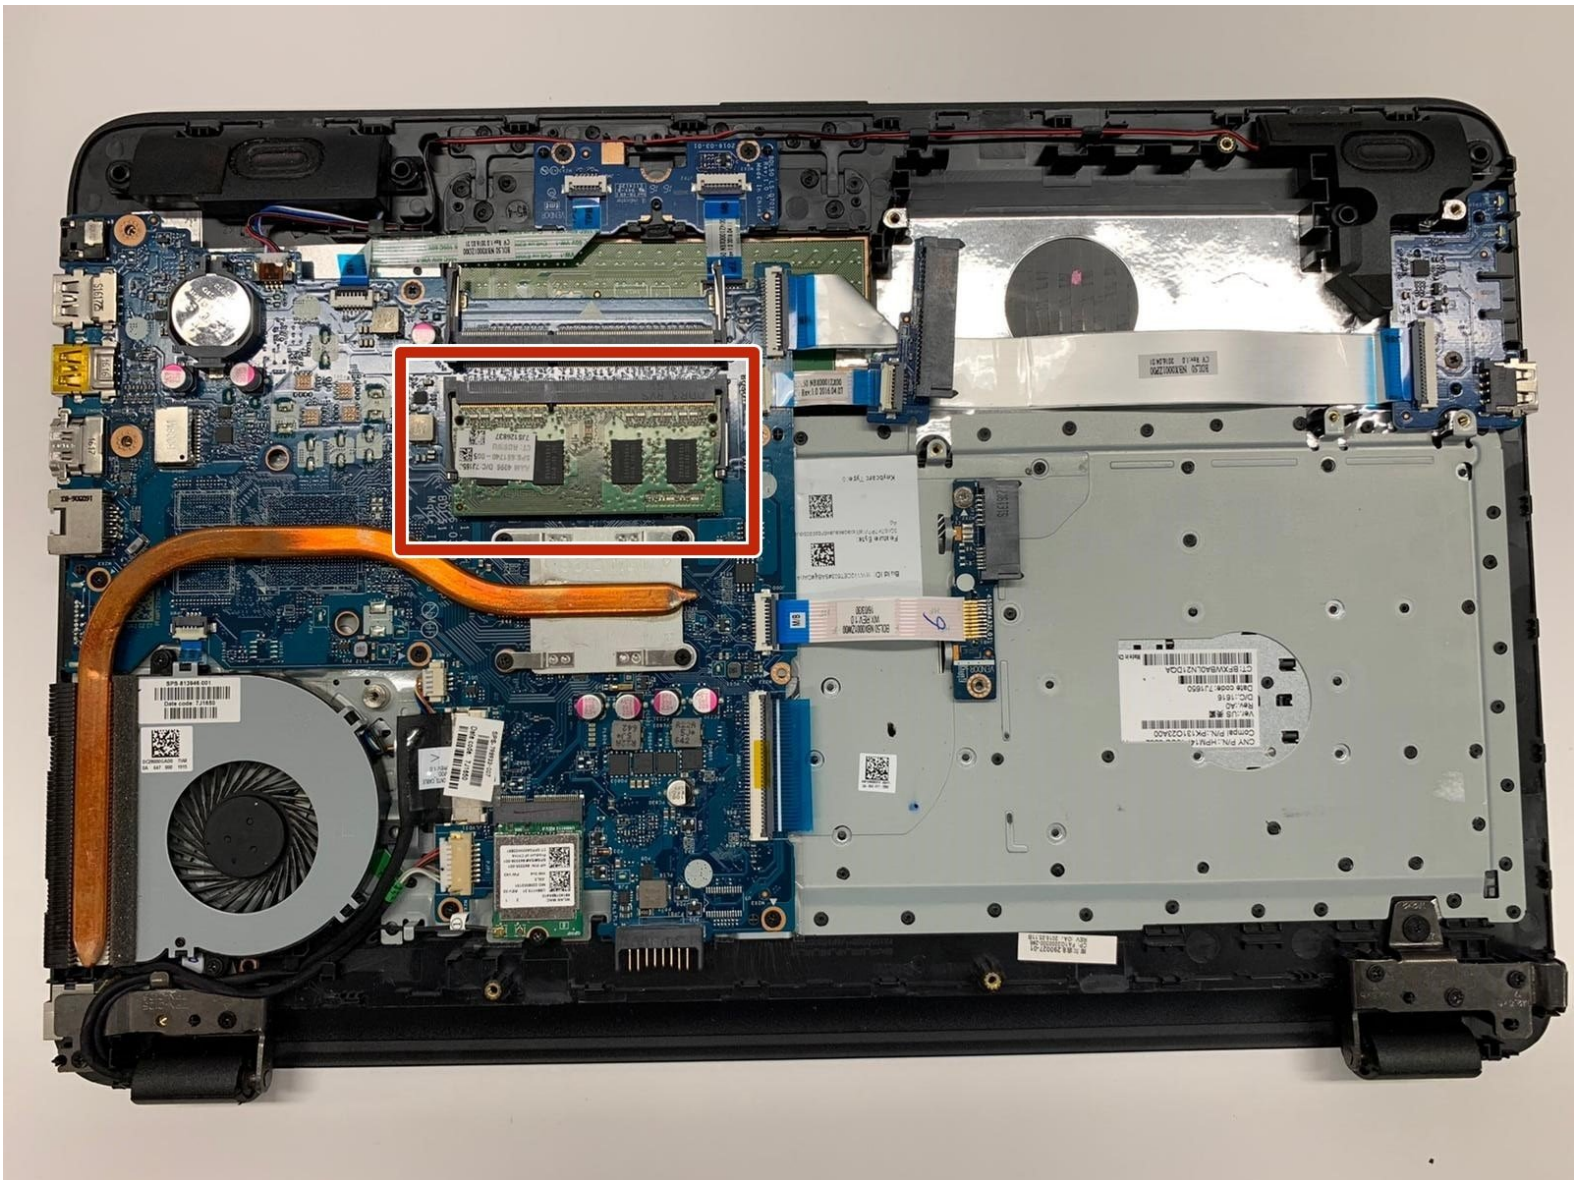

## INTRODUCTION

This guide will detail how to replace the RAM modules in your HP Pavilion 15-ba003ds. You can use this guide if you're having troubles with RAM, would like to upgrade the amount of RAM in your system, or have problems with blue screens as your RAM modules may be faulty.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Jimmy](#) (1)
-

## Step 1 — Battery



- Unplug the AC adapter from the corresponding socket in the laptop.
- ⚠ Turn off your laptop before starting this procedure. Make sure it's not in sleep or hibernation mode.
- Use your fingers to push the slider located just under the battery on either side to unlock the battery from the laptop.
- Carefully slide the battery out of the laptop frame and place it somewhere safe.




## Step 2 — Disc Drive




- Remove the two rubber feet next to the battery.

## Step 3

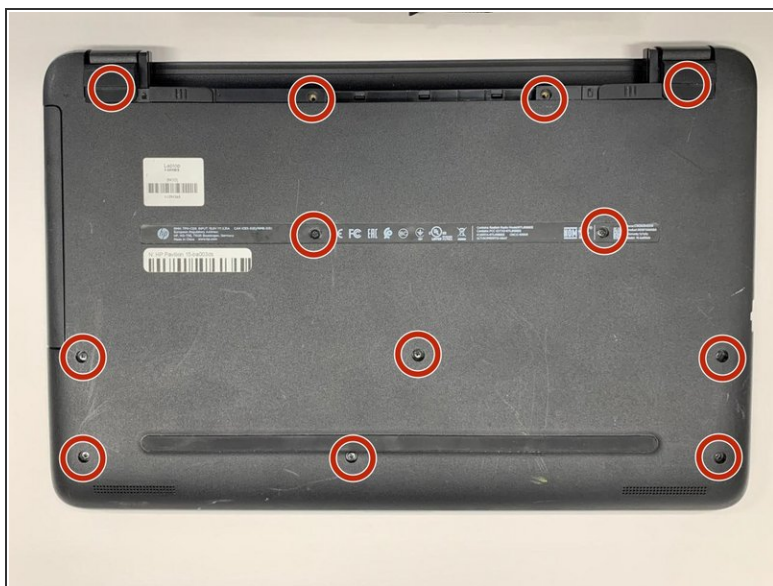


- Remove twelve 8mm Phillips #00 screws including two underneath the rubber feet.

## Step 4

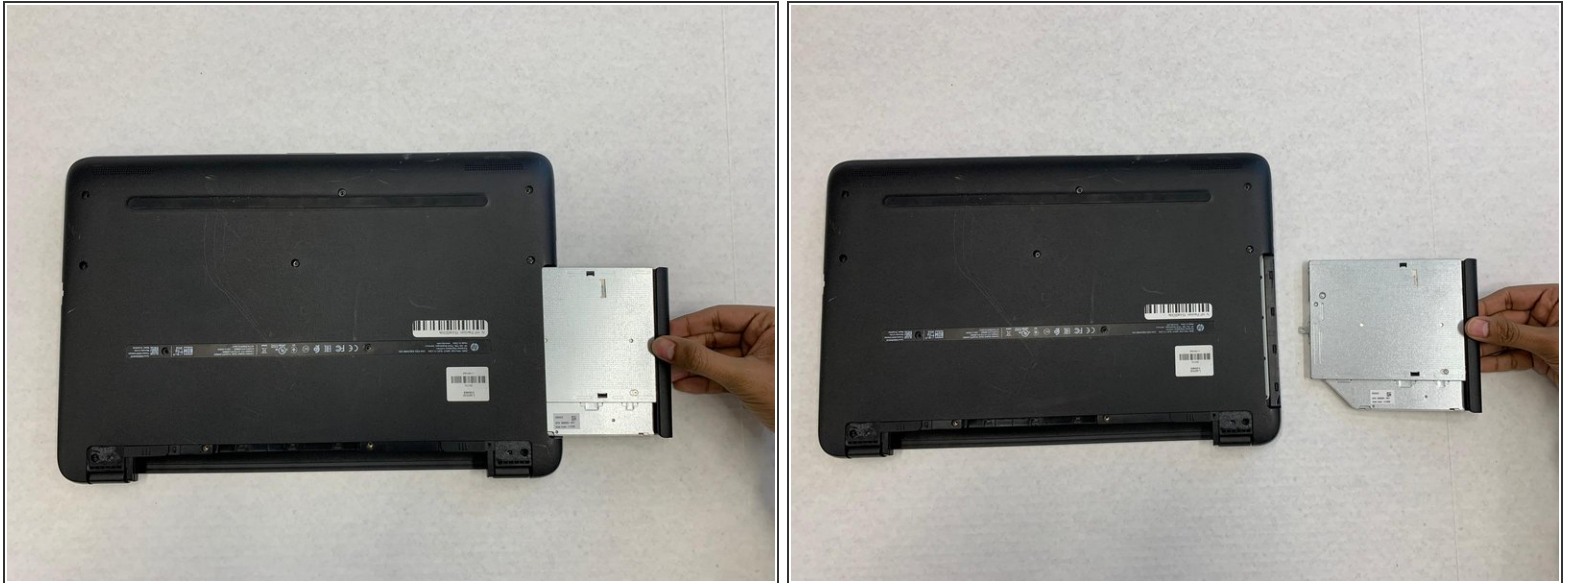

- Pull out the disc drive by hand.


## Step 5 — Backplate

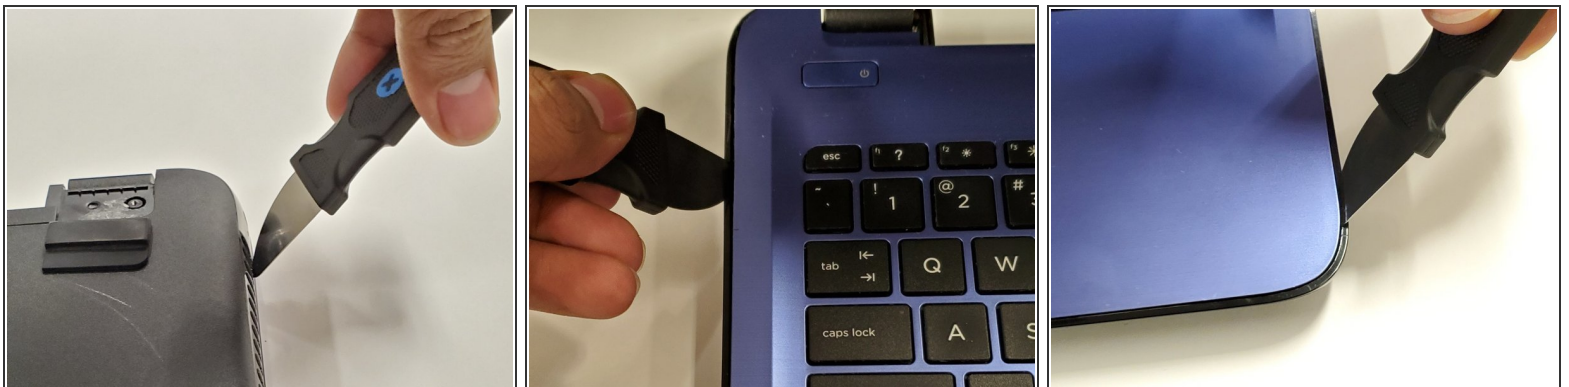

- Use a Jimmy to pry off the black backplate.



## Step 6 — RAM Module

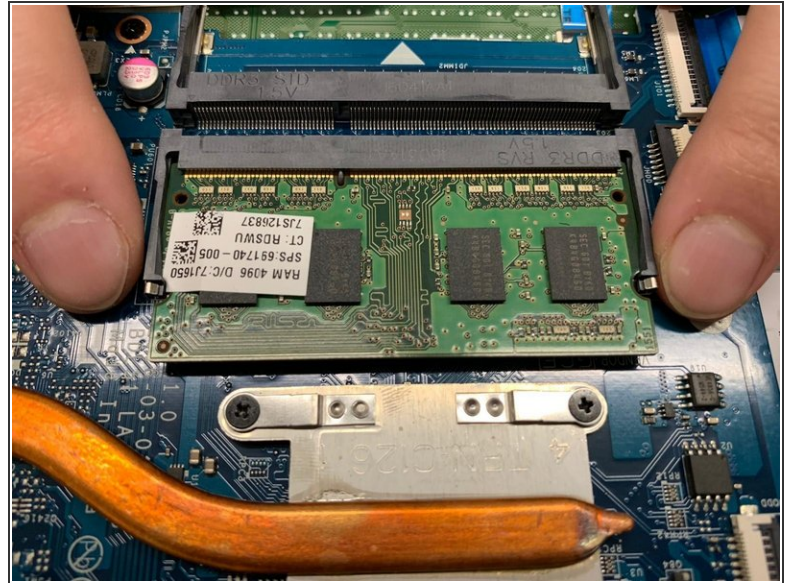

- To release the RAM, hold and pull the strips outwards on either side of the RAM.

To reassemble your device, follow these instructions in reverse order.