



Sony DSC-RX10M3 Battery Replacement

How to replace a Sony DSC-RX10M3 battery.

Written By: Soren Caraan



INTRODUCTION

Batteries wear down overtime. If your device's battery has a short life span, cannot hold a charge, or is damaged, replacing the device's battery is a good solution. This guide will help you to remove the battery from the Sony DSC-RX10M3.



PARTS:

- [Sony NP-FW50 Rechargeable Battery](#) (1)
 - [Sony BC-TRW Charger](#) (1)
-

Step 1 — Battery Replacement



- Turn off the Device by scrolling the tab to "OFF" indicated by the arrow.

Step 2



- Remove the battery located at the bottom of the device.

To reassemble your device, follow these instructions in reverse order.