



Panasonic Lumix DMC-ZS60 Battery Replacement

This guide will explain how to replace the battery in the Panasonic Lumix DMC-ZS60.

Written By: Jade Blackert



INTRODUCTION

If your Panasonic Lumix DMC-ZS60 is experiencing battery troubles, like not turning on or holding charge, you may need to replace it. Follow this guide in order to replace your battery.

A functional battery allows the user to take pictures and enjoy their camera to the fullest without worrying about it dying unexpectedly. A battery will begin to lose its charging capacity after going through a few charging cycles. If you experience this problem, it's time to get a new battery.

Ensure your device is powered off before attempting to remove the battery.

Step 1 — Battery



- Use your finger to slide the black latch from the locked position to the open position on the memory card/battery door. This will open the door of the camera.

Step 2



- Push up the black tab on the right-hand-side to spring release the battery.

Step 3



- Remove the battery by sliding it out from the camera.

To reassemble your device, follow these instructions in reverse order.