



# Dell Latitude E6530 RAM Replacement

How to replace or upgrade the RAM of a Dell Latitude E6530.

Written By: Elias Linsin



---

## INTRODUCTION

This guide will walk users through on how to replace or upgrade the RAM of a Dell Latitude E6530.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-





## Step 1 — RAM



- Remove the four screws to remove the back panel using the Phillips #00 screwdriver.

## Step 2

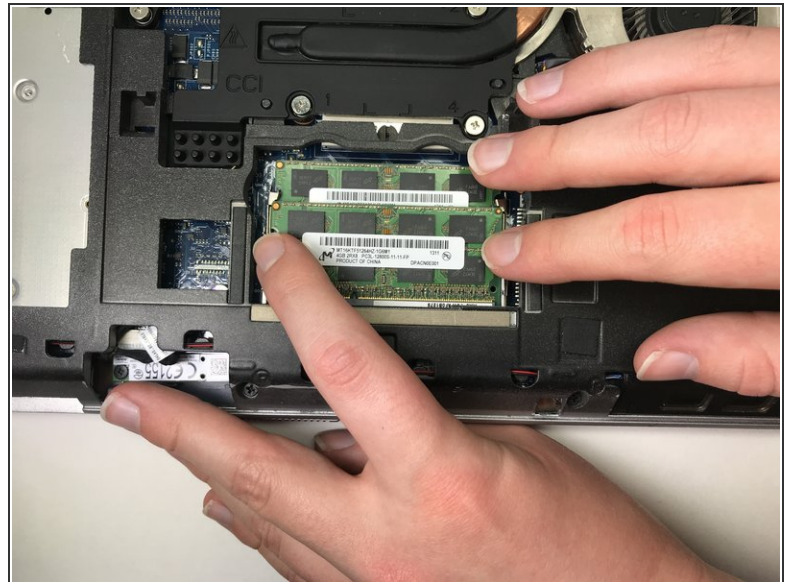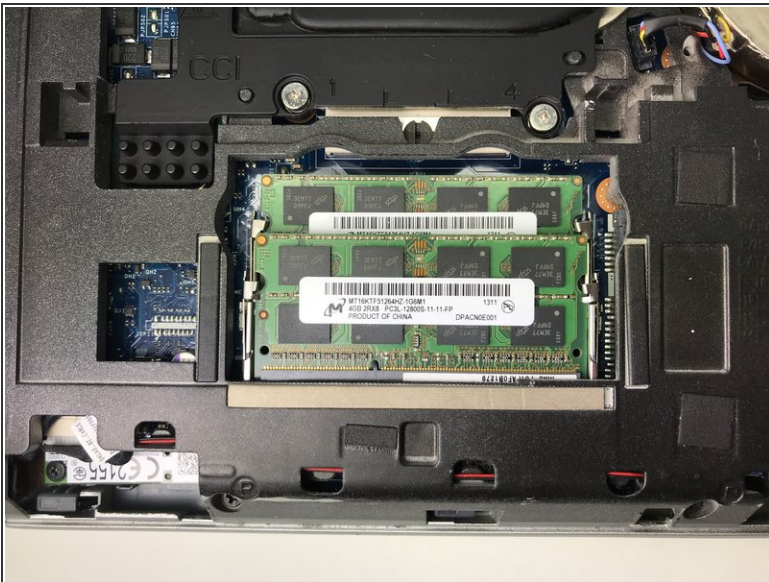

- Remove the RAM by carefully pulling apart the metal pins on each side.
- ⓘ You do not need to force the holders open, it should click and the chip will pop upwards.

To reassemble your device, follow these instructions in reverse order.